



# Fischer Panda®

Power  
wherever  
you are™



## Marine Generator Manual

Panda 4K PMS / Panda 5K PMS / Panda 7K PMS

230 V/50 Hz 120 V/60 Hz 240 V/60 Hz

Super silent technology

Panda\_4K-5K\_PMS\_eng.R04

22.10.19



## Current revision status

	Document
Actual:	Panda_4K-5K_PMS_eng.R04_22.10.19
Replace:	Panda_4K-5K_PMS_eng.R03.3

Revision	Page
Handbuch neu aufgebaut R01	
Panda 4000 PMS eingefügt	
Titel Panda 4K umbenannt in 4mini - Handbuch umbenannt	
Titel in Panda 4K für 120 V und 230 V umbenannt R02.2	
Erweiterung auf Panda 5K PMS	
240 V/60 Hz eingepflegt R03.1	
allgemeines update R03.2	
Troubleshooting berichtigt R03.3	
P7K eingepflegt R04	

### Erstellt durch / created by

Fischer Panda GmbH - Leiter Technische Dokumentation

Otto-Hahn-Str. 32-34

33104 Paderborn - Germany

Tel.: +49 (0) 5254-9202-0

email: [info@fischerpanda.de](mailto:info@fischerpanda.de)

web: [www.fischerpanda.de](http://www.fischerpanda.de)

### Copyright

**Duplication and change of the manual is permitted only in consultation with the manufacturer!**

Fischer Panda GmbH, 33104 Paderborn, reserves all rights regarding text and graphics. Details are given to the best of our knowledge. No liability is accepted for correctness. Technical modifications for improving the product without previous notice may be undertaken without notice. Before installation, it must be ensured that the pictures, diagrams and related material are applicable to the genset supplied. Enquiries must be made in case of doubt.



**Fischer Panda GmbH**  
 Otto-Hahn-Str. 40  
 D-33104 Paderborn  
 Germany

Tel. : +49 (0)5254 9202-0  
 Fax. : +49 (0)5254 9202-550  
 Hotline : +49 (0)5254 9202-767  
 Email : [info@fischerpanda.de](mailto:info@fischerpanda.de)  
 Web : [www.fischerpanda.de](http://www.fischerpanda.de)



## 1.1 Download

---

---



Weitere verfügbare Sprachen dieses Handbuches können unter dem unten angegebenen Link heruntergeladen werden.



Other available languages of this manual can be downloaded under the link below.



Vous trouvez d'autres langues disponibles de ce manuel en suivant le lien ci-dessous:



Otros idiomas disponibles en este manual se pueden descargar en el link de abajo:



本手册的其他语言版本可从以下链接下载：

[http://www.fischerpanda.de/gensetdocs\\_eng.htm](http://www.fischerpanda.de/gensetdocs_eng.htm)



# Inhalt / Contents

<b>Marine Generator Manual</b> .....	<b>1</b>
<b>Current revision status</b> .....	<b>2</b>
<p><b>Fischer Panda GmbH, 33104 Paderborn, reserves all rights regarding text and graphics. Details are given to the best of our knowledge. No liability is accepted for correctness. Technical modifications for improving the product without previous notice may be undertaken without notice. Before installation, it must be ensured that the pictures, diagrams and related material are applicable to the genset supplied. Enquiries must be made in case of doubt.</b> .....</p>	
1.1 Download .....	3
<b>3 In case of Emergency First Aid / Im Notfall - Erste Hilfe</b> .....	<b>11</b>
3.1 WHEN AN ADULT STOPS BREATHING .....	12
<b>1 General Instructions and Regulations</b> .....	<b>14</b>
1.1 Safety first! .....	14
1.2 Tools .....	16
1.3 Manufacturer declaration in accordance with the Machinery Directive 2006/42/EC .....	18
1.4 Customer registration and guarantee .....	19
1.4.1 Technical support .....	19
1.4.2 Caution, important information for start-up! .....	19
1.5 Safety Instructions - Safety First! .....	20
1.5.1 Safe operation .....	20
1.5.2 Observe safety instructions! .....	20
1.5.3 Personal protective clothing (PPE) .....	20
1.5.4 Cleanliness ensures safety .....	20
1.5.5 Safe handling of fuels and lubricants .....	21
1.5.6 Exhaust fumes and fire protection .....	21
1.5.7 Safety precautions against burns and battery explosions .....	22
1.5.8 Protect your hands and body from rotating parts! .....	22
1.5.9 Anti-freeze and disposal of fluids .....	22
1.5.10 Implementation of safety inspections and maintenance .....	23
1.6 Warning and instruction signs .....	23
1.6.1 Special instructions and hazards of generators .....	23
1.6.1.1 Protective conductor and potential equalisation: .....	24
1.6.1.2 Protective conductor for Panda AC generators: .....	24
1.6.1.3 Switch off all loads while working on the generator .....	24
1.6.1.4 Potential equalisation for Panda AGT DC generators .....	24
1.6.1.5 Safety instructions concerning cables .....	25
1.6.2 General safety instructions for handling batteries .....	25
<b>2 Basics</b> .....	<b>27</b>
2.1 Intended use of the machine .....	27
2.1.1 Purpose of the manual and description of the definitions trained person/operator/user .....	27
2.1.1.1 Trained persons .....	27
2.1.2 Operator .....	27
2.1.2.1 User .....	27
2.2 Panda Transport Box .....	28
2.2.1 Bolted Fischer Panda Transport Box .....	28
2.2.2 Fischer Panda Transport Box with metal tab closure .....	28
2.3 Transport and Loading/Unloading .....	28
2.3.1 Transporting the generator .....	28

## Inhalt / Contents

2.3.2	Loading/unloading of the generator .....	28
2.4	Scope of delivery .....	29
2.4.1	Asynchronous Generator: .....	29
2.4.2	Opening the MPL sound insulation capsule .....	31
2.4.3	Opening the GFK sound insulation capsule .....	32
2.5	Special maintenance notes and arrangements at long periods of stand still time or shutdown.....	32
2.5.1	Reference note for the starter battery at a long-term standstill .....	33
2.5.2	Arrangements at a short-term standstill .....	33
2.5.3	Arrangements at a medium-term standstill / winter storage .....	33
2.5.3.1	Arrangements for conservation: .....	33
2.5.3.2	Arrangements for deconservation after a medium-term standstill (3 to 6 months). .....	34
2.5.4	Arrangements at a long-term standstill / shutdown .....	35
2.5.4.1	Arrangements for conservation: .....	35
2.5.4.2	Arrangements after a long-term standstill (shutdown) / recommissioning (more than 6 months): .....	36
<b>3</b>	<b>The Panda Generator .....</b>	<b>37</b>
3.1	Type plate at the Generator .....	37
3.2	Description of the Generator .....	38
3.2.1	Right side view - Panda 4K PMS .....	38
3.2.2	Left side view - Panda 4K PMS .....	39
3.2.3	Front view - Panda 4K PMS .....	40
3.2.4	Back view - Panda 4K PMS .....	41
3.2.5	View from above - Panda 4K PMS .....	42
3.2.6	Right side view - Panda 5K PMS .....	43
3.2.7	Left side view - Panda 5K PMS .....	44
3.2.8	Front view - Panda 5K PMS .....	45
3.2.9	Back view - Panda 5K PMS .....	46
3.2.10	View from above - Panda 5K PMS .....	47
3.2.11	Right side view - Panda 7K PMS .....	48
3.2.12	Left side view - Panda 7K PMS .....	49
3.2.13	Front view - Panda 7K PMS .....	50
3.2.14	Back view - Panda 7K PMS .....	51
3.3	Details of functional units .....	52
3.3.1	Control panel .....	52
3.3.2	Components of cooling water system (raw water + fresh water) .....	53
3.3.3	The fuel and combustion air system .....	54
3.3.4	Sensors and switches for operation surveillance .....	55
3.3.5	The lubrication circuit .....	56
<b>4</b>	<b>Generator operation instruction .....</b>	<b>57</b>
4.1	Personal requirements .....	57
4.1.1	Hazard notes for the operation .....	57
4.2	General operating instruction .....	57
4.2.1	Operation at low temperatures .....	57
4.2.1.1	Pre-heating the diesel motor .....	58
4.2.1.2	Tips regarding starter battery .....	58
4.2.2	Light load operation and engine idle .....	58
4.2.2.1	The soot of the generator is due to the fact that: .....	58
4.2.2.2	To prevent the soot of the generator following steps should be observed: .....	58
4.2.3	Generator load for a longer period and overload .....	58

## Inhalt / Contents

4.2.4	Protection conductor: .....	59
4.2.5	Operating control system on the Fischer Panda generator .....	59
4.3	Instructions for capacitors - not present at all models .....	59
4.4	Checks before start, starting and stopping the generator .....	59
4.5	.....	60
<b>5</b>	<b>Installation Instructions .....</b>	<b>61</b>
5.1	Personal requirements.....	61
5.1.1	Hazard notes for the installation .....	61
5.2	Preparing the base - Placement .....	63
5.2.1	Advice for optimal sound insulation .....	63
5.3	Generator Connections.....	63
5.4	Installation of the cooling system - raw water .....	64
5.4.1	General Information .....	64
5.4.2	Installation of the through hull fitting in yachts .....	64
5.4.3	Quality of the Raw Water Sucking In Line .....	64
5.4.4	Generator installation above waterline .....	65
5.4.5	Generator Installation below waterline .....	66
5.4.6	Generator housing cooled by raw water .....	67
5.4.7	Indirect cooling of the genset housing (by the heat exchanger) .....	68
5.5	Installation of the cooling system - fresh water.....	68
5.5.1	Position of the external cooling water expansion tank .....	68
5.5.2	Ventilating at the first filling of the internal cooling water circuit .....	69
5.5.3	Pressure test for controlling the cooling water circuit .....	70
5.5.4	Scheme for freshwater circuit at two circuit cooling system .....	71
5.6	Installation of the water cooled exhaust system .....	72
5.6.1	Installation of the standard exhaust system .....	72
5.7	Installation of the waterlock .....	73
5.7.1	Possible cause for water in the exhaust hose .....	73
5.7.1.1	Possible cause: exhaust hose.....	73
5.7.1.2	Possible cause: cooling water hose .....	73
5.7.2	Installation area of the waterlock .....	74
5.7.3	The volume of the waterlock .....	74
5.7.3.1	Ideal position of the waterlock.....	75
5.7.3.2	Example of the installation of the waterlock off-center and possible effects: ... ..	76
5.8	Exhaust / water separator.....	77
5.8.1	Installation exhaust water separator .....	79
5.9	Installation of the fuel system .....	81
5.9.1	General references .....	81
5.9.2	The electrical fuel pump .....	81
5.9.3	Connection of the fuel lines at the tank .....	82
5.9.4	Position of the pre-filter with water separator .....	82
5.9.5	Ventilating air from the fuel system .....	82
5.10	Generator DC system installation .....	83
5.10.1	Connection of the starter battery block .....	83
5.10.2	Connection of the remote control panel - see separate control panel manual .....	86
5.11	Generator AC system installation .....	87
5.11.1	Insulation test .....	89



## Inhalt / Contents

<b>6</b>	<b>Maintenance Instructions</b> .....	<b>91</b>
6.1	Personal requirements .....	91
6.1.1	Hazard notes for the maintenance .....	91
6.2	Environmental protection .....	93
6.3	Maintenance interval .....	93
6.4	General maintenance instructions .....	93
6.4.1	Checks before each start .....	93
6.4.2	Check of Hoses and rubber parts in the sound insulated capsule .....	93
6.5	Oil change intervals .....	94
6.6	Checking oil-level .....	94
6.6.1	Refilling oil .....	95
6.6.2	After the oil level check and refilling the oil .....	95
6.7	Replacement of engine oil and engine oil filter .....	96
6.7.1	After the oil change .....	98
6.8	Verifying the starter battery and (if necessary) the battery bank.....	99
6.8.1	Battery .....	99
6.8.1.1	Check battery and cable connections .....	99
6.8.1.2	Check electrolyte level .....	99
6.8.1.3	Check electrolyte density .....	100
6.9	Ventilating the fuel system .....	100
6.9.1	Replacement of the fuel filter .....	102
6.9.1.1	Optional fuel filter with sight glass .....	102
6.10	Checking the water separator in the fuel supply .....	103
6.10.1	Replace the air filter mat .....	104
6.10.2	Alternative replacement of the air filter mat with pull out holder .....	104
6.10.3	Alternative replacement of the air filter at housing with snap fasteners .....	106
6.10.4	Ventilation of the coolant circuit / freshwater .....	107
6.11	V-belt replacement for the internal cooling water pump.....	109
6.12	The raw water circuit .....	111
6.12.1	Clean raw water filter .....	111
6.13	Causes with frequent impeller waste .....	111
6.13.1	Replacement of the impeller .....	112
6.13.2	Check and discharge the capacitors .....	113
6.14	Replacing the electric starter .....	116
6.15	Replacing the oil pressure switch .....	119
6.15.1	Replacing the oil pressure sensor (optional component) .....	120
6.16	Replacing the operating current relays .....	121
6.17	Replacing the fuses .....	121
6.18	Replacing a thermoswitch .....	123
6.19	Replacing the injection nozzles .....	125
6.20	Replacing the glow plugs .....	127
6.21	.....	130
<b>7</b>	<b>Generator Faults</b> .....	<b>131</b>
7.1	Personal requirements .....	131
7.2	Hazard notes for the troubleshooting .....	131



## Inhalt / Contents






7.3	Tools and measuring instruments .....	133
7.4	Troubleshooting table and flowchart .....	134
7.4.1	Generator output voltage too low .....	134
7.4.2	Generator voltage too high (more than 240 V - 50 Hz .....	134
7.4.3	Generator voltage fluctuates .....	134
7.4.4	Generator not able to start electric motor .....	134
7.4.5	Diesel motor fails to start .....	134
7.4.6	Starter is turning motor, but fails to start .....	134
7.4.7	Motor does not achieve enough speed during starting process .....	136
7.4.8	Motor runs unsteady .....	136
7.4.9	Motor speed drops .....	136
7.4.10	Motor runs in off position .....	136
7.4.11	Motor stops by itself .....	136
7.4.12	Sooty, black exhaust .....	137
7.4.13	Generator must be shut off immediately if: .....	137
7.4.14	Troubleshooting flowcharts .....	138
	7.4.14.1 Details and explanations concerning the troubleshooting flowchart .....	140
7.5	Overloading the generator .....	143
7.5.1	Monitoring the generator voltage .....	144
7.5.2	Automatic voltage monitoring and auto-shut down .....	144
7.6	Generator output voltage is too low .....	145
7.6.1	Discharging the capacitors .....	145
7.6.2	Checking the capacitors .....	146
	7.6.2.1 Checking the electrical connections to the capacitors .....	146
7.6.3	Check the generator voltage .....	146
7.6.4	Measuring the ohm resistance of the generator windings .....	147
7.6.5	Check the windings for short circuit .....	147
7.6.6	Measuring the inductive resistance .....	148
7.7	Generator provides no voltage .....	148
7.7.1	Rotor magnetism loss and „re-magnetising“ .....	148
7.8	Engine starting problems .....	149
7.8.1	Electric fuel solenoid valve .....	149
7.8.2	Re-start with failure bypass switch .....	149
7.8.3	Lifting solenoid for motor stop - optional .....	150
7.8.4	Troubleshooting table .....	151
<b>8</b>	<b>Tables.....</b>	<b>153</b>
8.1	Technical data .....	153
8.2	Fuel.....	153
8.3	Engine oil.....	153
8.3.1	Engine oil classification .....	153
	8.3.1.1 Operating range: .....	153
	8.3.1.2 Quality of oil: .....	153
8.4	Coolant specifications.....	154
8.4.1	Coolant mixture ratio .....	155
8.5	Diameter of conduits.....	155
8.6	.....	156
<b>9</b>	<b>Remote Control Panel P4 Control .....</b>	<b>157</b>

## Inhalt / Contents

9.1	Remote control panel .....	157
9.1.1	Cleaning and Replacing parts at the generator .....	158
9.2	Front side .....	159
9.2.1	Back side .....	159
9.3	Operation manual .....	160
9.3.1	Preliminary remarks .....	160
9.3.2	Override function .....	160
9.3.3	Daily routine checks before starting .....	160
9.3.4	Starting the generator .....	161
9.3.5	Stopping the generator .....	161
9.4	Installation of the panel .....	162
9.4.1	Connection of the remote control panel .....	162
9.5	Jumper configuration .....	164
9.5.1	Jumper configuration for the input .....	164
9.5.1.1	Jumper J101-J103.....	164
9.5.2	Jumper for configuration of the „Override“ time .....	165
9.6	Maximum ratings.....	165

### 3. In case of Emergency First Aid / Im Notfall - Erste Hilfe









	<p>First Aid in case of accidents by electrical shocks</p> <p>5 Safety steps to follow if someone is the victim of electrical shock</p>	
	Do not touch the injured person while the generator is running.	
	Switch off the generator immediately.	
	If you cannot switch off the generator, pull, push, or lift the person to safety using a wooden pole, rope or some nonconducting material.	
	Call an emergency doctor as soon as possible.	
	Immediately start necessary first aid procedures.	

### 3.1 WHEN AN ADULT STOPS BREATHING

**DO NOT attempt to perform the rescue breathing techniques provided on this page, unless certified. Performance of these techniques by uncertified personnel could result in further injury or death to the victim.**

**Warning:**

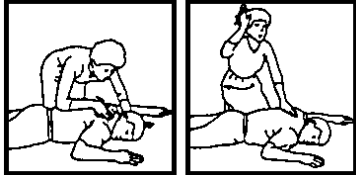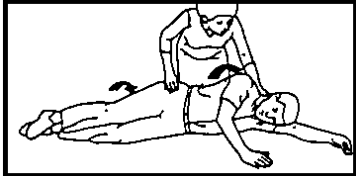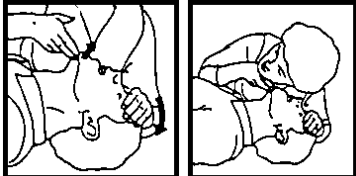

<p><b>1</b> Does the Person Respond? Tap or gently shake victim. Shout, "Are you OK?"</p>		<p><b>2</b> Shout, "Help!" Call people who can phone for help.</p>
<p><b>3</b> Roll Person onto Back. Roll victim towards you by pulling slowly.</p>		
<p><b>4</b> Open Airway. Tilt head back, and lift chin. Shout, "Are you OK?"</p>		<p><b>5</b> Check for Breathing. Look, listen, and feel for breathing for 3 to 5 seconds.</p>
<p><b>6</b> Give 2 Full Breaths. Keep head tilted back. Pinch nose shut. Seal your lips tight around victim's mouth. Give 2 full breaths for 1 to 1½ seconds each.</p>		
<p><b>7</b> Check for Pulse at side of Neck. Feel for pulse for 5 to 10 seconds.</p>		<p><b>8</b> Phone EMS for Help. Send someone to call an ambulance.</p>
<p><b>9</b> Begin Rescue Breathing. Keep head tilted back. Lift chin. Pinch nose shut. Give 1 full breath every 5 seconds. Look, listen, and feel for breathing between breaths.</p>		<p><b>10</b> Recheck Pulse Every Minute. Keep head tilted back. Feel for pulse for 5 to 10 seconds. If victim has pulse, not breathing, continue rescue breathing. If no pulse, begin CPR.</p>

## **Dear Customer,**

Thank you for purchasing a Fischer Panda Generator and choosing Fischer Panda as your partner for mobile power on board. With your generator, you now have the means to produce your own power – wherever you are - and experience even greater independence. Not only do you have a Fischer Panda generator on board, you also have worldwide support from the Fischer Panda Team. Please take the time to read this and find how we can support you further.

### **Installation Approval and Warranty**

Every generator has a worldwide warranty. You can apply for this warranty through your dealer when the installation is approved. If you have purchased an extended warranty, please ensure that it is kept in a safe place and that the dealer has your current address. Consult your dealer about warranty options especially if you have purchased a used generator. He will be able to advise about authorised Fischer Panda Services worldwide.

### **Service and Support**

To ensure that your generator operates reliably, regular maintenance checks and tasks as specified in this manual must be carried out. Fischer Panda can supply Service Kits which are ideal for regular servicing tasks. We only supply the highest quality components which are guaranteed to be the RIGHT parts for your generator. Service “Plus” Kits are also available and ideal for longer trips where more than one service interval may be required.

If you require assistance – please contact your Fischer Panda Dealer. Please do not attempt to undertake any repair work yourself, as this may affect your generator warranty. Your dealer will also be able to assist in finding your nearest Fischer Panda service station. Your nearest service station can also be found in our Global Service Network which can be downloaded from our homepage.

### **Product Registration**

Please take the time to register your Fischer Panda Generator on our website at

<http://www.fischerpanda.de/mypanda>

By registering, you will ensure that you will be kept up to date on any technical upgrades or specific information on the operation or servicing of your generator. We can even let you know about new Fischer Panda products – especially helpful if you are planning to upgrade or expand your installation at a later date.

### **Fischer Panda Quality - Tried and Tested**

DIN-certified according DIN ISO 9001

**Thank you for purchasing a Fischer Panda Generator.**

**Your Fischer Panda Team**

# 1. General Instructions and Regulations

## 1.1 Safety first!

These symbols are used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury or lethal danger during certain maintenance work or operations. Read these instructions carefully.

Can cause acute or chronic health impairments or death even in very small quantities if inhaled, swallowed, or absorbed through the skin.

**WARNING: Hazardous materials**



This warning symbol draws attention to special warnings, instructions or procedures which, if not strictly observed, may result in damage or destruction of equipment.

**WARNING: Important information!**



Warning of materials that may ignite in the presence of an ignition source (cigarettes, hot surfaces, sparks, etc.).

**WARNING: Fire hazard**



In the environment described / during the work specified, smoking is prohibited.

**PROHIBITED: No smoking**



Fire and naked light are ignition sources that must be avoided.

**PROHIBITED: No fire or naked light**



The equipment shall not be activated or started up while work is in progress.

**PROHIBITED: Do not activate/start up**



Touching of the corresponding parts and systems is prohibited.

**PROHIBITED: Do not touch**



**Danger for life! Working at a running generator can result in severe personal injury.**

**DANGER: Automatic start-up**



The generator can be equipped with a automatic start device. This means, an external signal may trigger an automatic start-up. To avoid an unexpected starting of the generator, the starter battery must be disconnected before working at the generator.

This danger symbol refers to the danger of electric shock and draws attention to special warnings, instructions or procedures which, if not strictly observed, may result in severe personal injury or loss of life due to electric shock.

**WARNING: Hazardous electric voltage**



General warning of a hazard area

**WARNING: General warning**



Can cause acute or chronic health impairments or death even in very small quantities if inhaled or ingested.

**WARNING: Danger due to inhalation and/or ingestion**



Warning of live parts that may cause electric shock upon contact. Especially dangerous for persons with heart problems or pacemakers.

**WARNING: Risk of electric shock upon contact**



Danger of injury due to being pulled into equipment. Bruising and torn off body parts possible. Risk of being pulled in when touching with body part, loose-fitting clothing, scarf, tie, etc.

**WARNING: Danger due to rotating parts**



Warning of substances that may cause an explosion under certain conditions, e.g. presence of heat or ignition sources.

**WARNING: Explosion hazard**



Warning of hot surfaces and liquids. Burn/scalding hazard.

**WARNING: Hot surface**



Warning of substances that cause chemical burns upon contact. These substances can act as contaminants if introduced into the body.

**WARNING: Danger due to corrosive substances, potential contamination of person**



When the system is opened, the pressure can be relieved abruptly and expel hot gases and fluids. Risk of injury due to parts flying about, burn hazard due to liquids and gases.

**WARNING: System may be pressurised!**



Warning of hearing damages.

**WARNING: Hearing damage**



Warning of magnetic field.

**WARNING: Magnetic field**



Warning of overpressure.

**WARNING: Overpressure**





Wearing the applicable snugly fitting protective clothing provides protection from hazards and can prevent damage to your health.

**MANDATORY INSTRUCTION: Wear snugly fitting protective clothing (PPE).**



Wearing hearing protection provides protection from acute and gradual hearing loss.

**MANDATORY INSTRUCTION: Wear hearing protection (PPE).**



Wearing safety goggles protects the eyes from damage. Optical spectacles are not a replacement for the corresponding safety goggles.

**MANDATORY INSTRUCTION: Wear safety goggles (PPE).**



Wearing protective gloves provides the hands from hazards like friction, graze, punctures or deep cuts and protects them from contact with hot surfaces.

**MANDATORY INSTRUCTION: Wear protective gloves (PPE).**



Compliance with the instructions in the manual can avert danger and prevent accidents. This will protect you and the generator.

**MANDATORY INSTRUCTION: Observe the instructions in the manual.**







Environmental protection saves our living environment. For you and for your children.





**MANDATORY INSTRUCTION: Comply with environmental protection requirements.**



## 1.2 Tools

These symbols are used throughout this manual to show which tool must be used for maintenance or installation.

	<p>Spanners W.A.F X = width across flats of X mm</p>
	<p>Hook wrench for oil filter</p>
	<p>Screw driver, for slotted head screws and for Phillips head screws</p>
	<p>Multimeter, multimeter with capacitor measuring unit</p>

	<p>Socket wrench set</p>
	<p>Hexagon socket wrench set</p>
	<p>Clamp-on ammeter (DC for synchronous generators; AC for asynchronous generators)</p>
	<p>Torque wrench</p>

## 1.3 Manufacturer declaration in accordance with the Machinery Directive 2006/42/EC

---

---

Fischer Panda GmbH  
Otto-Hahn-Str. 32 - 34  
33104 Paderborn  
Geschäftsführer:  
Dr.-Ing.Hans-J. Herbermann/ Stephan Backes  
Handelsregister HRB 580 Paderborn



### CE-DECLARATION Under the terms of Directive 2006/42/EG

Description of Machine: Fischer Panda Diesel Electrical Generator

Type of Machinery: P7K. Art.No.0029211

General EG Directives Applicable:

2006/42EG  
2010/26EU  
2014/30EG  
2014/35EG

Special EG Directives Applicable:

2004/104/EG  
2005/88/EG

Applicable Norms:

- EMV 55014-1,EMV: DIN EN 55016-1-2, DIN EN 55016-2-1, DIN EN 55016-2-3, DIN EN 55016-3-2,
- DIN EN 55016-3-3, DIN EN 55016-3-11, DIN EN 55016-3-12, DIN EN 61000-4-3, DIN EN 61000-4-4,
- DIN EN 61000-4-6;
- EG: DIN EN 12601, DIN EN ISO 8178-1, DIN EN ISO 8178-4, DIN ISO 8528, ISO 3046, DIN EN ISO 3744, DIN EN ISO 3746

Archive Number: CE\_FP\_ENG\_V01.5


Hereby, we declare that the above described machine due to the nature of its design and construction brought into circulation by us meets the requirements of the health and safety requirements of the EC Machinery Directive. This machine loses the validity of this statement if any unauthorized changes to this machine are undertaken without our consent. If the machine is installed in association with other components (e.g. electric connections, electrical distribution, regulating devices, inverters, battery chargers, battery system, cooling systems, fuel systems, foundations, etc.) then the compliance with the separate directive for the complete system with the must be ascertained and declared. National exhaust emission regulations must be verified with engine specification.

Paderborn, 13<sup>th</sup> September 2018

Fischer Panda GmbH



Managing Director, Dipl.-Ing. Stephan Backes



Quality Management, Boris Schönberger

#### Property Rights Advice

Parts of the machine are subject to property rights, such as patents or designs. The waiver of special identification, especially statements provided to you, does not entitle you to reproduce these components.

## **1.4 Customer registration and guarantee**

---

Use the advantages of registering your product:

- you will receive a Guarantee Certificate after approval of your installation data
- you will receive extended product information that may be relevant to safety.
- You will receive free upgrades as necessary.

Additional advantages:

Based on your complete data record, Fischer Panda technicians can provide you with fast assistance, since 90 % of the disturbances result from defects in the periphery.

Problems due to installation errors can be recognized in advance.

### **1.4.1 Technical support**

---

Technical Support via the Internet: [info@fischerpanda.de](mailto:info@fischerpanda.de)

### **1.4.2 Caution, important information for start-up!**

---

1. The commissioning log shall be filled in immediately after initial operation and shall be confirmed by signature.
2. The commissioning log must be received by Fischer Panda GmbH at Paderborn within 4 weeks of initial operation.
3. After receiving the commissioning log, Fischer Panda will make out the official guarantee certificate and send it to the customer.
4. If warranty claims are made, the document with the guarantee certification must be submitted.

If the above requirements are not or only partly fulfilled, the warranty claim shall become void.

## 1.5 Safety Instructions - Safety First!

---

### 1.5.1 Safe operation

---

Careful handling of the equipment is the best insurance against an accident. Read the manual diligently, and make sure you understand it before starting up the equipment. All operators, regardless of their experience level, shall read this manual and additional pertinent manuals before commissioning the equipment or installing an attachment. The owner shall be responsible for ensuring that all operators receive this information and are instructed on safe handling practices.



### 1.5.2 Observe safety instructions!

---

Read and understand this manual and the safety instructions on the generator before trying to start up and operate the generator. Learn the operating practices and ensure work safety. Familiarise yourself with the equipment and its limits. Keep the generator in good condition.

### 1.5.3 Personal protective clothing (PPE)

---

For maintenance and repair work on the equipment, **do not** wear loose, torn, or ill-fitting clothing that may catch on protruding parts or come into contact with pulleys, cooling disks, or other rotating parts, which can cause severe injury.



Wear appropriate safety and protective clothing during work.

Do not operate the generator while under the influence of alcohol, medications, or drugs.



Do not wear head phones or ear buds while operating, servicing, or repairing the equipment.



### 1.5.4 Cleanliness ensures safety

---

Keep the generator and its environment clean.

Before cleaning the generator, shut down the equipment and secure it against accidental start-up. Keep the generator free from dirt, grease, and waste. Store flammable liquids in suitable containers only and ensure adequate distance to the generator. Check the lines regularly for leakage and eliminate leaks immediately as applicable.



### 1.5.5 Safe handling of fuels and lubricants

Keep fuels and lubricants away from naked fire.

Before filling up the tank and/or applying lubricant, always shut down the generator and secure it against accidental start-up.



Do not smoke and avoid naked flame and sparking near fuels and the generator. Fuel is highly flammable and may explode under certain conditions.

Refuel in well-ventilated open spaces only. If fuel/lubricant was spilled, eliminate fluids immediately.

Do not mix diesel fuel with petrol or alcohol. Such a mixture can cause fire and will damage the generator.



Use only approved fuel containers and tank systems. Old bottles and canisters are not adequate.

### 1.5.6 Exhaust fumes and fire protection

Engine fumes can be hazardous to your health if they accumulate. Ensure that the generator exhaust fumes are vented appropriately (leak-proof system), and that an adequate fresh air supply is available for the generator and the operator (forced ventilation).



Check the system regularly for leakage and eliminate leaks as applicable.

Exhaust gases and parts containing such fumes are very hot; they may cause burns under certain circumstances. Always keep flammable parts away from the generator and the exhaust system.

To prevent fire, ensure that electrical connections are not short-circuited. Check regularly that all lines and cables are in good condition and that there is no chafing. Bare wires, open chafing spots, frayed insulation, and loose cable connections can cause dangerous electric shocks, short-circuit, and fire.



The generator shall be integrated in the existing fire safety system by the operating company.

## CALIFORNIA

### Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.



### 1.5.7 Safety precautions against burns and battery explosions

---

The generator and its cooling agents and lubricants as well as the fuel can get hot while the generator is operated. Use caution around hot components such as parts containing exhaust fumes, radiator, hoses, and engine block during operation and after the generator was shut down.



The cooling system may be pressurised. Open the cooling system only after letting the engine and the coolant cool down. Wear appropriate protective clothing (e.g. safety goggles, gloves).



Prior to operation, ensure that the cooling system is sealed and that all hose clamps are tightened.

The battery represents an explosion hazard, this applies both to the starter battery and the battery bank of the AGT generators. While batteries are being charged, a hydrogen-oxygen mixture is generated, which is highly explosive (electrolytic gas).



Do not use or charge batteries if the fluid level is below the MINIMUM marking. The life span of the battery is significantly reduced, and the risk of explosion increases. Refill to a fluid level between maximum and minimum level without delay.

Especially during charging, keep sparks and naked fire away from the batteries. Ensure that the battery terminals are tightly connected and not corroded to avoid sparking. Use an appropriate terminal grease.



Check the charge level with an adequate voltmeter or acid siphon. Contact of a metal object across the terminals will result in short-circuiting, battery damage, and high explosion risk.

Do not charge frozen batteries. Heat the batteries to +16 °C (61 °F) prior to charging.

### 1.5.8 Protect your hands and body from rotating parts!

---

Always keep the capsule closed while operating the generator.

To check the V-belt tension, always shut down the generator.



Keep your hands and body away from rotating parts such as V-belt, fans, pulleys, and flywheel. Contact can cause severe injury.

Do not run the engine without the safety devices in place. Prior to start-up, mount all safety devices securely and check for proper attachment and function.

### 1.5.9 Anti-freeze and disposal of fluids

---

Anti-freeze contains toxic substances. To prevent injury, wear rubber gloves and wash off any anti-freeze immediately in case of skin contact. Do not mix different anti-freeze agents. The mixture may cause a chemical reaction generating harmful substances. Use only anti-freeze that was approved by Fischer Panda.



Protect the environment. Collect drained fluids (lubricants, anti-freeze, fuel), and dispose of them properly. Observe the local regulations for the respective country. Ensure that no fluids (not even very small quantities) can drain into the soil, sewers, or bodies of water.





### 1.5.10 Implementation of safety inspections and maintenance

---

Disconnect the battery from the engine before performing service work. Affix a sign to the control panel - both the main and the corresponding slave panel - with the instruction "DO NOT START UP - MAINTENANCE IN PROGRESS" to prevent unintentional start-up.



To prevent sparking due to accidental short-circuiting, always remove the earthing cable (-) first and reconnect it last. Do not start work until the generator and all fluids and exhaust system parts have cooled down.

Use only suitable tooling and appliances and familiarise yourself with their functions to prevent secondary damage and/or injury.



Always keep a fire extinguisher and a first aid box handy while performing maintenance work.

## 1.6 Warning and instruction signs

---

Keep warning and instruction signs clean and legible.

Clean the signs with water and soap and dry them with a soft cloth.

Immediately replace damaged or missing warning and instruction signs. This also applies to the installation of spare parts.

### 1.6.1 Special instructions and hazards of generators

---

The electrical installations may only be carried out by trained and qualified personnel!



**The generator must not be operated with the cover removed.**

If the generator is being installed without a sound insulation capsule, it must be ensured that all rotating parts (belt-pulley, belts etc.) are covered and protected so that there is no danger to life and body!



If a sound insulation covering will be produced at the place of installation, then easily visible signs must show that the generator must only be switched on while the capsule is closed.



All servicing, maintenance, or repair work may only be carried out when the motor is not running.

Electrical voltages above 50 volts are always dangerous to life. The rules of the respective regional authority must be adhered to during installation. For safety reasons, only an electrician may carry out the installation of the electrical connections of the generator.

### 1.6.1.1 Protective conductor and potential equalisation:

Electric voltage above 50 V may be life-threatening. For this reason systems are grounded with a protective conductor. In connection with a RCD the current supply will be disconnected in case of a failure.

Appropriate safety precautions like the RCD and corresponding fuses have to be provided by the customer to guarantee a safe operation of the generator.

### 1.6.1.2 Protective conductor for Panda AC generators:

The generator is „earthed“ as a standard (centre and ground are interconnected in the generator terminal box by a shunt). This is a basic first-level safety measure, which offers protection as long as no other measures are installed. Above all, it is designed for delivery and a possible test run.



This „neutralisation“ (Protective Earthing Neutral - PEN) is only effective if all parts of the electrical system are jointly „earthed“ to a common potential. The shunt can be removed if this is necessary for technical reasons and another protective system has been set up instead.

**While the generator is being operated, the full voltage is applied to the AC control box, as well. Therefore, it is essential to ensure that the control box is closed and secured against touch while the generator is running.**



**The battery must always be disconnected if work on the generator or electrical system is to be carried out, so that the generator cannot be started up unintentionally.**

### 1.6.1.3 Switch off all loads while working on the generator

All loads must be disconnected prior to working on the generator to avoid damage to the devices. In addition, the semiconductor relays in the AC control box must be disconnected in order to avoid the booster capacitors being activated during set-up. The negative terminal of the battery must be disconnected.

Capacitors are required to run the generator. These have two varying functions:

- A) The working capacitors
- B) The booster capacitors

Both groups are located in a separate AC control box.

Capacitors store electrical energy. High voltages may remain across the capacitor contacts even after they have been disconnected from the mains. As a safety precaution, do not touch the contacts. If the capacitors must be replaced or inspected, the contacts shall be short-circuited by connecting an electrical conductor to discharge potentially remaining potential differences.

If the generator is switched off normally, the working capacitors are automatically discharged via the winding of the generator. The booster capacitors are discharged by means of internal discharge resistors.

For safety reasons, all capacitors must be discharged through short-circuiting before work is carried out on the AC control box.

### 1.6.1.4 Potential equalisation for Panda AGT DC generators

For further information specific to your generator, see the chapter installation.

### 1.6.1.5 Safety instructions concerning cables

#### Cable types

It is recommended to use cables that are in compliance with the standard UL 1426 (BC-5W2) with type 3 (ABYC section E-11).

#### Cable cross-section

The cable shall be selected taking into account the amperage, cable type, and conductor length (from the positive power source connection to the electrical device and back to the negative power source connection).







#### Cable installation

It is recommended to install a self-draining cable conduit classified as V-2 or higher in compliance with UL 94 in the area of the cable guide inside the capsule. It must be ensured that the cable guide is not routed along hot surfaces such as the exhaust manifold or the engine oil drain screw but instead is installed free from any influence due to friction and crushing.


## 1.6.2 General safety instructions for handling batteries

---

**These instructions shall apply in addition to the instructions of the battery manufacturer:**

- While you are working on the batteries, a second person should be within earshot to help you if necessary. 
- Keep water and soap ready in case battery acid is burning your skin.
- Wear eye protection and protective clothing. Do not touch your eyes while handling batteries.
- If you have acid splashes on the skin or clothing, wash them out with lots of water and soap.
- If acid sprays into your eyes, immediately flush them with clean water until no more burning is felt. Immediately seek medical assistance. 
- Do not smoke near the batteries. Avoid naked fire. The area around batteries is a potentially explosive atmosphere.
- Ensure that no tools are dropped on the battery terminals; cover them as necessary.
- Do not wear jewellery or watches on your arms during installation that might short-circuit the battery. Otherwise, there is a risk of skin burns. 
- Protect all battery contacts against accidental contact.
- For battery banks: Use only deep cycle batteries. Starter batteries are not suitable. Lead-acid gel batteries are recommended. They are maintenance-free, cycle stable, and do not release gases. 
- Never charge a frozen battery.
- Avoid battery short-circuits.
- Ensure proper ventilation of the battery to vent gases that may be released.
- Battery connection terminals must be checked for proper seating before operation. 
- Battery connection cables shall be installed with utmost care and shall be checked for excessive heating under load. Check the battery near vibrating components regularly for chafing and insulation defects. 

**ATTENTION! For battery charger generators (Fischer Panda AGT-DC)!**

**Prior to installation, verify that the voltage of the battery bank complies with the output voltage of the generator.** 



## 2. Basics

### 2.1 Intended use of the machine

---

---

The Fischer Panda generator is made to produce electrical energy out of diesel fuel.

The diesel fuel is converted to mechanical energy by the diesel engine. This mechanical energy drives the generator. In the genset, the mechanical energy is converted to electrical energy. This process is controlled by (sometimes external) components, the remote control panel and the voltage control system (VCS).

For the process is a sufficient amount of fuel and combustion air necessary. Arising exhaust and heat must be lead away.

If the electrical power should be applied to a local net, The regulation and installation instructions of the Net owner and the regional authorities must be respected. This includes lightning conductor, personal protection switch etc.

Misapplication of the Product can damage and destroy the product and the electrical net inclusive all load which is attached to the net, and contain hazards like short circuit. It is not allowed to modify the product in any case. Never open the sound cover during operation. The safety and hazard notes of the manual must be respected.

#### 2.1.1 Purpose of the manual and description of the definitions trained person/operator/user

---

This manual is work instruction and operation instruction for the owner and user of Fischer Panda generators.

The manual is the base and the guideline for the correct installation and maintenance of Fischer Panda Generators.

The manual does not substitute the technical evaluation and should be used as an example guide only.

The installation must be undertaken and proved by a suitable qualified/trained person and may in accordance with the law as required by the country and special situation.

##### 2.1.1.1 Trained persons

**Trained persons for the mechanical components are motor mechanics or persons with similar education and training.**

**Trained persons for the electrical components are electricians or persons with similar education and training.**

**After the Installation, the trained person must instruct the owner for operation and maintenance of the generator. This must include the hazards of the generator use.**

#### 2.1.2 Operator

---

**The operator is the for the operation of the generator responsible person.**

After the installation, the operator must be instructed for the operation ad maintenance of the generator. This must include the hazards during operation of the generator and a instruction for the maintenance.

The operator must read and follow the manual and must respect the hazard notes and safety instructions.

##### 2.1.2.1 User

**Users are persons, established by the operator, to operate the generator.**

The operator must assure that the user read and understand the manual and that all hazard notes and safety instructions are respected. The user must be instructed by the operator regarding his activity at the generator.

## **2.2 Panda Transport Box**

---

---

### **2.2.1 Bolted Fischer Panda Transport Box**

---

1. Remove the bolts for cover / sidewalls
2. Remove the cover
3. Remove the loose accessories
4. Remove the bolts for sidewalls / floor pallet
5. Remove the sidewalls
6. Open the generator attachment

### **2.2.2 Fischer Panda Transport Box with metal tab closure**

---

1. Bend up the metal tab closures on the transport box lid.
2. Remove the cover
3. Remove the loose
4. Bend open the metal tab closures on the transport box bottom.
5. Remove the sidewalls
6. Open the generator attachment

## **2.3 Transport and Loading/Unloading**

---

---

### **2.3.1 Transporting the generator**

---

- The generator must always be upright for transport.
- For transport, the Fischer Panda Transport Box shall be used for the generator. The generator shall be securely attached to the bottom of the box.
- For loading/unloading, an adequate industrial truck shall be used.
- Depending on the transport distance (e.g. air cargo), the generator fluids (coolant, engine oil, fuel) may have to be drained. The corresponding instructions and warnings must be fitted to the transport packaging.

### **2.3.2 Loading/unloading of the generator**

---

For loading/unloading the generator, appropriate ring eye bolts shall be installed in the holes in the support rails. The load bearing capacity of each ring eye bolt must at least equal the generator weight.

An adequate lifting yoke shall be used for transport/ loading

Fig. 2.3-1: Lifting yoke (example)



## 2.4 Scope of delivery

---

The Fischer Panda PMS generator system contains following components:

### 2.4.1 Asynchronous Generator:

---

#### Fischer Panda Generator

representative picture

Fig. 2.4-1: Fischer Panda Generator



#### Remote control panel

representative picture

Fig. 2.4-2: Remote control panel






### AC Control Box

The AC Control Box contains the capacitors and the control circuit board (VCS) for the generator.

At ND generators and generators with mini VCS the capacitors and the VCS may be mounted at the generator. The AC Control Box is not required for these generators.

representative picture

Fig. 2.4-3: AC Control Box

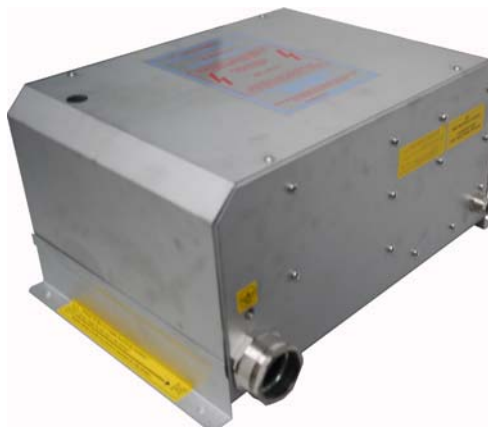

### Fischer Panda Manual

The Fischer Panda Manual contains the following components:

- Clear foil bag with general information etc.
- Generator manual with added remote control panel manual
- Spare part catalogue „Installation & Service Guide“
- Engine manual from the engine manufacturer.
- Wiring diagram for the generator

representative picture

Fig. 2.4.1-4: Fischer Panda Manual



### Optionales components f.e.:


- Fuel pump
- Installation kit
- Water lock
- etc.

## 2.4.2 Opening the MPL sound insulation capsule

To open the sound insulation capsule, the closures must be rotated roughly 180° counter-clockwise. Use a flat head screwdriver. Pull the sidewalls out by gripping into the slots.



Closure locked

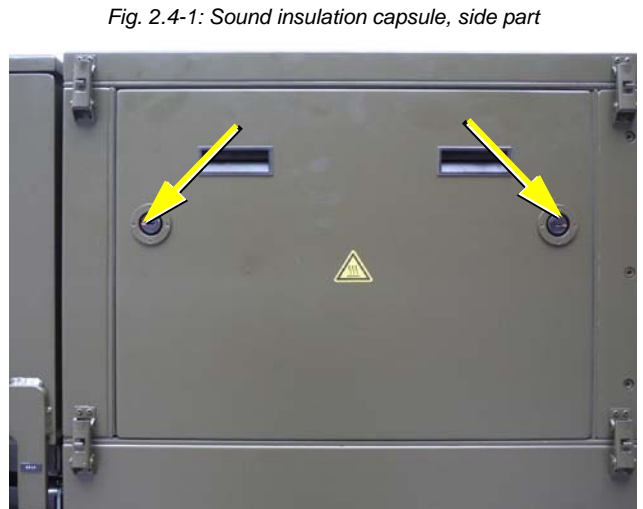

*Fig. 2.4.2-2: Closure locked*



Closure open

*Fig. 2.4-3: Closure open*



### 2.4.3 Opening the GFK sound insulation capsule

#### GFK sound insulation capsule with lash closures

Fig. 2.4-1: Lash closures



To open the lash closures pull the handle in arrow direction and lift the lash of the closure pin. After lifting of the lashes, the sound isolation cover upper parts can be removed.

Fig. 2.4-2: Lash closures



## 2.5 Special maintenance notes and arrangements at long periods of stand still time or shutdown

Stand still is divided into the following groups:

- Short-term standstill (1 to 3 months).
- Medium-term standstill / winter storage (3 to 6 months).
- Long-term standstill (storage) / shutdown (more than 6 months).

At irregular using intervals make shure that the generator runs till the engine is hot every 2 weeks. Without this water can gather in the engine oil and in the exhaust line and cause generator damage.

#### Warning



## 2.5.1 Reference note for the starter battery at a long-term standstill

---

### Starter batteries

### Notice:

Self-discharge of batteries is a physical and chemical process and cannot even be avoid by disconnecting the battery.



- Disconnect the battery from the generator at a long-term standstill.
- Charge the battery on a regular basis. Follow the notes of the battery manufacturer.

Before charging the battery, check the acid level according to the type of battery and refill each cell with distilled water up to the marking if necessary.

Today's starter batteries are normally maintenance-free.

### Deep discharge may damage the battery and may be useless afterwards.

Keep the battery clean and dry. Continuously clean the battery terminals (+ and -) and clamps and lubricate with an acid-free and acid-resistant grease. Make sure there is a good contact of the clamp connections when assembling. If voltage is approx. below 1,95 Volt, the cell should not decline the open-circuit voltage of the battery. This equates approx. 2,1V / cell open-circuit voltage when battery is fully charged.

For a 12 V battery applies 11,7 V lower open-circuit voltage (battery flat) - conservation charging 13,2 V.

For a 24 V battery applies 23,4 V lower open-circuit voltage (battery flat) - conservation charging 26,4 V.

*These data relate to a battery temperature of 20-25°C. Consider the specifications of the battery manufacturer.*

### Fischer Panda recommendation:

### Notice:

- Install a battery main switch and turn it to the off-position. (Disrupt the battery circuit)
- Install a sufficient fuse in the positive battery line close to the battery
- Check contacts for corrosion on a regular basis.



## 2.5.2 Arrangements at a short-term standstill

---

Short-term standstill (1 to 3 months)

- Measure the charge of battery via the open-circuit voltage
- At stand still >7 days - disconnect the battery (e.g. put battery main switch to 0)
- Drain the waterlock. Disconnect the exhaust line between waterlock and generator. Close the exhaust line of the generator.
- Within 2-3 months - let the engine run for at least 10 min
- Fill fuel tank to 100% (level to full).

## 2.5.3 Arrangements at a medium-term standstill / winter storage

---

Medium-term stand still (3 to 6 months)

### 2.5.3.1 Arrangements for conservation:

- Check the charge of battery and recharge approximately every 3 months if necessary. Consider the specifications of the battery manufacturer.

- Check anti-freeze protection of the cooling water and refill if applicable.

The anti-freeze protection should not be older than 2 years. The content of the anti-freeze protection should be between 40% and 60% to ensure corrosion protection in the cooling water circuit; Refill anti-freeze if necessary.

If cooling water will be drained, for example after a conservation of the engine, no water should remain within the engine during the stand still. At the control unit a correspondent note „NO COOLING WATER“ has to be placed.

- Drain engine oil as required. Refill engine with conservation oil up to maximum at the oil dip stick.
- Drain diesel fuel from tank and refill with conservation mixture (90% diesel and 10% conservation oil - up to max).

**Let engine run for 10 min.**

- Remove v-belt as required and store packed at a dry place. Protect from UV radiation.

**Cover alternator openings.**

**Attention!**

No cleaning fluids or preserving agents may enter the alternator. Danger to destroy the alternator.



- Clean engine according to the manufacturer.
- Inject engine parts and v-belt pulleys with a preserving agent.
- Clean air filter housing and inject with a preserving agent.
- Close suction hole and exhaust opening (e.g. with tape or end caps).
- Drain sea water circuit.
- Close sea cock.
- Clean sea water filter.
- Remove impeller and store.

**Carry out a deconservation before recommissioning.**

**Attention!**



**2.5.3.2 Arrangements for deconservation after a medium-term standstill (3 to 6 months).**

- Check charge of battery and recharge if necessary. Consider the specifications of the battery manufacturer.
- Check anti-freeze protection of the cooling water and refill if applicable.
- Drain engine oil. Renew oil filter and oil according to specification.
- Remove preservation agent of the engine with petroleum.
- Degrease the v-belt pulleys and install v-belt correctly. Check v-belt tension!
- Disconnect turbocharger oil pressure line if existent and refill clean motor oil in pipe.
- Keep engine shut-off lever in 0-position and turn engine several times by hand.
- Clean air filter housing with petroleum, check air filter and renew if necessary.
- Remove covers of the exhaust opening and the suction holes.
- Connect battery. Close battery main switch.
- Install impeller.
- Open sea cock.
- Check sea water filter.
- Keep shut-off lever at generator in 0-position and activate starter for approx. 10 sec. Make a break for 10 sec. and repeat procedure twice.

- Visual inspection of the generator according to initial operation and start generator.

## 2.5.4 Arrangements at a long-term standstill / shutdown

---

Standstill (more than 6 months)

### 2.5.4.1 Arrangements for conservation:

- Check the charge of battery and recharge approximately every 3 months if necessary. Consider the specifications of the battery manufacturer.
- Check anti-freeze protection of the cooling water and refill if applicable.

The anti-freeze protection should not be older than 2 years. The content of the anti-freeze protection should be between 40% and 60% to ensure corrosion protection in the cooling water circuit; Refill anti-freeze if necessary.

If cooling water will be drained, for example after a conservation of the engine, no water should remain within the engine during the stand still. At the control unit a correspondent note „NO COOLING WATER“ has to be placed.

- Drain engine oil as required. Refill engine with conservation oil up to maximum at the oil dip stick.
- Drain diesel fuel from tank and refill with conservation mixture (90% diesel and 10% conservation oil - up to max).

#### Let engine run for 10 min.

- Remove v-belt as required and store packed at a dry place. Protect from UV radiation
- Disconnect battery. Sprinkle terminals with acid-free grease.

#### Cover alternator openings.

**Attention!**

No cleaning fluids or preservative agents may enter the alternator. Danger to destroy the alternator.



- Clean engine according to the manufacturer.
- Inject engine parts and v-belt pulleys with a preserving agent.
- Clean air filter housing and inject with a preserving agent.
- Sprinkle exhaust turbo charger (if existent) with conservation agent at intake and exhaust and close lines again. Sprinkle preserving agent to the intake and exhaust lines than attach again.
- Remove valve cover and sprinkle the inside of the cover, shafts, springs, rocker lever etc. with preserving agent.
- Remove injectors and sprinkle the cylinder area with preserving agent. Keep the shut-off lever on the 0-position and turn the engine by hand for several times. Screw in the injectors with new gaskets. Consider the torsional moments.
- Sprinkle slightly the radiator cap and tank lid and respectively the radiator cap at the expansion tank and reinstall.
- Close intake and exhaust openings (for example with tape or end caps).
- Drain sea water circuit.
- Close sea cock.
- Clean sea water filter.
- Dismount impeller and store.

#### Carry out a de-conservation before recommissioning.

**Attention!**



#### 2.5.4.2 Arrangements after a long-term standstill (shutdown) / recommissioning (more than 6 months):

- Check the charge of battery and recharge if necessary. Consider the specifications of the battery manufacturer.
- Check anti-freeze protection and level of the cooling water and refill if applicable.
- Drain engine oil. Renew oil filter and oil according specification.
- Remove preservation agent of the engine with petroleum.
- Degrease the v-belt pulleys and install v-belt correctly. Check v-belt tension!
- Disconnect turbocharger oil pressure line if existent and refill clean motor oil in pipe.
- Keep engine shut-off lever in 0-position and turn engine several times by hand.
- Clean air filter housing with petroleum, check air filter and renew if necessary.
- Remove covers of the exhaust opening and the suction holes.
- Connect battery. Close battery main switch.
- Install impeller.
- Open sea cock.
- Check sea water filter.
- Keep shut-off lever at generator in 0-position and activate starter for approx. 10 sec. Make a break for 10 sec. and repeat procedure twice.
- Visual inspection of the generator according to initial operation and start generator.

#### Fischer Panda recommendation:

After a long-term standstill a complete 150 h inspection according to inspection schedule should be carried out.

#### Notice:






### 3. The Panda Generator



#### 3.1 Type plate at the Generator

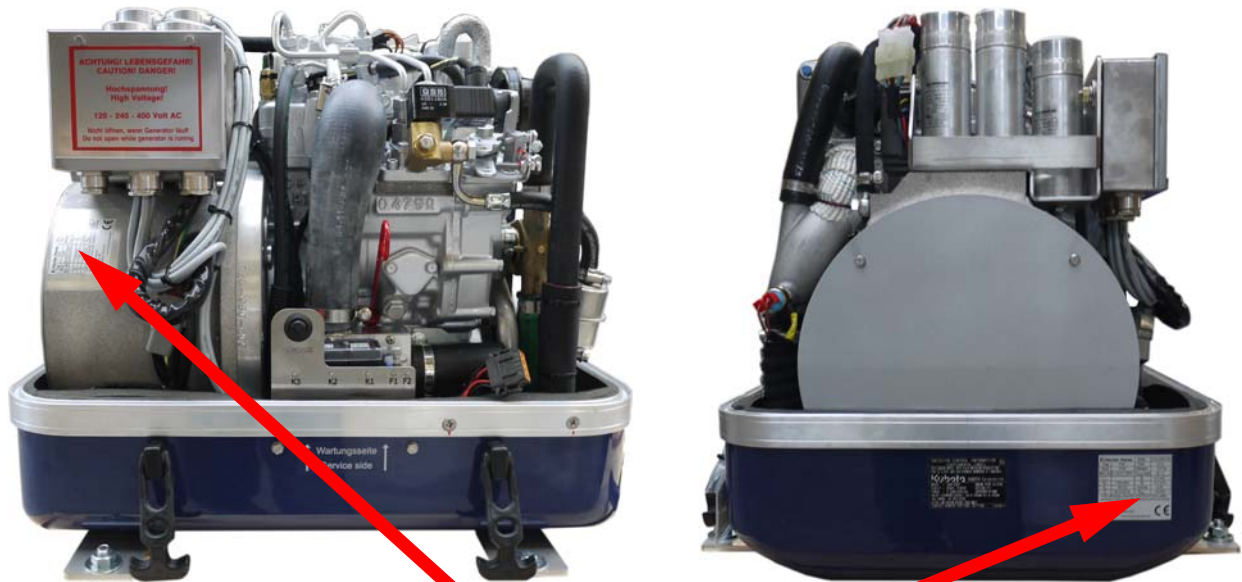Fig. 3.1-1: Type plate at the generator - Picture shows 4000s SC



		S/No	
Typ		Year	
Mod.		Weight	
Art. No		T <sub>amb max</sub>	
		P <sub>n</sub>	
U <sub>n</sub>		S <sub>n</sub>	
f <sub>n</sub>		Cos φ	
I <sub>n</sub>		P <sub>con</sub>	
Fischer Panda GmbH Otto-Hahn-Str. 40 33104 Paderborn Germany		www.fischerpanda.de	
			

Fig. 3.1-2: Discription type plate


		S/No		Serial number
Type description	Typ	Year		Year of manufacture
Model	Mod.	Weight		Weight
Articel number	Art. No	T <sub>amb max</sub>		Ambient temperature
Interlinking		P <sub>n</sub>		Nominal real power
Nominal voltage	U <sub>n</sub>	S <sub>n</sub>		Nominal apparent power
Nominal frequency	f <sub>n</sub>	Cos φ		Nominal power factor
Nominal current	I <sub>n</sub>	P <sub>con</sub>		Electrical continuous power
Fischer Panda GmbH Otto-Hahn-Str. 40 33104 Paderborn Germany		www.fischerpanda.de		
				



## 3.2 Description of the Generator

### 3.2.1 Right side view - Panda 4K PMS


Fig. 3.2.1-1: Right side view

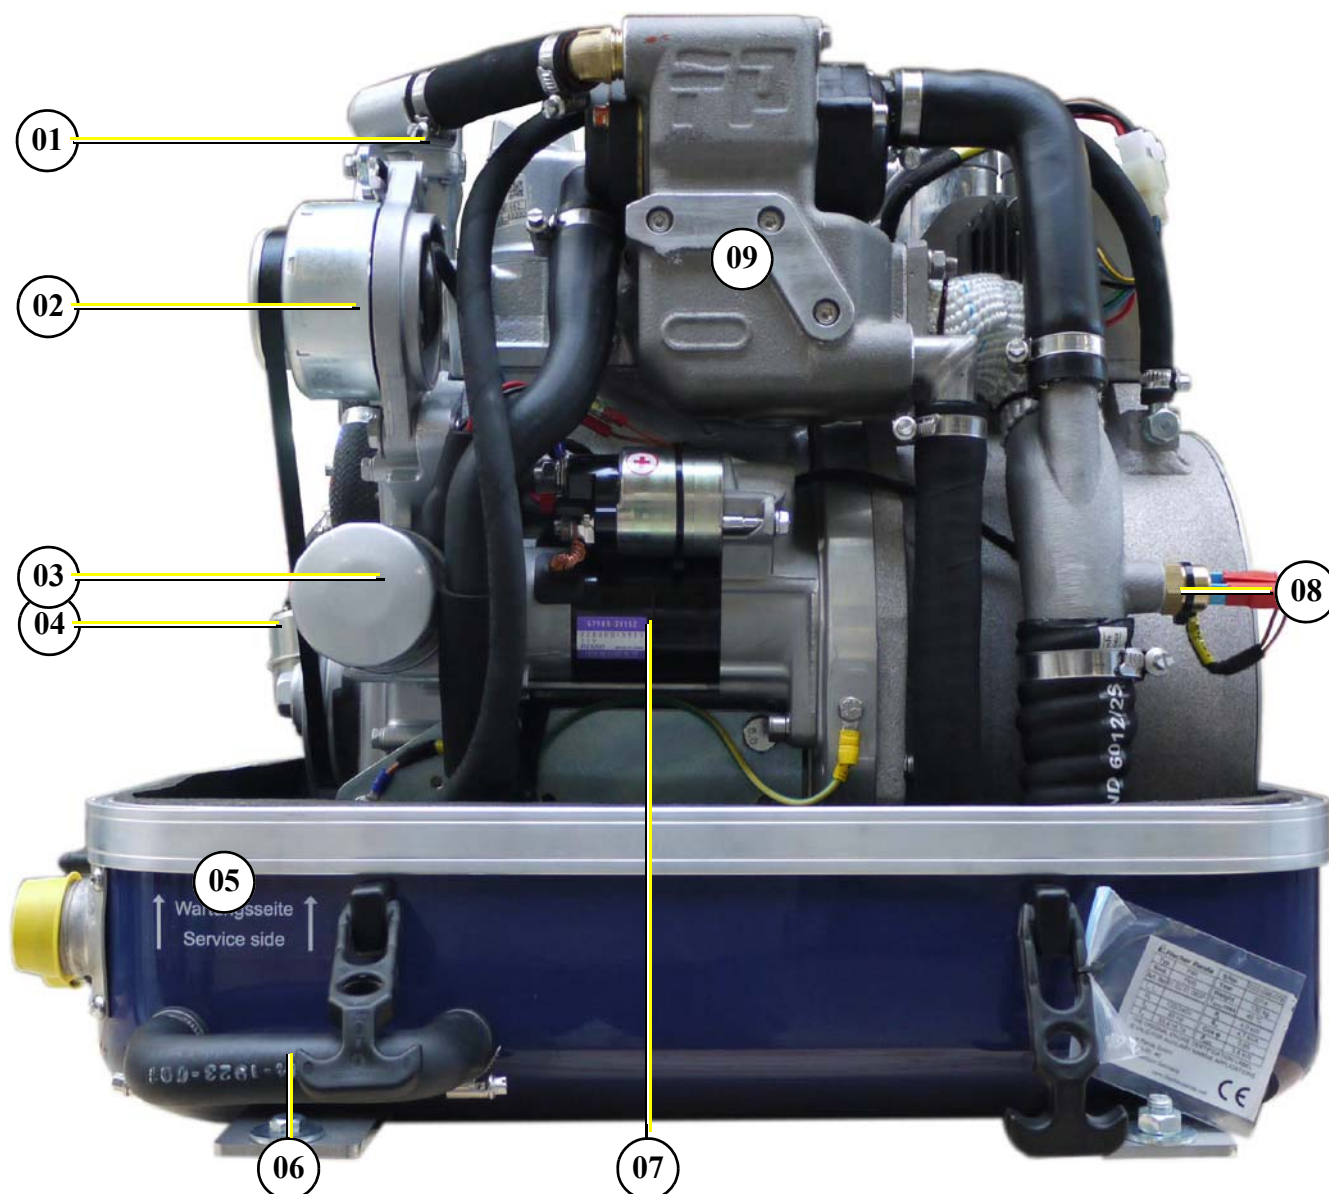

- |     |                       |     |   |
|-----|-----------------------|-----|---|
| 01) | Thermostat housing    | 06) | Connection point for external ventilation valve |
| 02) | DC alternator         | 07) | Starter motor                                   |
| 03) | Oil filter            | 08) | Thermo switch                                   |
| 04) | Fuel filter           | 09) | Heat exchanger                                  |
| 05) | Sound cover base part |     |   |

### 3.2.2 Left side view - Panda 4K PMS

Fig. 3.2.2-1: Left side view

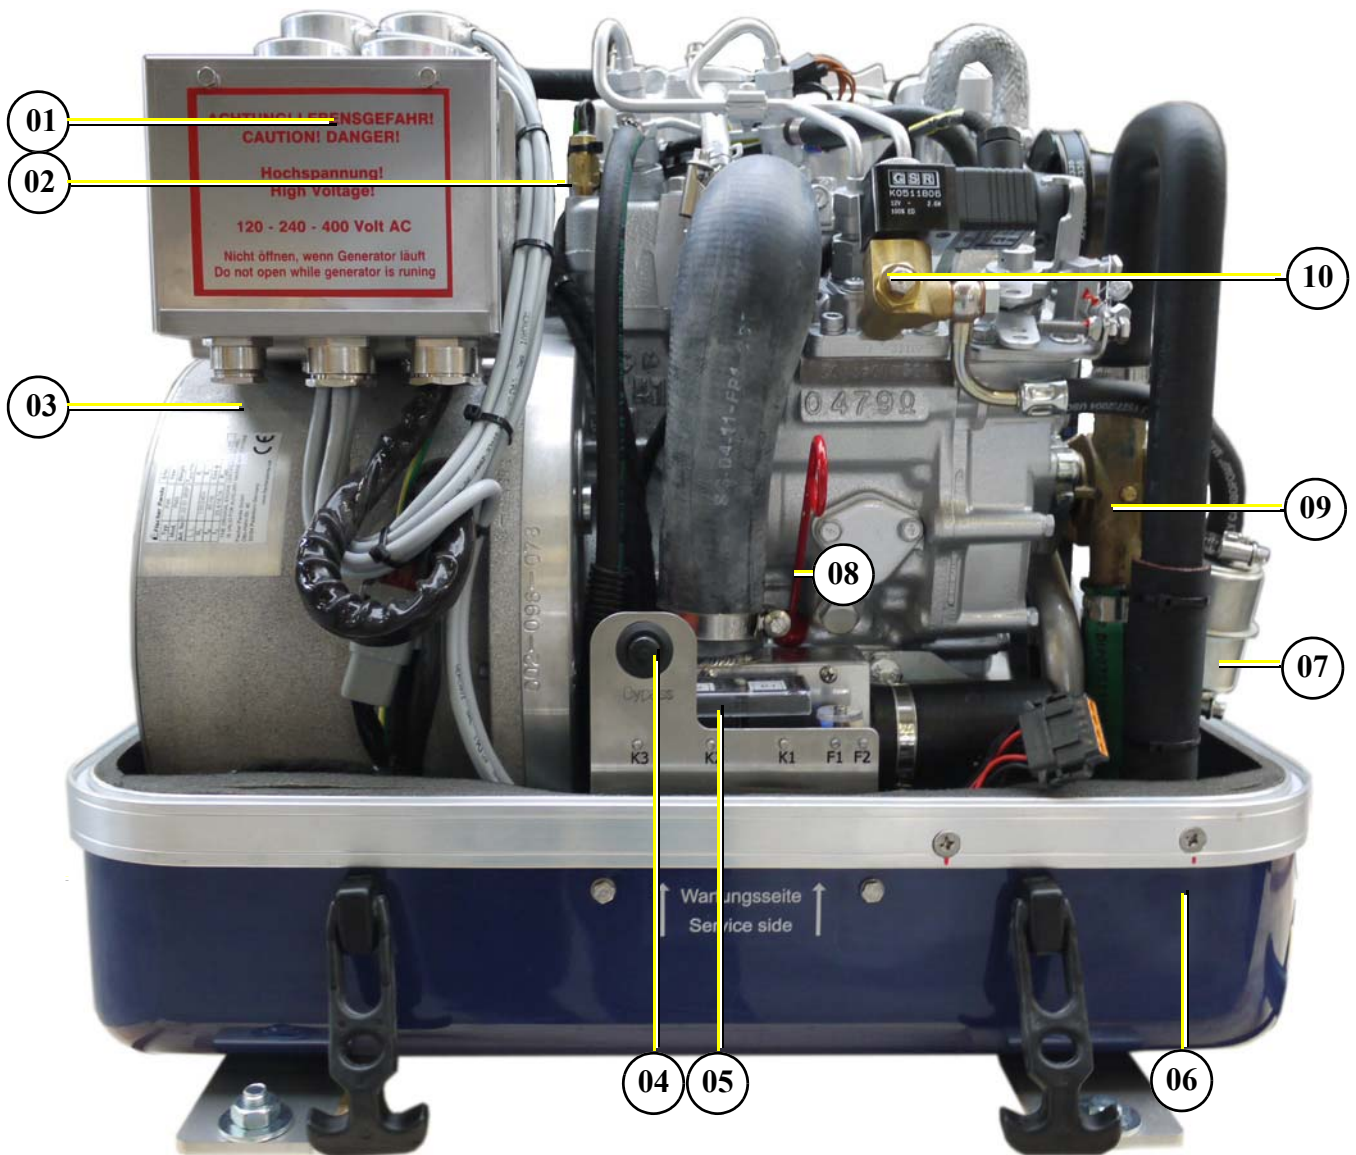


- 01) Generator terminal box
- 02) Thermo switch at cylinder head
- 03) Generator housing with coil
- 04) Failure bypass switch
- 05) DC terminal with relays and fuses

- 06) Sound cover base part
- 07) Fuel filter
- 08) Oil dipstick
- 09) Raw water pump
- 10) Fuel solenoid valve

### 3.2.3 Front view - Panda 4K PMS

Fig. 3.2.3-1: Front view

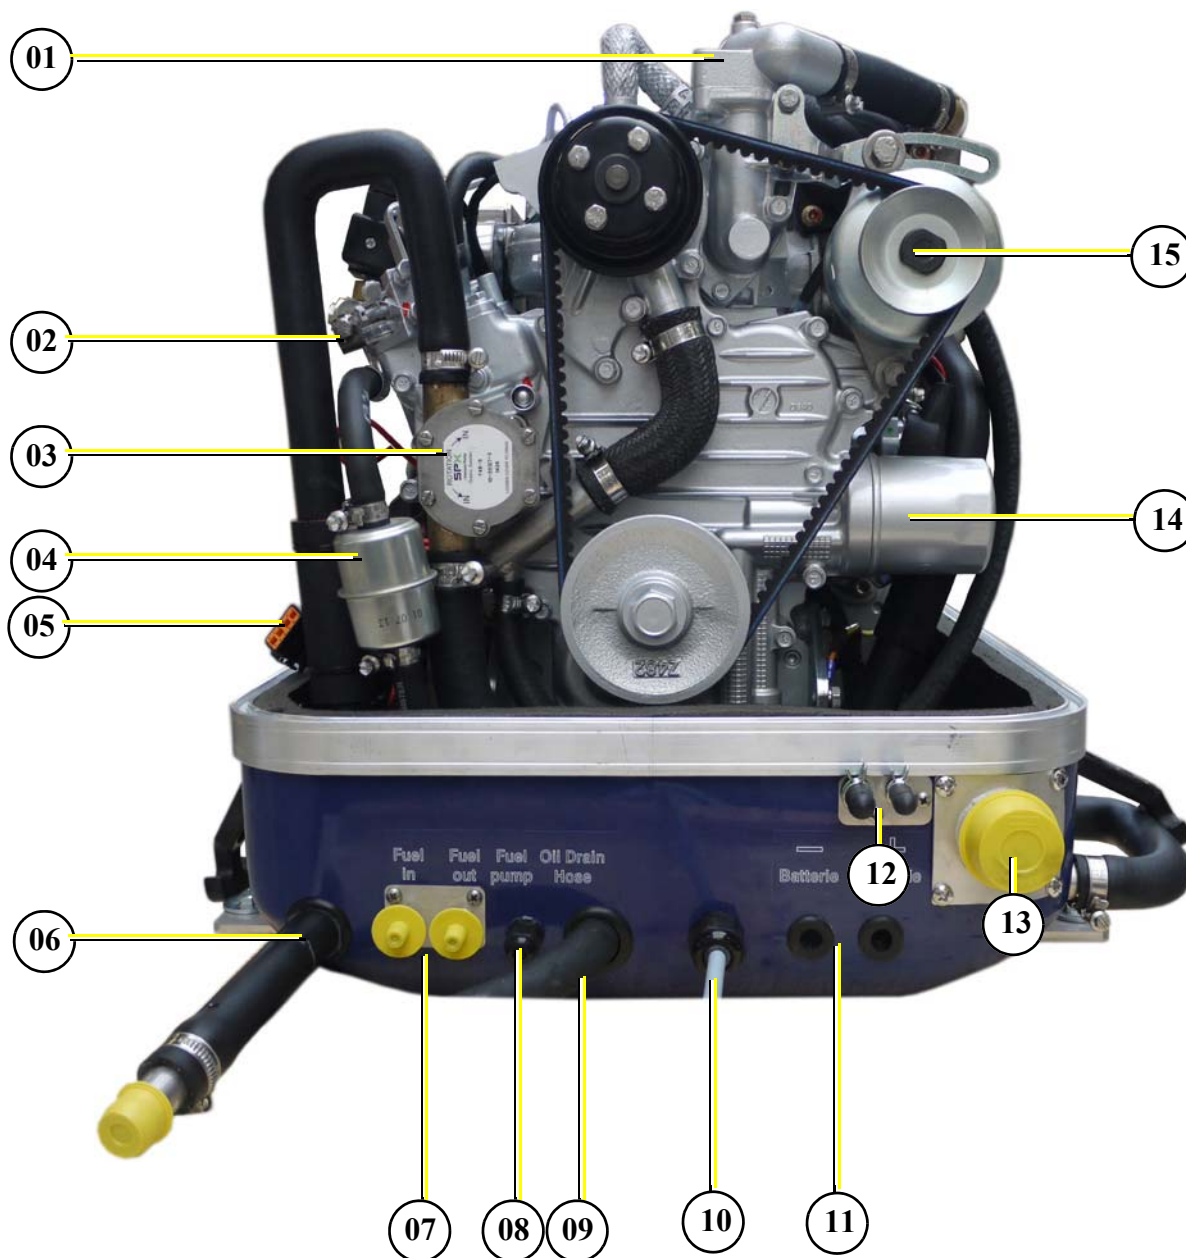


- |  |  |
|--|--|
| 01) Thermostat housing                       | 09) Oil drain hose                         |
| 02) Ventilation screw solenoid valve         | 10) Cable for remote control panel         |
| 03) Raw water pump                           | 11) Passage for starter battery cables     |
| 04) Fuel filter                              | 12) Connections to external expansion tank |
| 05) Connection plug for the boost electronic | 13) Exhaust out                            |
| 06) Raw water in                             | 14) Oil filter                             |
| 07) Fuel in/out                              | 15) DC alternator                          |
| 08) Passage for fuel pump cable              |  |



### 3.2.4 Back view - Panda 4K PMS

Fig. 3.2.4-1: Back view

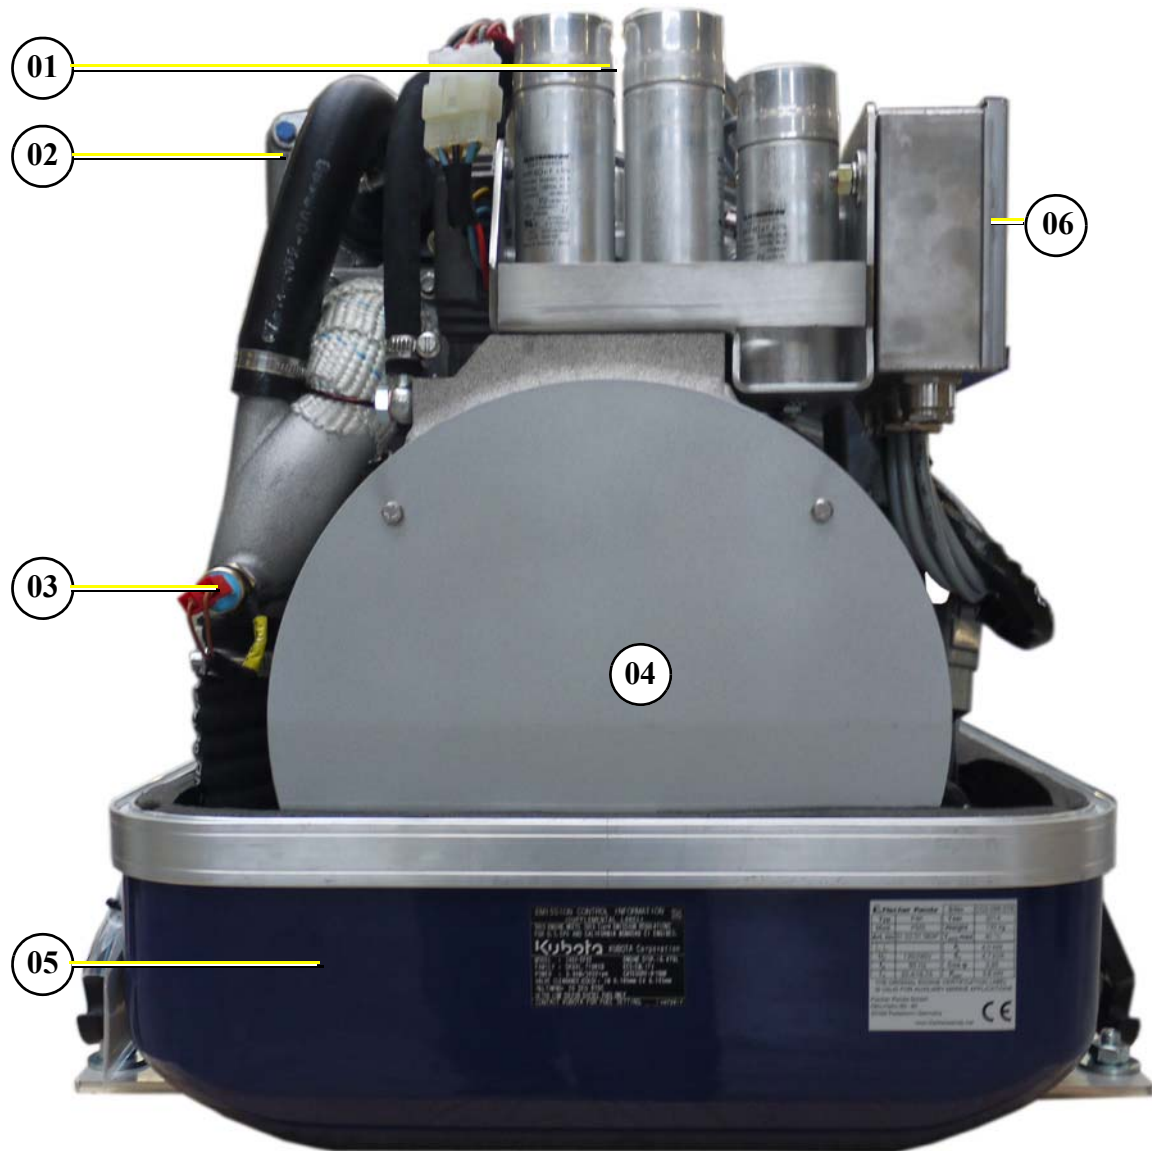


- 01) Capacitors
- 02) Heat exchanger
- 03) Thermo switch

- 04) Generator front plate
- 05) Sound cover base part
- 06) Generator terminal box

### 3.2.5 View from above - Panda 4K PMS

Fig. 3.2.5-1: View from above

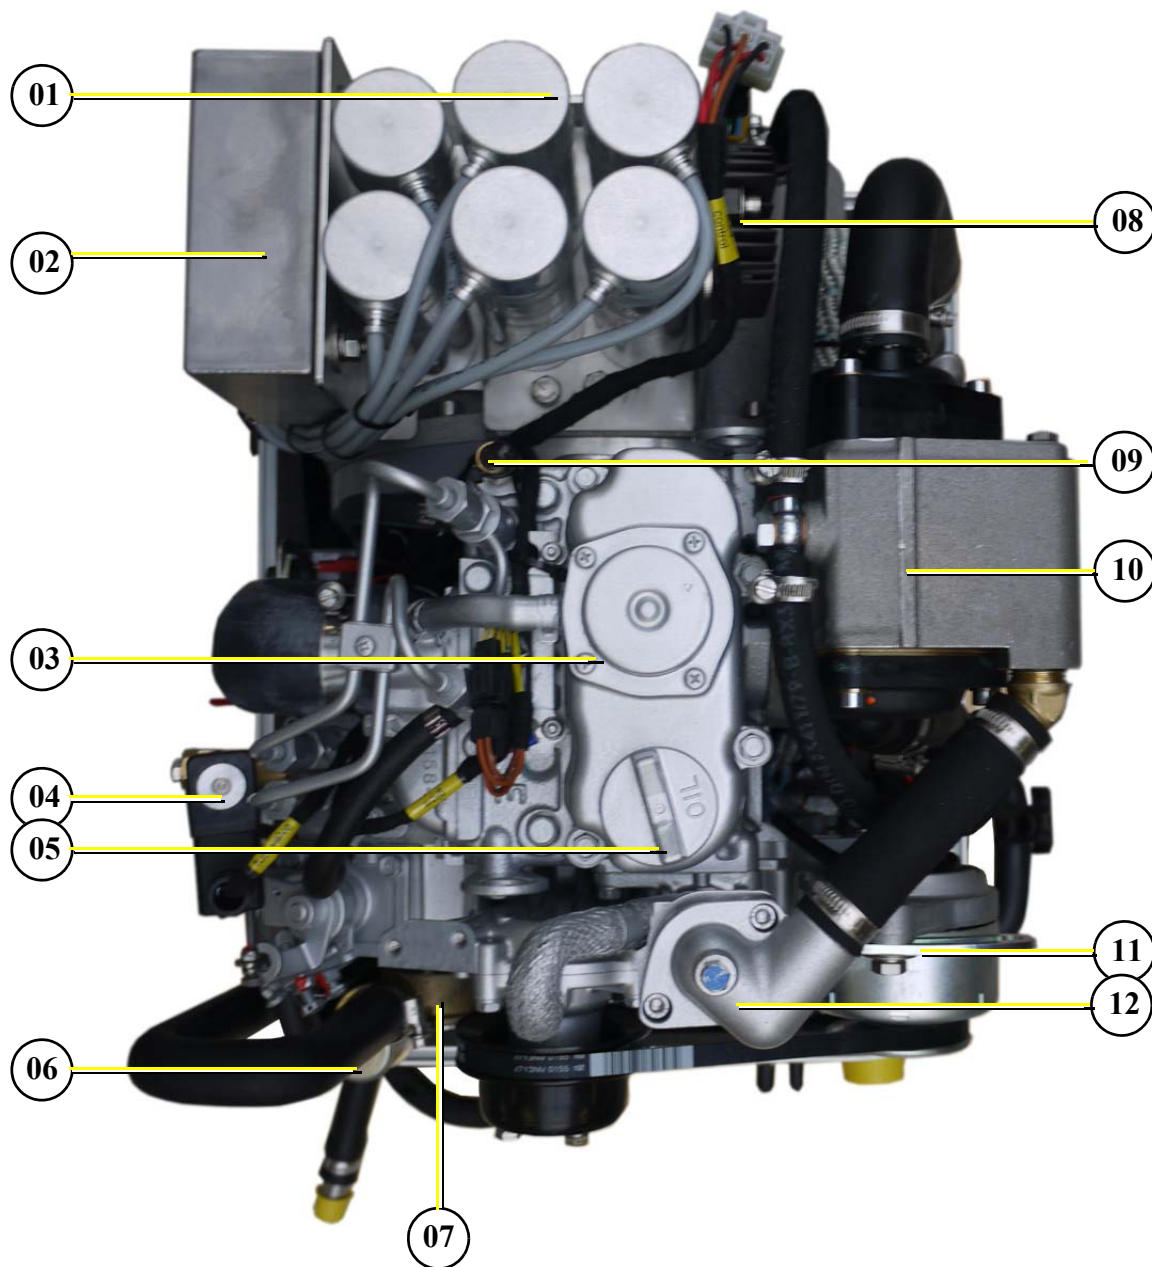


- 01) Capacitors
- 02) Generator terminal box
- 03) Valve cover
- 04) Fuel stop solenoid
- 05) Oil filler neck
- 06) Fuel filter

- 07) Raw water pump
- 08) Regulator for DC alternator
- 09) Thermo switch at cylinder head
- 10) Heat exchanger
- 11) DC alternator
- 12) Thermostat housing

### 3.2.6 Right side view - Panda 5K PMS


Fig. 3.2.6-1: Right side view

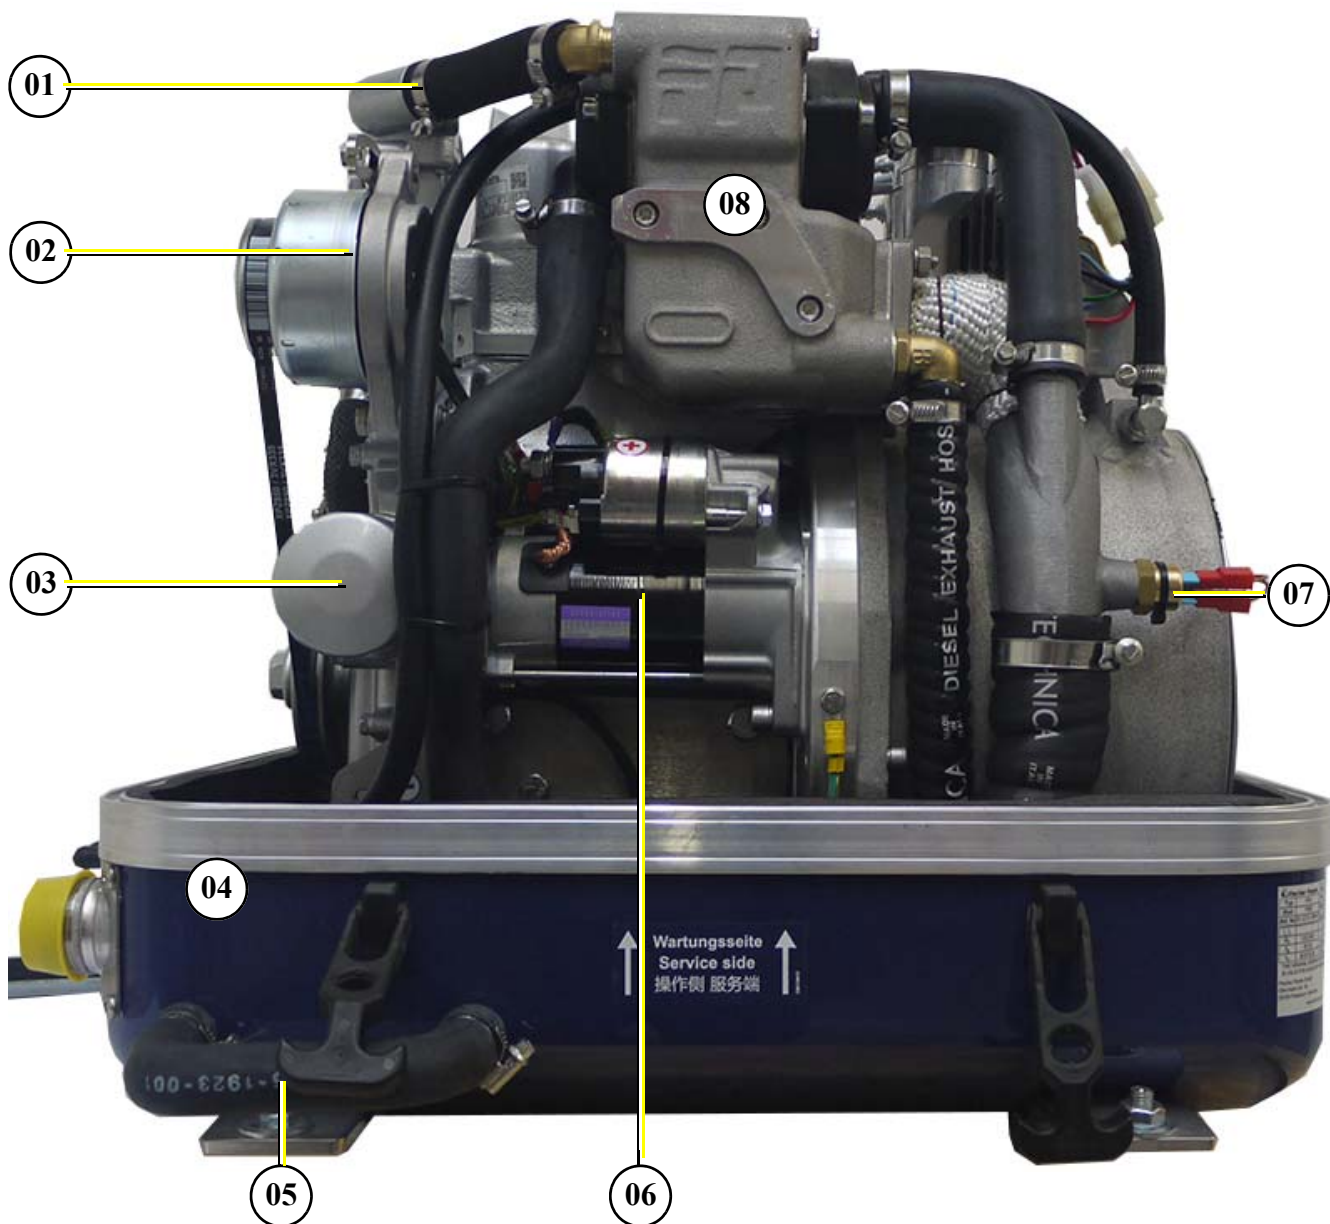

- |                           |   |
|---------------------------|---|
| 01) Thermostat housing    | 05) Connection point for external ventilation valve |
| 02) DC alternator         | 06) Starter motor                                   |
| 03) Oil filter            | 07) Thermo switch                                   |
| 04) Sound cover base part | 08) Heat exchanger                                  |

### 3.2.7 Left side view - Panda 5K PMS

Fig. 3.2.7-1: Left side view

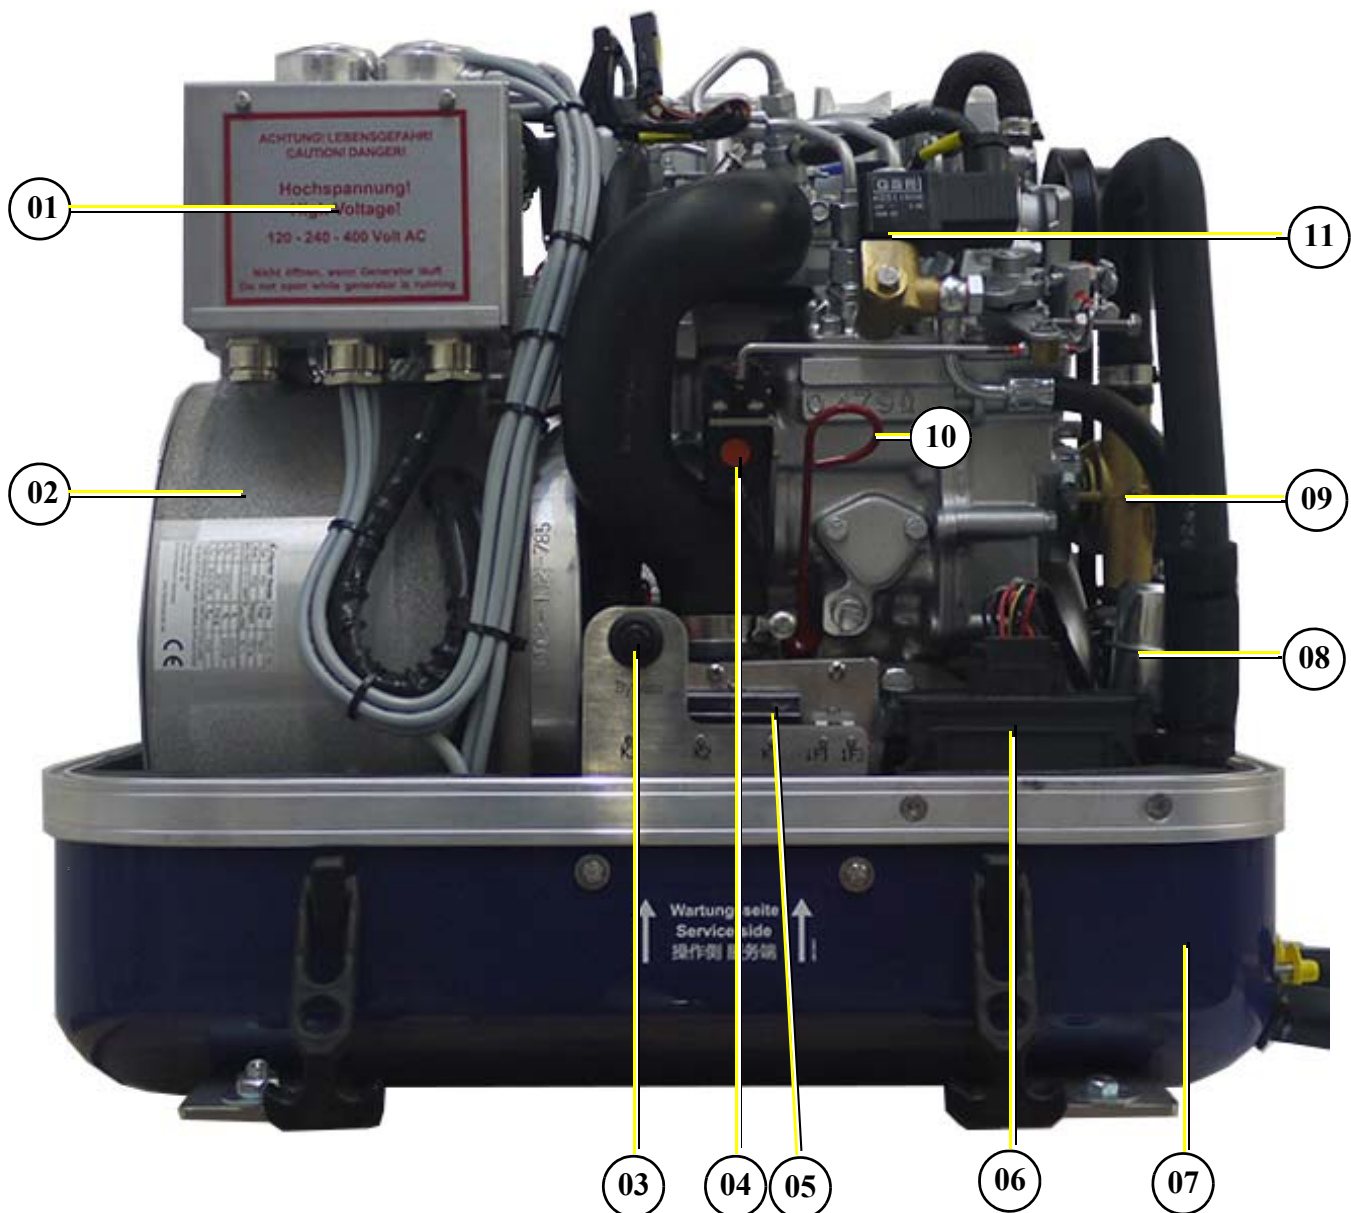


- |                                       |                           |
|---------------------------------------|---------------------------|
| 01) Generator terminal box            | 07) Sound cover base part |
| 02) Generator housing with coil       | 08) Fuel filter           |
| 02) Failure bypass switch             | 09) Raw water pump        |
| 04) Actuator                          | 10) Oil dipstick          |
| 05) DC terminal with relays and fuses | 11) Fuel solenoid valve   |
| 06) Boost electronic                  |                           |



### 3.2.8 Front view - Panda 5K PMS

Fig. 3.2.8-1: Front view

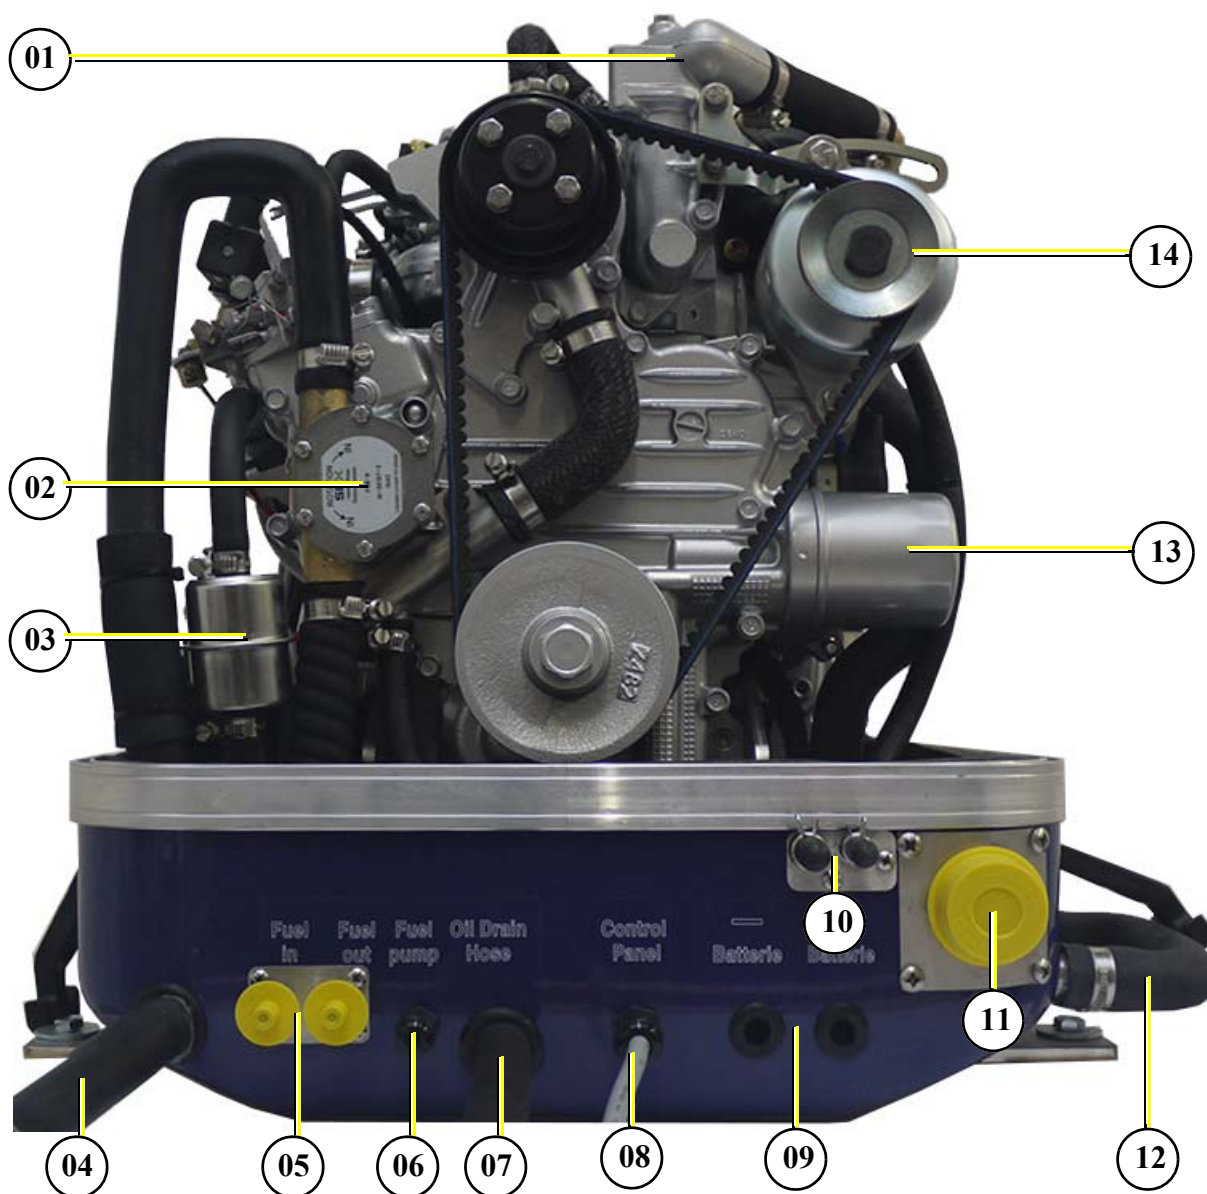


- |                                 |   |
|---------------------------------|---|
| 01) Thermostat housing          | 08) Cable for remote control panel                  |
| 02) Raw water pump              | 09) Passage for starter battery cables              |
| 03) Fuel filter                 | 10) Connections to external expansion tank          |
| 04) Raw water in                | 11) Exhaust out                                     |
| 05) Fuel in/out                 | 12) Connection point for external ventilation valve |
| 06) Passage for fuel pump cable | 13) Oil filter                                      |
| 07) Oil drain hose              | 14) DC alternator                                   |



### 3.2.9 Back view - Panda 5K PMS

Fig. 3.2.9-1: Back view

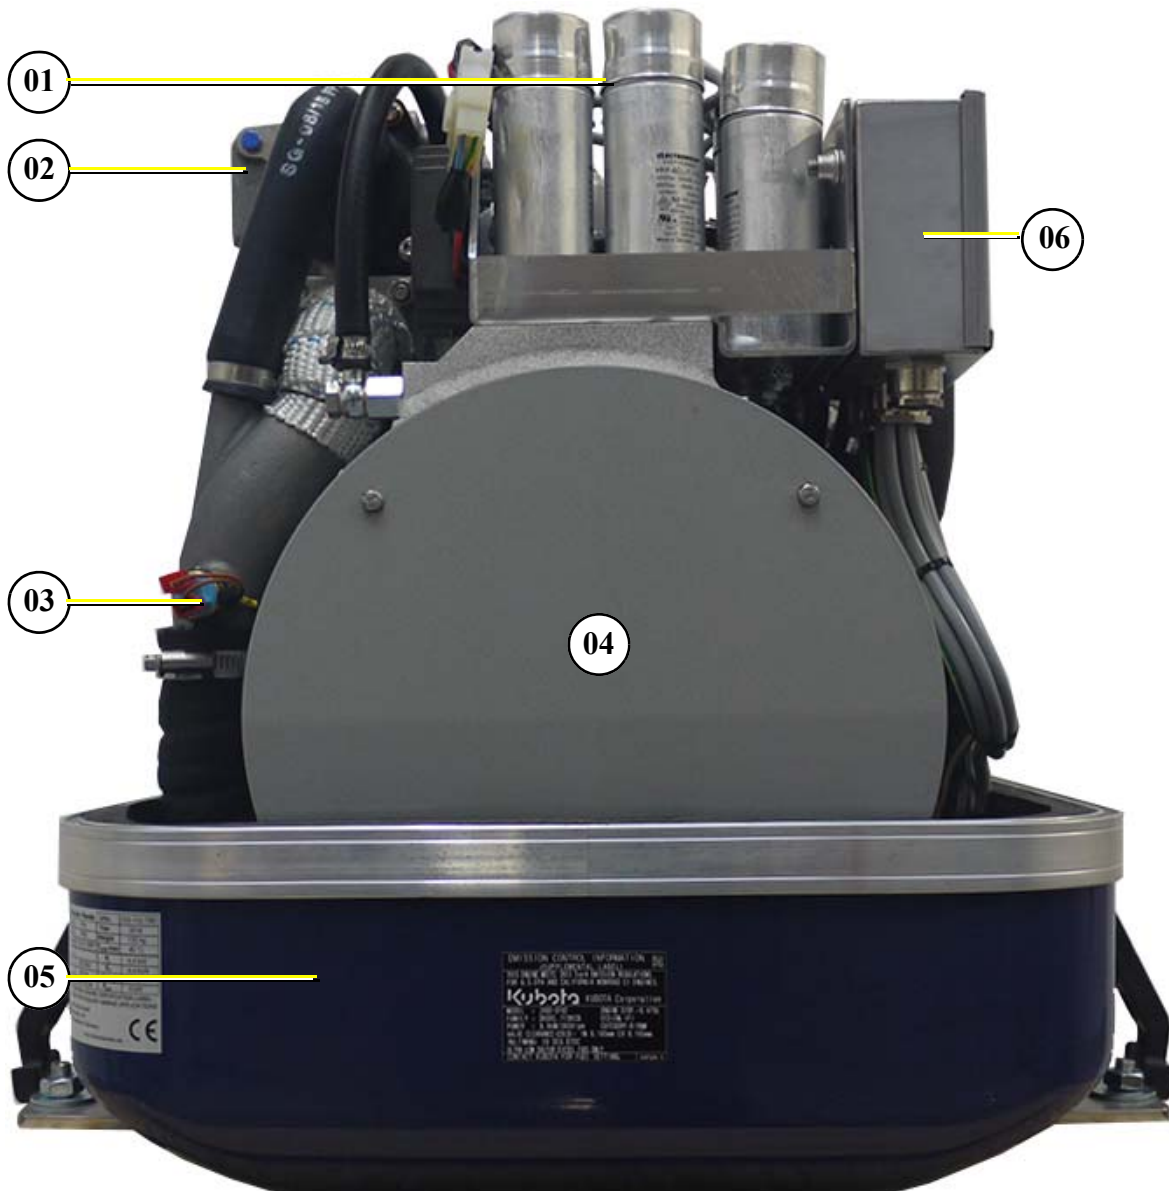


- 01) Capacitors
- 02) Heat exchanger
- 03) Thermo switch

- 04) Generator front plate
- 05) Sound cove base part
- 06) Generator terminal box

### 3.2.10 View from above - Panda 5K PMS

Fig. 3.2.10-1: View from above

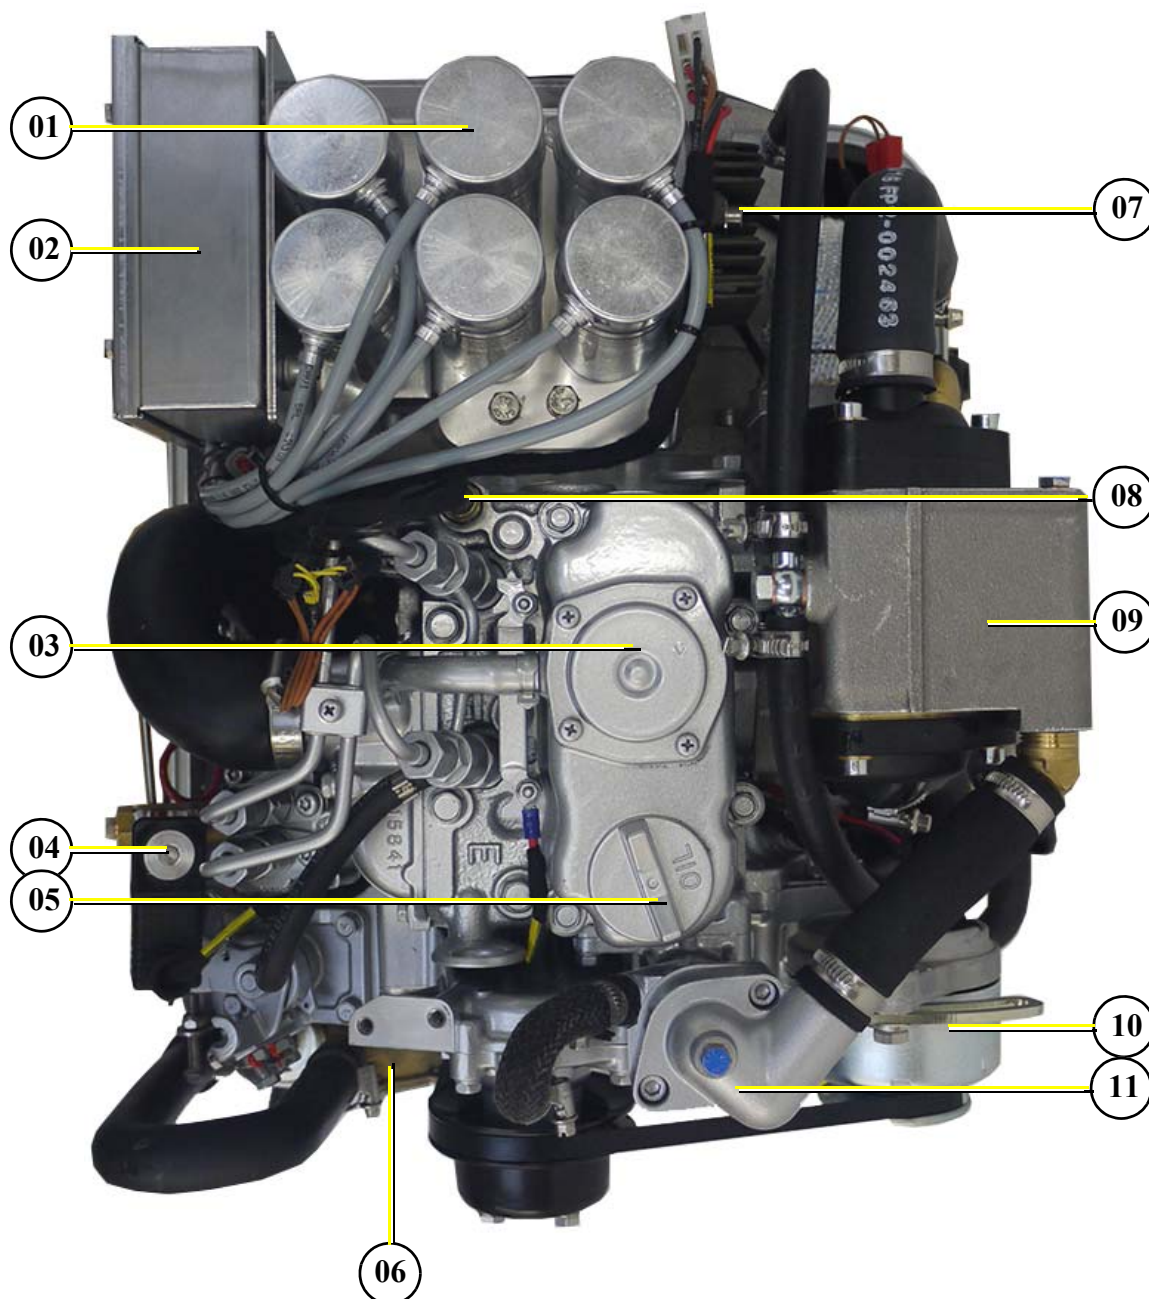


- 01) Capacitors
- 02) Generator terminal box
- 03) Valve cover
- 04) Fuel stop solenoid
- 05) Oil filler neck
- 06) Raw water pump

- 07) Regulator for DC alternator
- 08) Thermo switch at cylinder head
- 09) Heat exchanger
- 10) DC alternator
- 11) Thermostat housing

### 3.2.11 Right side view - Panda 7K PMS

Fig. 3.2.11-1: Right side view

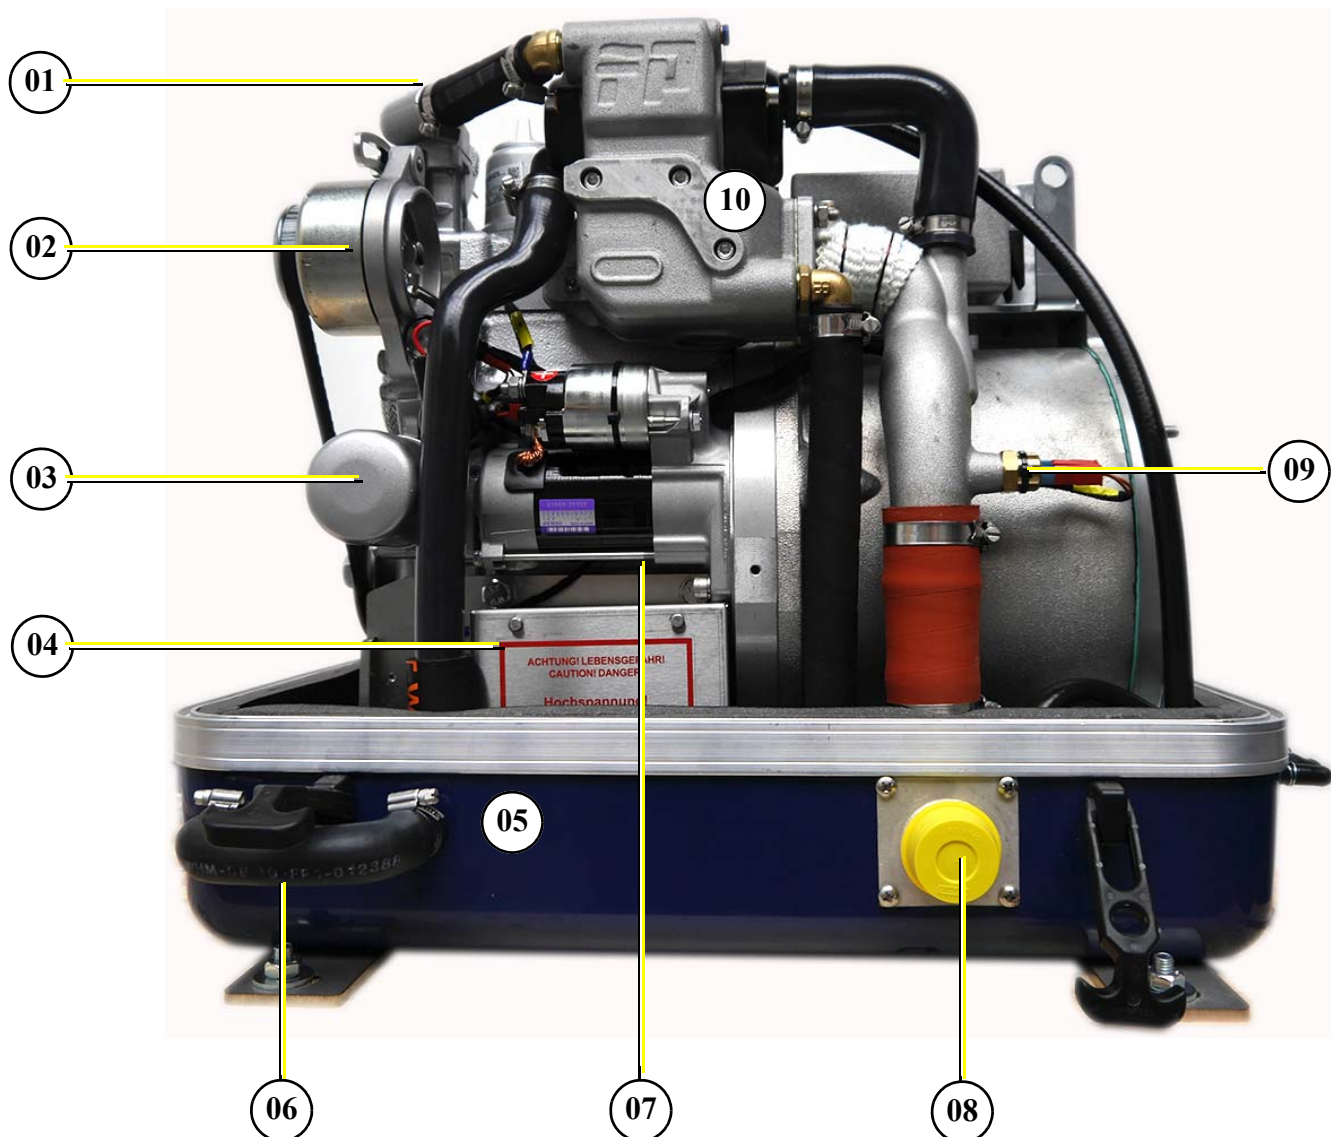


- |                            |   |
|----------------------------|---|
| 01) Thermostat housing     | 06) Connection point for external ventilation valve |
| 02) DC alternator          | 07) Starter motor                                   |
| 03) Oil filter             | 08) Exhaust out                                     |
| 04) Generator terminal box | 09) Thermo switch                                   |
| 05) Sound cover base part  | 10) Heat exchanger                                  |



### 3.2.12 Left side view - Panda 7K PMS

Fig. 3.2.12-1: Left side view

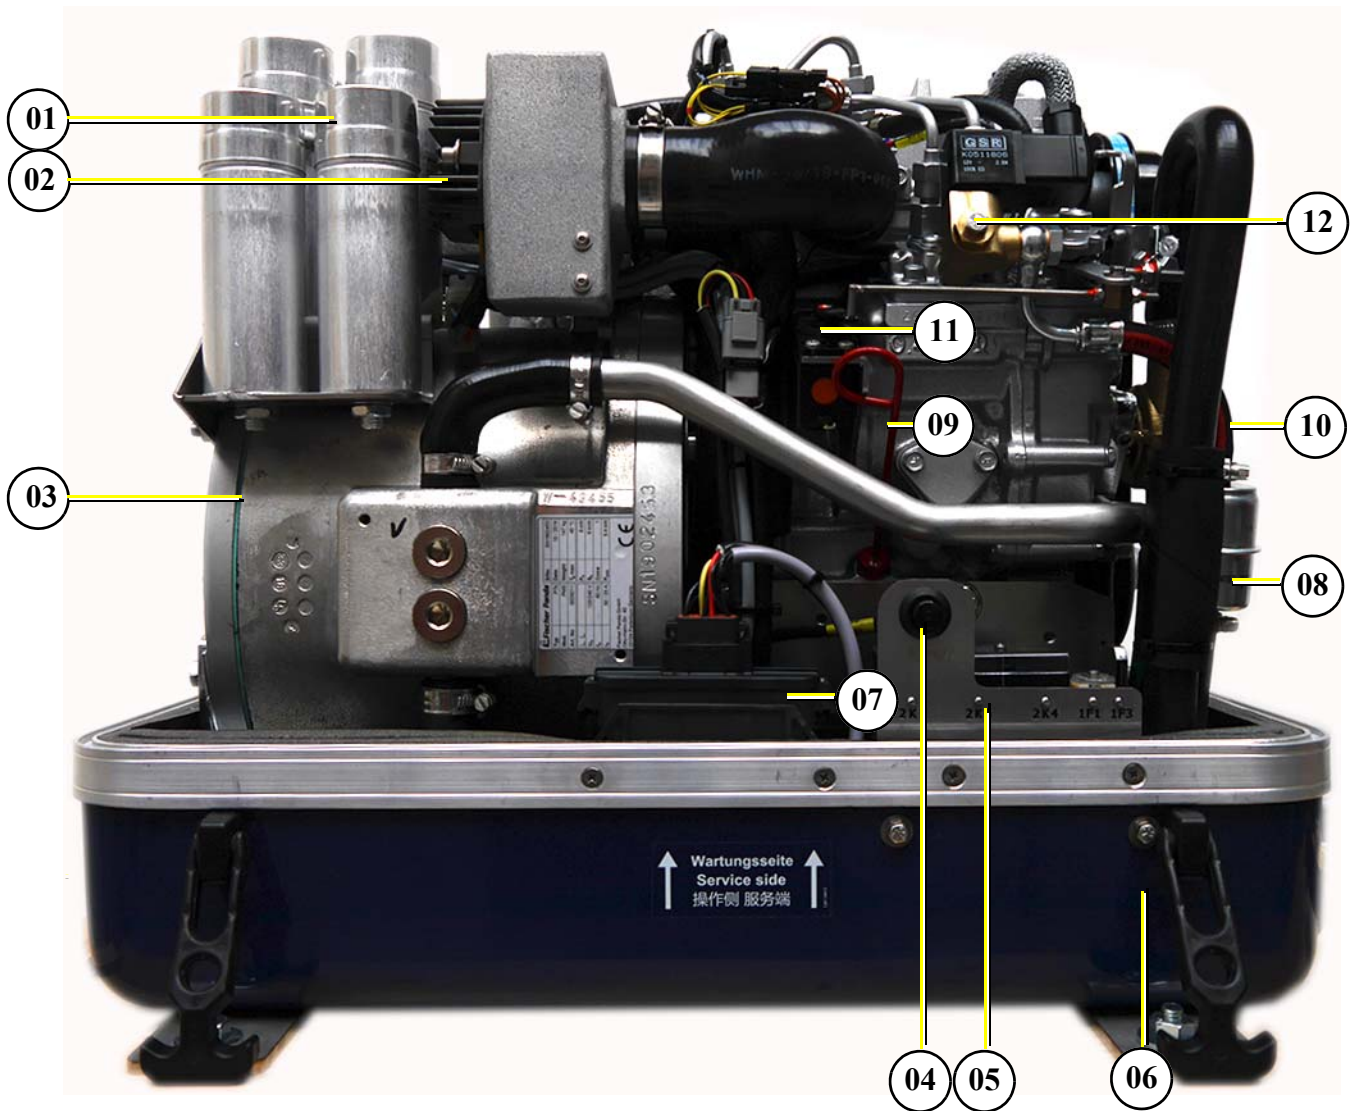


- 01) Capacitors
- 02) DC regulator for DC alternator
- 03) Generator housing with coil
- 04) Failure bypass switch
- 05) DC terminal with relays and fuses
- 06) Sound cover base part

- 07) Boost electronic
- 08) Fuel filter
- 09) Oil dipstick
- 10) Raw water pump
- 11) Servo for rpm regulation
- 12) Fuel solenoid valve

### 3.2.13 Front view - Panda 7K PMS


Fig. 3.2.13-1: Front view

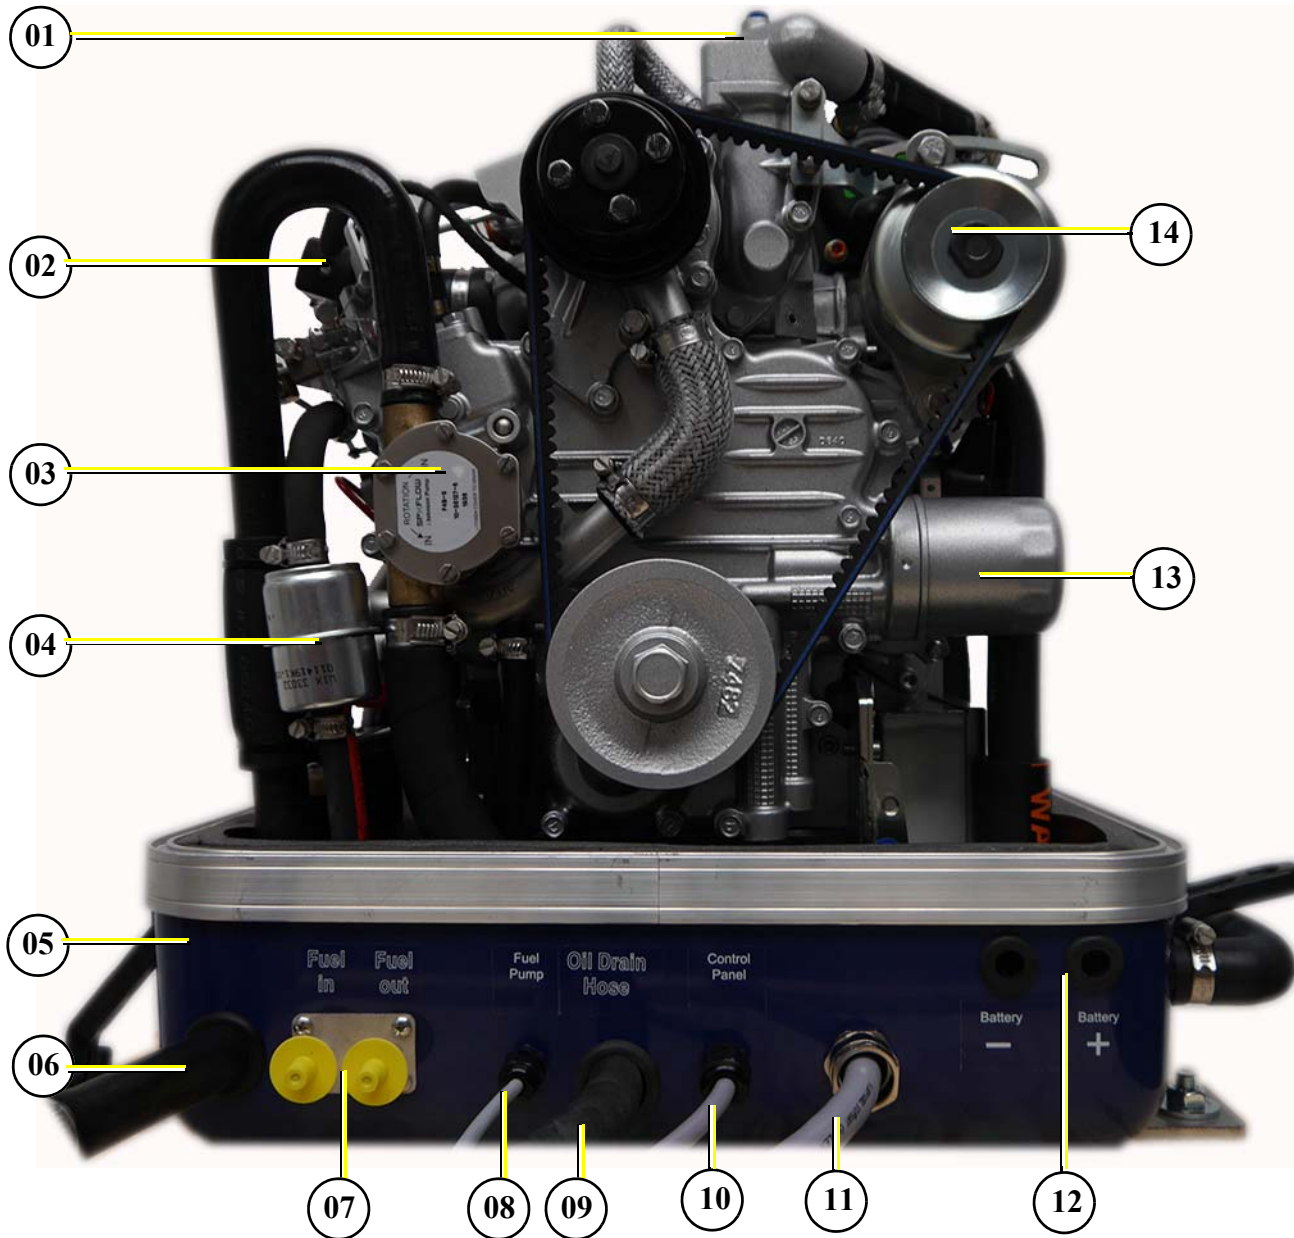

- |                           |  |
|---------------------------|--|
| 01) Thermostat housing    | 08) Fuel pump cable                    |
| 02) Fuel solenoid valve   | 09) Oil drain hose                     |
| 03) Raw water pump        | 10) Cable for remote control panel     |
| 04) Fuel filter           | 11) Load cable                         |
| 05) Sound cover base part | 12) Passage for starter battery cables |
| 06) Raw water in          | 13) Oil filter                         |
| 07) Fuel in/out           | 14) DC alternator                      |

### 3.2.14 Back view - Panda 7K PMS

Fig. 3.2.14-1: Back view

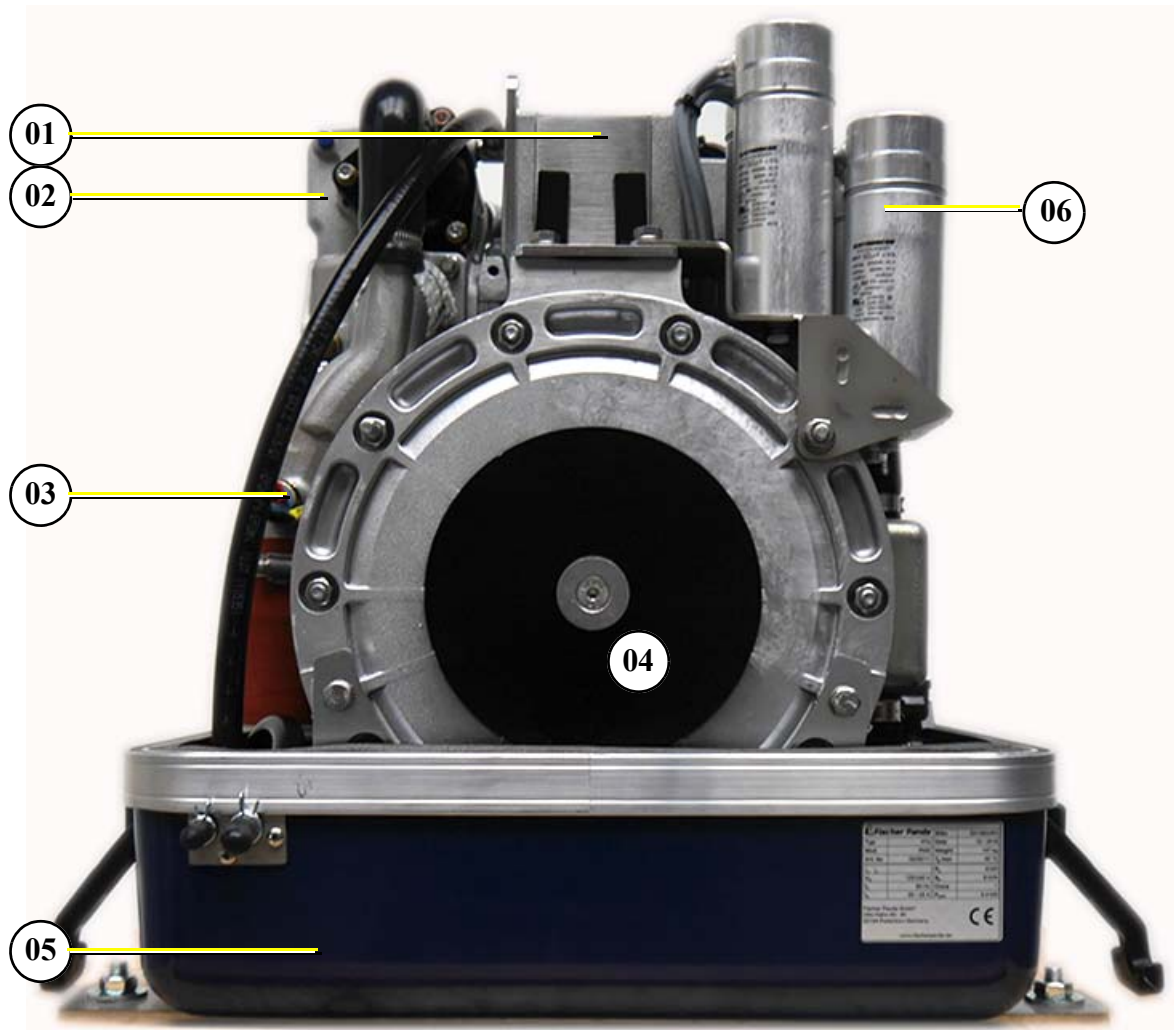

- 01) Air filter
- 02) Heat exchanger
- 03) Thermo switch


- 04) Generator front plate
- 05) Sound cover base part
- 06) Capacitors

### 3.3 Details of functional units

#### 3.3.1 Control panel

The control panel is fitted with various monitoring functions, which increase functional reliability and operating safety of the generator. Various parts of the generator are monitored with sensors which, when triggered, generate an error message and can shut down generator operation under certain circumstances to prevent damage.

Fig. 3.3-1: Remote Control Panel - Front Side

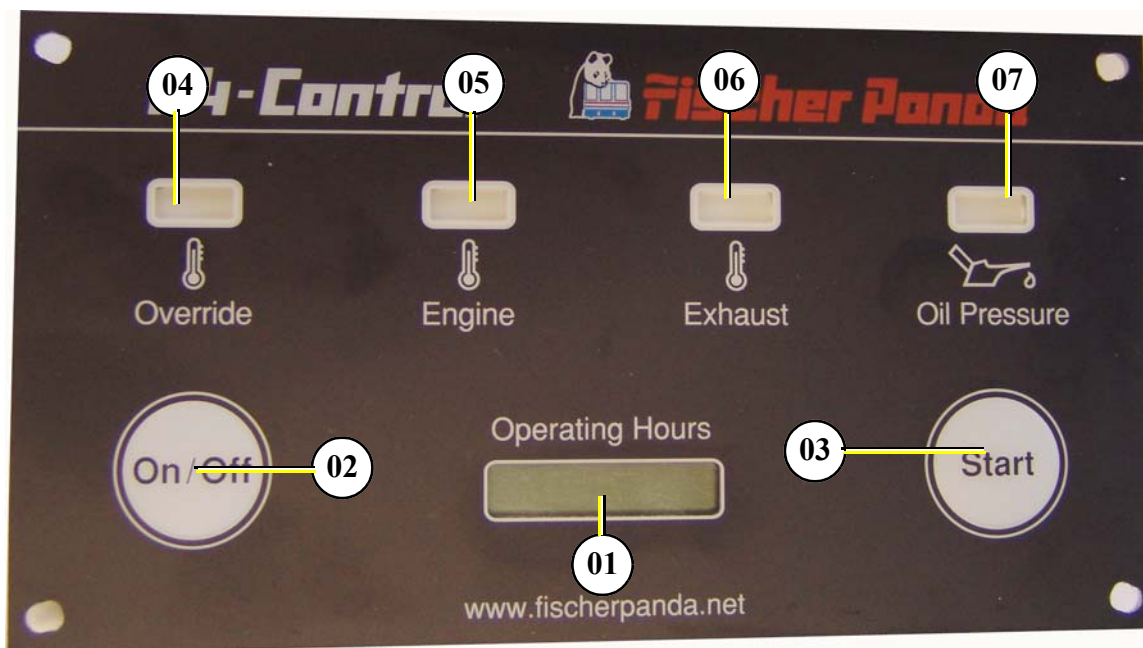

- |                              |   |
|------------------------------|---|
| 01) Display operating hours  | 05) Warning light for engine temperature  |
| 02) Power „ON/OFF“-button    | 06) Warning light for exhaust temperature |
| 03) Generator „Start“-button | 07) Warning light for oil pressure        |
| 04) Control light „Override“ |   |

See remote control panel data sheet for details!


Notice!:





### 3.3.2 Components of cooling water system (raw water + fresh water)

Fig. 3.3.2-1: Two circle system

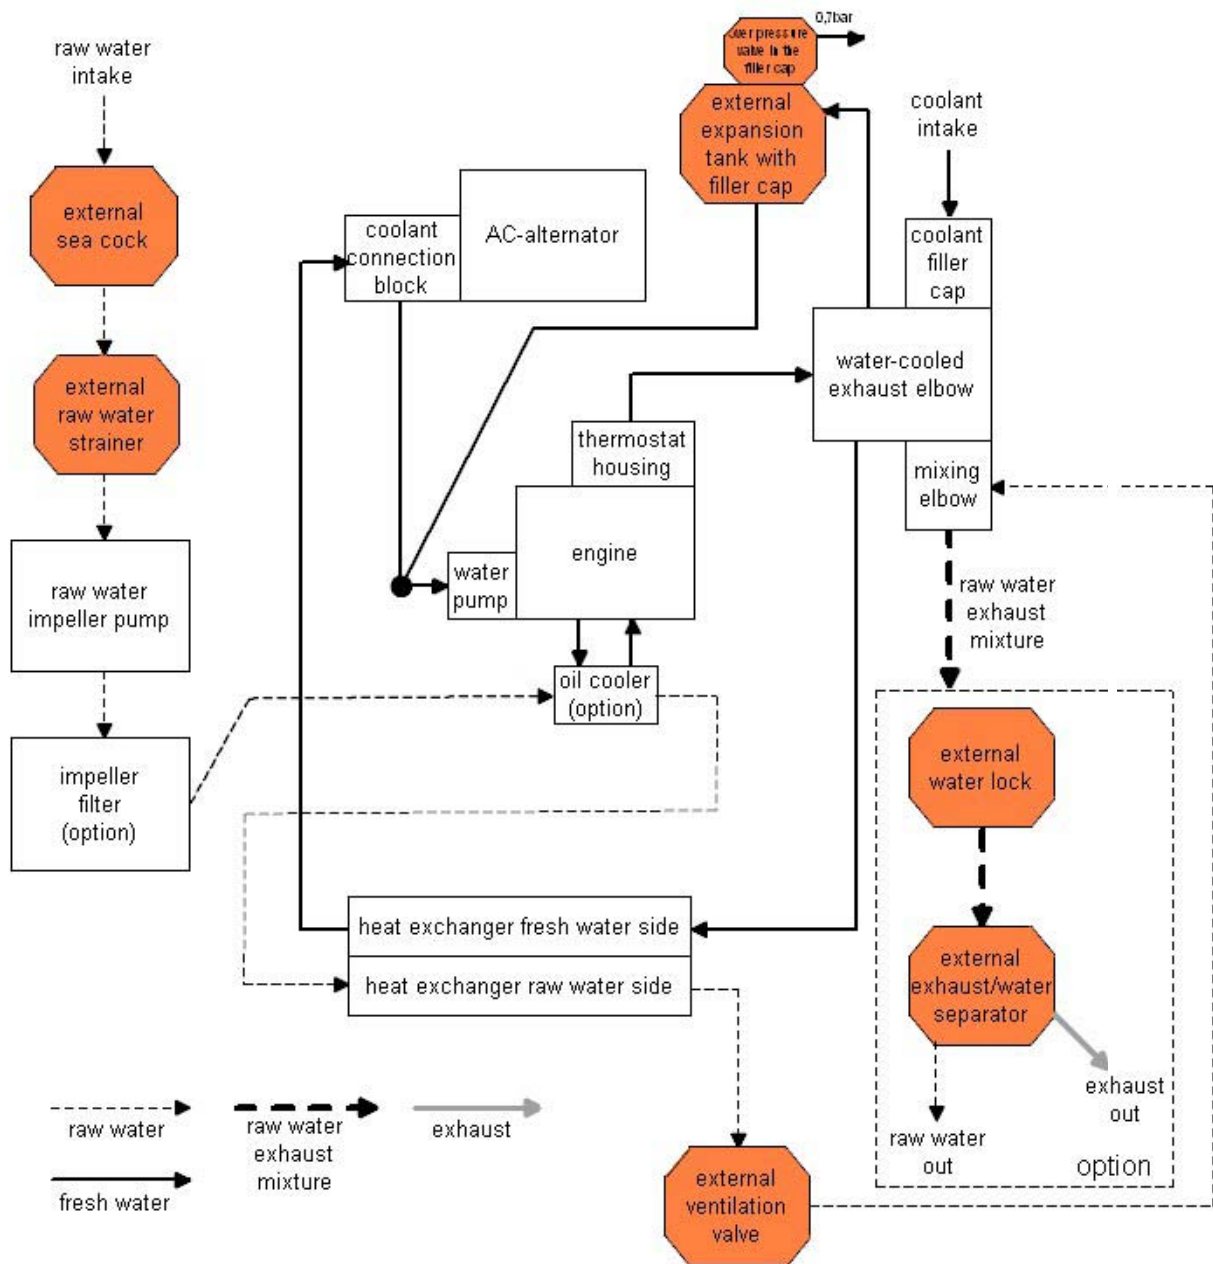



### 3.3.3 The fuel and combustion air system

---

*Fig. 3.3.3-1: Fuel and combustion air circle*

### 3.3.4 Sensors and switches for operation surveillance

#### Thermo-switch at cylinder head

The thermo-switch at the cylinder head serves to monitor the generator temperature.

Fig. 3.3.4-1: Thermo-switch at cylinder head



#### Thermo-switch at water-cooled exhaust elbow

This thermo switch is located at the water-cooled exhaust elbow union and serves to monitor the temperature of the fresh water cooling system. It takes a measurement at the hottest spot, since the combustion gases are guided from the cylinder head for the exhaust elbow.

Fig. 3.3.4-2: Thermo-switch at exhaust elbow




#### Thermo-switch in the generator coil

1. Generator coil
2. Thermo-switch
3. Housing

Two thermo switches are located inside the winding to protect the generator coil, which for safety reasons are installed independently in parallel.

Sample picture

Fig. 3.3.4-3: Thermo-switch coil

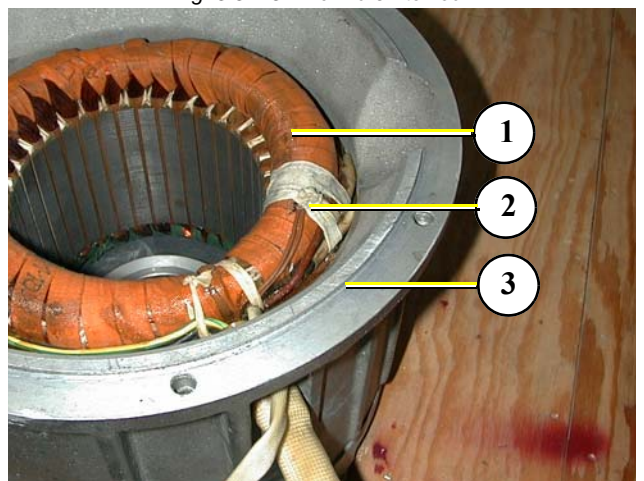

### Oil pressure switch


In order to be able to monitor the lubricating oil system, an oil pressure switch is built into the system.

Fig. 3.3.4-4: Oil pressure switch



### 3.3.5 The lubrication circuit

Fig. 3.3.5-1: Lubrication circuit

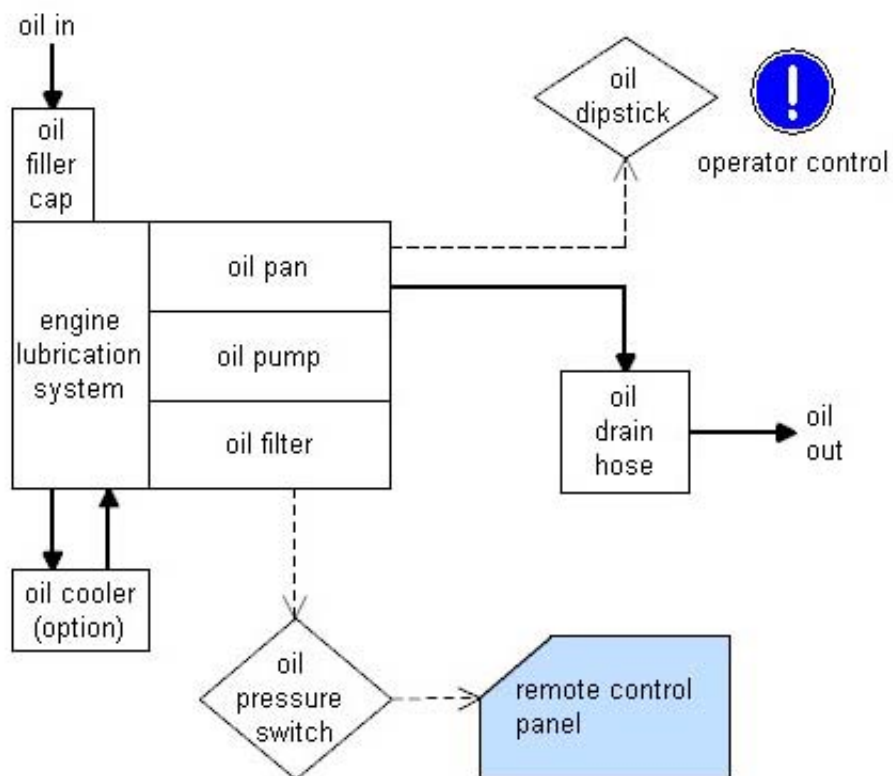

## 4. Generator operation instruction

### 4.1 Personal requirements

---

Only instructed persons are allowed to run the generator. Instructed Persons has read the manual of the generator and all ancillary components and external equipment. He must be acquaint with the specific risks and safety instructions.

Only persons who are expected to perform their tasks reliably are permitted as personnel. Persons whose reaction capability is impaired, e.g. through drugs, alcohol or medication are not permitted.

When selecting the personnel, the stipulations regarding age and occupation applying at the location must be observed.

#### 4.1.1 Hazard notes for the operation

---

**Please note the safety first instructions in front of this manual.**

**Notice!**



**Danger for life! - The generator can be equipped with a automatic start device. This means the generator can be started by an external signal.**

**Warning! Automatic start**



To avoid an unexpected starting of the generator, the starter battery must be disconnected before start working at the generator.

#### **Rotating parts inside of the generator**

**Attention! Danger to life**



Do not run the generator with removed sound cover. If it is necessary to test the generator without sound cover, pay special attention. Never do this work alone. Do all service, maintenance and repair with engine stopped.

**Danger for Life. Improper handling, operation, installation and maintenance can result in severe personal injury and/or material damage.**

**Attention! Danger to Life - High voltage**



Electrical voltages above 48 volts (battery chargers greater than 36 volts) are always dangerous to life). The rules of the respective regional authority must be adhered to. Only an electrician may carry out installation of the electrical connections for safety reasons.

## 4.2 General operating instruction

---

### 4.2.1 Operation at low temperatures

---

The Generator can be started at temperatures down to - 20 °C, therefor the operation fluids like fuel, cooling water, lubricant oil ect. must be suitable for this temperatures. These should be checked before start. Cold start spray ect. are not allowed to use, or the warranty will be lost.

#### 4.2.1.1 Pre-heating the diesel motor

Pre-chamber diesel engines are equipped with a quick glow plug. The maximum pre glow time should not exceed 20 sec. At 20 °C or more the pre glow time should be about 5-6 sec. Below 20 °C the pre glow time should be increased.

**If the operation fluids have been drained and then filled with cold weather fluids, always run the generator for 10 minutes to ensure the new fuel is present throughout the system.** **Note!**



#### 4.2.1.2 Tips regarding starter battery

Fischer Panda recommends normal starter battery use. If a genset is required for extreme winter conditions, then the starter battery capacity should be doubled. It is recommended that the starter battery be regularly charged by a suitable battery-charging device (i.e., at least every 2 months). A correctly charged starter battery is necessary for low temperatures.

### 4.2.2 Light load operation and engine idle

---

If an engine is operated on a load less than 25-30 % of its rated output, the soot of the generator will be observed which may give cause for concern. The usual results of this operation are heavier than normal lubricating oil consumption, and oil leaks from the air and exhaust manifolds. This condition is particularly evident on standby generator set applications.

#### 4.2.2.1 The soot of the generator is due to the fact that:

The cylinder temperatures are too low to ensure complete burning of all the fuel delivered.

A further result is that of abnormal carbon build-up on the valves, piston crowns and exhaust ports. Fuel dilution of the lubricating oil will also occur.

#### 4.2.2.2 To prevent the soot of the generator following steps should be observed:

Running on light load should be avoided or reduced to the minimum period.

In a period of 50 operation hours the engine or generator set should be run on full load for four hours, to burn off accumulations of carbon in the engine and exhaust system. This may require the use of a 'dummy load'. The load should be built up gradually from 30 % to 100 % within 3 hours and hold at 100 % for one hour.

### 4.2.3 Generator load for a longer period and overload

---

Ensure the generator is not overloaded. Overloading occurs when the electrical load is higher than the generator can provide. If this occur for a longer period, the engine may be damaged. Overloading may cause rough running, high oil and fuel consumption, increased emissions.

For a long engine life, the long term load should not exceed 80 % of the nominal load. Long term load is the load over several hours. It is harmless for the generator to deliver full nominal power for 2-3 hours.

The whole conception of the Fischer Panda generator make sure, that the full power operation at extreme condition will not increase the engine temperatures over. Please note that the emissions of the generator also increase at full power operation.

#### 4.2.4 Protection conductor:

---

The standard Panda generator is grounded. The 3-phase connection (delta) centre point is bridged to earth in the AC output terminal box (mounted on the generator). This is the initial earth safety point and is sufficient to ensure safe operation however only as long as no other system is installed. This system is adapted to enable test running of the generator before delivery.

The bridge to ground (PEN) is only effective when all components in the electrical system share a common ground. The bridge to ground can be removed and reconnected to another ground system if required for other safety standards.

Full voltage connections are mounted in the electrical cabinet. It must be ensured that the electrical cabinet is secured and closed while the generator is running.

The starter battery cable should be disconnected when work is being done on either the generator or the electrical system in order to prevent accidental starting of the generator.

#### 4.2.5 Operating control system on the Fischer Panda generator

---

Fischer Panda generators are equipped with various sensors/temperatures switches. The combustion engine is further equipped with a oil pressure control switch, which switches the motor off, if the oil pressure sinks to a particular level.

### 4.3 Instructions for capacitors - not present at all models

---

#### Danger to Life - High voltage

#### Caution!

Do not touch the capacitor contact terminals!



The generator's electrical system requires two different groups of capacitors:

- A) The booster capacitors
- B) The operating capacitors

Both types are mounted in the electrical cabinet. (At some models direct on the generator)

Capacitors store an electrical charge. It is possible that even after they have been disconnected stored energy is still held. Therefore it is essential that the connectors are not touched.

Should it be necessary to check or test the capacitors, they should be shorted out by using an insulated screw driver.

The operating capacitors are automatically discharged when the generator is stopped in the normal way. The booster capacitors will be discharged through internal resistors.

For safety however, the capacitors have to be discharged (short circuited) prior to carrying out any work on the AC-Control box.

### 4.4 Checks before start, starting and stopping the generator

---

See remote control panel data sheet/manual

**The instructions and regulations of the remote control panel data sheet/manual must be respected.** **Note:**

*Respect the safety instruction in front of this manual.*



## 4.5

---

---

Leere Seite / Intentionally blank



## 5. Installation Instructions

All connections (hoses, wires etc) and installation instructions are designed and suited for "standard" installation situations.

In situations where Fischer Panda has no detailed information concerning certain installation requirements (such as vehicle specifications, maximum vehicle speed -and all other conditions concerning special operating situations) the installation instructions should be used as an example guide only.

The installation must be undertaken and proved by a suitable qualified/trained person and may in accordance with the law as required by the country and special situation.

Damages caused by faulty or incorrect installation are not covered by the warranty.

### 5.1 Personal requirements

The described installation must be done by a technical trained person or a Fischer Panda service point.

#### 5.1.1 Hazard notes for the installation

see "Safety first!" on Page 10.

Follow the general safety instruction at the front of this manual.

**Working at a running generator can result in severe personal injury. Therefore before starting work at the generator:**


Make sure that the generator is stopped and the starter battery is decanted to guarantee that the generator cannot be inadvertently started.

Do not run the generator with removed sound isolation cover

**Improper installation can result in severe personal injuries or material damage.**

- Always undertake installation work when the generator is switched off.
- Ensure there is sufficient installation clearance before start working.
- Ensure tidiness and cleanliness at the workplace. Loose components and tools lying around or on top of each other are sources of accidents.
- Only perform installation work using commercially available tools and special tools. incorrect or damaged tools can result injuries.

**Notice!:**

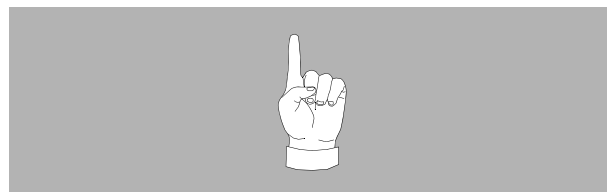

**Warning!: Risk of injury**



**Warning!: Risk of injury**





Oil and fuel vapours can ignite on contact with ignition sources. Therefore:

- No open flames during work on the generator.
- Do not smoke.
- Remove oil and fuel residues from the generator and floor.

Contact with engine oil, antifreeze and fuel can result in damage to health. Therefore:

- Avoid skin contact with engine oil, fuel and antifreeze.
- Remove oil and fuel splashes and antifreeze from the skin immediately.
- Do not inhale oil and fuel vapours.

**Danger for Life. Improper handling, operation, installation and maintenance can result in severe personal injury and/or material damage.**

Electrical voltages above 48 volts (battery chargers greater than 36 volts) are always dangerous to life). The rules of the respective regional authority must be adhered to. Only an electrician may carry out installation of the electrical connections for safety reasons.

**Generator, oil and antifreeze can be hot during/after operation. Risk of severe burns.**

**During Installation/maintenance personal protective equipment is required to minimize the health hazards.**

- Protective clothing
- safety boots
- protective gloves
- Ear defender
- safety glasses

**Disconnect all load during the work at the generator to avoid damages at the load.**

**-Warning!: Danger of fire**



**Danger!: Danger of poisoning**



**ATTENTION!: Danger to Life - High voltage**



**Warning!: Hot surface/material**



**Instruction!: protective equipment necessary.**



**Attention!: disconnect all load**



## 5.2 Preparing the base - Placement

Since Panda generators have extremely compact dimensions, they can be installed in tight locations. Attempts are sometimes made to install them in almost inaccessible places. Please consider that even almost maintenance-free machinery must still remain accessible at least at the front (drive belt, water pump) and the service-side (actuator, dipstick). Please also note that in spite of the automatic oil-pressure sensor it is still essential that the oil level has to be checked regularly.

The generator should not be placed in the proximity of light walls or floors, which can have resonance vibrations because of airborne sounds. If this should be unavoidable, then it is recommended that this surface is lined with 1 mm lead foil, which will change the mass and the vibration behaviour.

You should avoid fixing the generator on a slippery surface with little mass (i.e.). This acts as an amplifier of airborne sounds in the most unreasonable case. An improvement can be achieved by reinforcing these surfaces with ribs. In addition, the breakthroughs, which interrupt these surfaces, should be sawed off. The lining of the surrounding walls with a heavy layer (i.e. lead) and foam additionally improve the conditions.

The generator sucks its air from the surrounding engine room. Therefore it must be ensured that sufficient ventilation openings are present, so that the generator cannot overheat.

High temperature of the intake air decline the power of the generator and increases the coolant temperature. Air temperatures of more than 40 °C reduce the power by 2 % per temperature rise of 5 °C. In order to keep these effects as small as possible, the temperature in the engine room should not be higher than 15 °C in relation to the outside temperature.


### 5.2.1 Advice for optimal sound insulation

The convenient base consists of a stable framework, on which the generator is fastened by means of shock-mounts.

Since the aggregate is „free“ downward, the combustion air can be sucked in unhindered.

In addition are void the vibrations, which would arise with a closed soil.

Fig. 5.2.1-1: Generator base

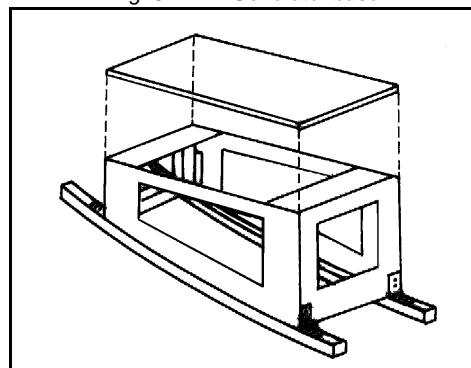

## 5.3 Generator Connections

Connect all electrical wires within the capsule tightly to the motor and the generator. This is also the case for fuel lines and cooling water lines.

The electrical connections **MUST** be carried out according to the respective valid regulations. This also concerns used cable materials. The cable supplied is meant for laying „protected“ (i.e. in pipe) at a temperature up to a max. of 70 °C (160 °F). The on-board circuit must also be fitted with all essential fuses.

**Before working (installation) on the System read the section „Safety Instructions“ in this Manual.**

**Attention!**



## 5.4 Installation of the cooling system - raw water

### 5.4.1 General Information

The genset should have its own raw water (coolant water) inlet and should not be connected to any other engine systems. Ensure that the following installation instructions are complied with:


**For the avoidance of galvanic corrosion, refer to the chapter „Service instruction for marine generators (corrosion protection)“.**

### 5.4.2 Installation of the through hull fitting in yachts

It is good practice for yachts to use a through hull fitting with an integrated strainer. The through hull fitting (raw water intake) is often mounted against the sailing direction to induce more water intake for cooling.

**For Panda generators, the through hull inlet should NOT point in the sailing direction! When sailing at higher speeds more water will be forced into the inlet than the pump can handle and your generator will flood!**

Fig. 5.4.2-1: Position of the through hull fitting

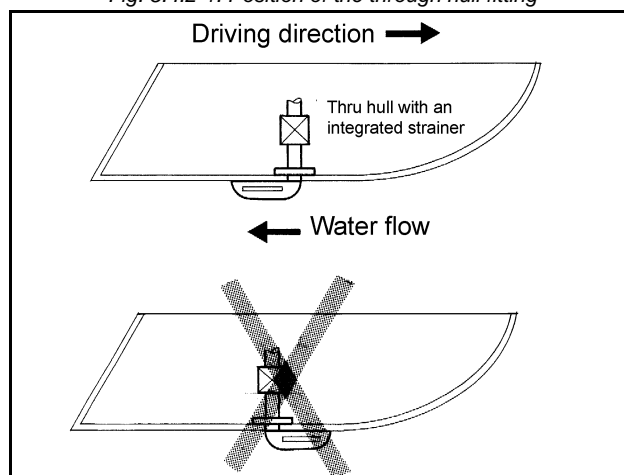

### 5.4.3 Quality of the Raw Water Sucking In Line

In order to keep the suction resistance in the line at a minimum, the raw water intake system (i.e. sea cock, through-hull fitting, inlet filter, etc.) must have an inner diameter of at least 1" (25 mm).

This applies also to installation components such as through-hull fitting, sea cock, raw water filter etc.

The intake suction line should be kept as short as possible. Install the raw water inlet in close proximity to the genset.

**After start-up the cooling water quantity must be measured (e.g. by catching at the exhaust). The flow rate, as well as the necessary cross section of the cooling water pipe see section 8.5, "Diameter of conduits," on page 155 .**

### 5.4.4 Generator installation above waterline

The Panda is equipped with a direct drive water intake pump mounted directly on the motor. Since the intake pump is an impeller pump there are wearing parts which are likely to require replacement after a period of time. Ensure that the genset is installed so that the intake pump can be easily accessed. If this is not possible, an external intake pump could be installed in an easily accessible location.

If the generator is installed above the waterline, it is possible that the impeller will wear out faster, because after starting, the pump runs dry for some seconds.

The raw water hose should form a loop as near as possible to the raw water inlet of the generator (see picture below). This ensures the pump only sucks in air for a short time. The impeller pump will be lubricated by raw water and the impeller life span will be increased.

By the installation of a check valve in the raw water inlet line, which is under the waterline, this problem can be restricted.

The impeller pump will remain intact longer, if an electrical booster pump is installed, and is strongly recommended in order to preserve the impeller pump.

**Never change the impeller for many years, without exchanging the old pump. If the sealing ring is defective within the pump, raw water runs into the sound cover of the genset. A repair is then very expensive.**

**Note:**




**Replacement impeller and also a spare pump should always be on board. The old pump can be sent back to Fischer Panda.**

#### Installation above water level

1. Raw water filter
2. Water cock
3. Through hull

Make certain that the raw water filter lies above the water level, otherwise when cleaning, water can penetrate by the through hull. An external pre-pump can relieve the impeller.

Fig. 5.4.4-1: Installing the generator above the water level

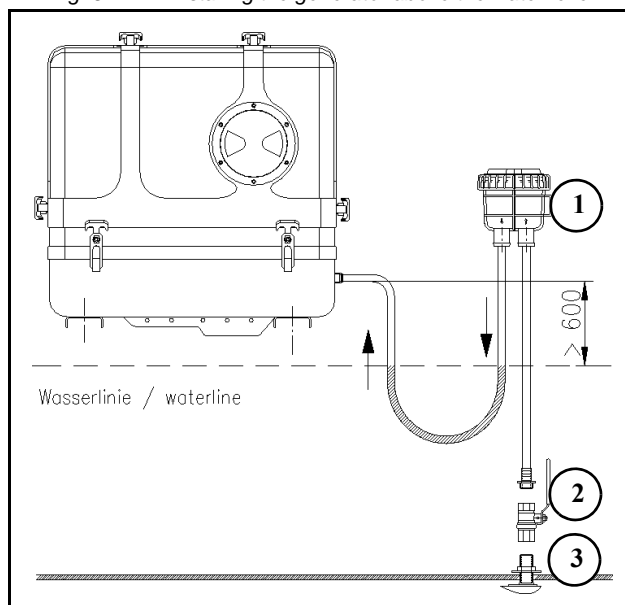

### 5.4.5 Generator Installation below waterline

If the generator cannot be attached at least 600 mm above the waterline, a vent valve must be installed at the raw water line.

Possible heeling must be taken into consideration if installed at the „mid-ship line“!

The water hose for the external vent valve is located at the back of the sound insulated cover. This hose is split in the middle and extended respectively at each end by an additional hose and a connecting nipple. Both hose ends must be led outside of the sound cover to one point, if possible 600 mm over the waterline in the mid-ship line. The valve is connected at the highest place to the two hose ends.

Fig. 5.4.5-1: Vent valve



**The vent valve must be installed directly behind the water pump.**


Attention:



**If the water pump ceases, the valve spring ensures that air can enter and therefore, a syphon effect is avoided.**

**The de-aeration valve must be regularly controlled. If the water pump stops, the valve spring ensures that air enters. It must be opened, cleaned and greased.**

Fig. 5.4.5-2: Connection Vent Valve

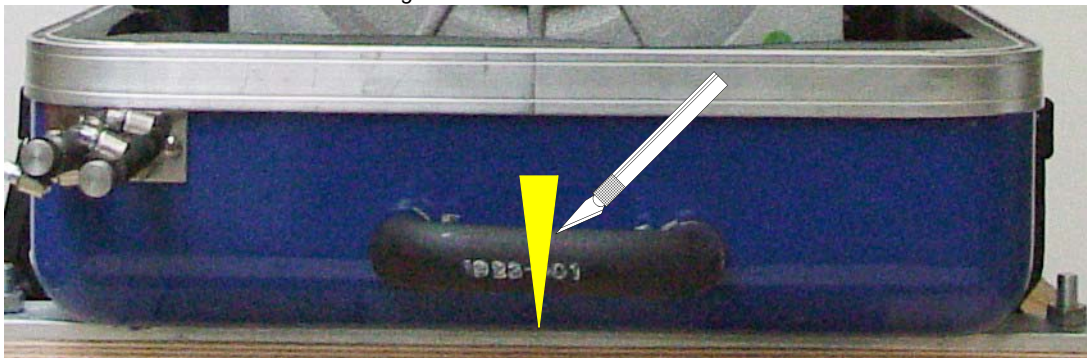


Cut the hose for the external vent valve....

...and bend it upwards.


Both hose ends must be led out outside of the sound cover to one point, if possible 600 mm over the waterline at the mid-ships line. The valve is connected at the highest place with the two hose ends.

Fig. 5.4.5-3: Connection vent valve

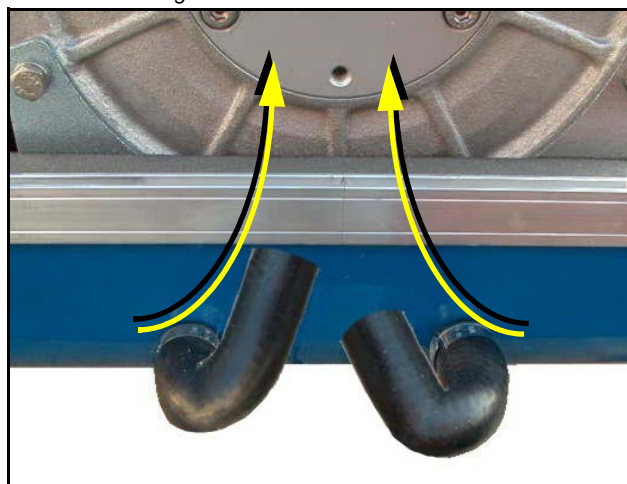

### 5.4.6 Generator housing cooled by raw water

Fig. 5.4.6-1: Installation scheme for direct cooling

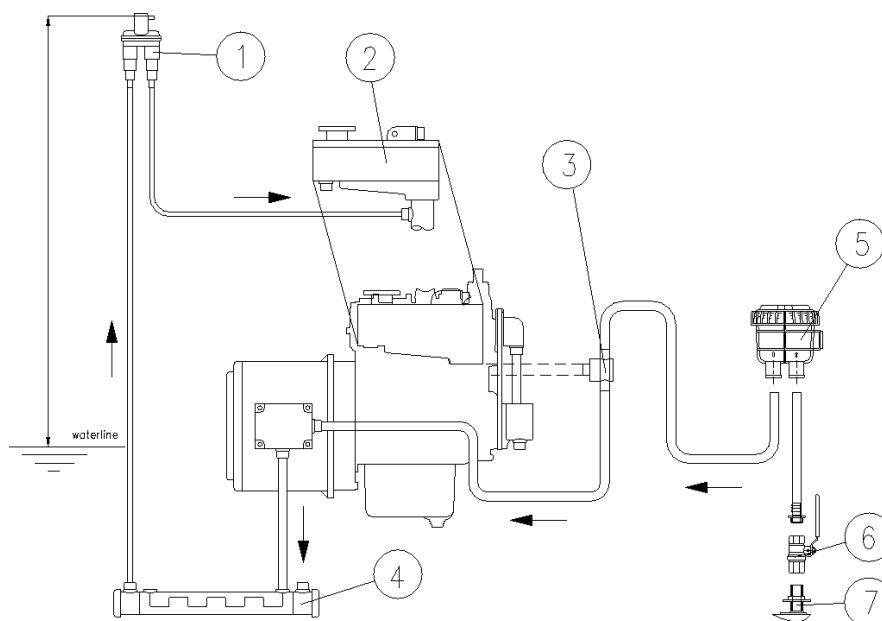


- 1. Vent valve
- 2. Coolant connection block
- 3. Raw water pump
- 4. Exhaust manifold

- 5. Raw water filter  $\varnothing$  1"
- 6. Water cock  $\varnothing$  1"
- 7. Through hull



### 5.4.7 Indirect cooling of the genset housing (by the heat exchanger)

Fig. 5.4.7-1: Installation scheme indirect cooling of the genset housing

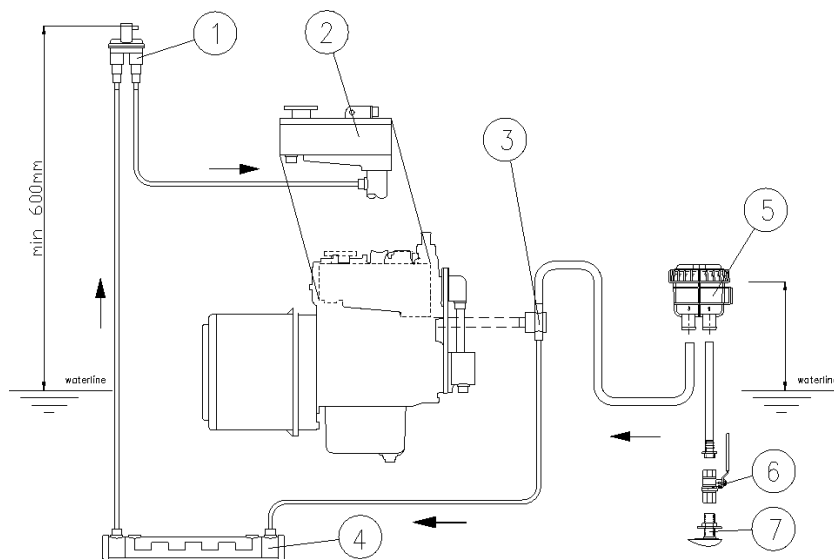

- |   |                     |
|---|---------------------|
| 1. Vent valve                               | 5. Raw water filter |
| 2. Exhaust manifold                         | 6. Water cock       |
| 3. Raw water pump (Raw water impeller pump) | 7. Hull inlet       |
| 4. Heat exchanger                           |                     |

## 5.5 Installation of the cooling system - fresh water


### 5.5.1 Position of the external cooling water expansion tank

#### Position of the external cooling water expansion tank

The Panda generator is normally supplied with an additional, external cooling water expansion tank. This tank must be installed in such a way that its lower edge is at least 500 mm more highly arranged than the upper edge of the sound cover.

If this 500 mm should be fallen below, i.e. the cooling water expansion tank is lower installed, very large problems can occur with filling and ventilating. Extend and displace the hose lines to the outside or possibly even up to the deck.

Fig. 5.5.1-1: Position of the external cooling water expansion tank

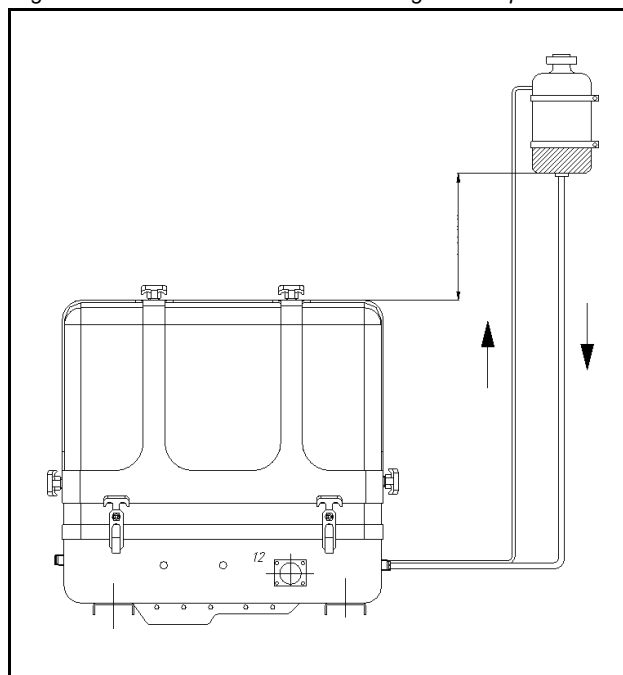

The external cooling water expansion tank may be filled only up to the lower edge of the lower tension tape (see note „max.“) in the maximum filling level in cold condition.

Attention!



## 5.5.2 Ventilating at the first filling of the internal cooling water circuit

### Expansion Tank

1. Fill up the external cooling water expansion tank with coolant.

**ATTENTION:** maximum fill level = „max.“- mark.

The cover of the external expansion tank temporarily must be opened (all other closures are now closed!).

Fig. 5.5.2-1: Expansion tank



### Venting Screws


2. Open venting screw on the pipe socket of the internal cooling water pump. Close the vent screw when air free water comes out

  - Check the water level in the expansion tank during the venting. Fill up if necessary.

Never open the vent screw while the generator is running.

*Sample picture*

Fig. 5.5.2-2: Venting screw - internal cooling water pump

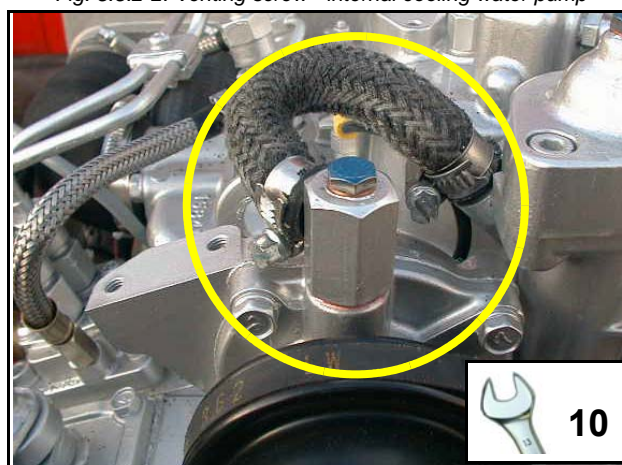

3. Open vent screw on the thermostat housing. Close the vent screw when air free water comes out

  - Check the water level in the expansion tank during the venting. Fill up if necessary.

Never open the vent screw while the generator is running


*Sample picture*

4. Start the Generator

After filling the generator it must be started. During this first phase of start-up, the generator may not be loaded. Switch the generator off after about 10 sek. of operation!

5. Repeat the steps 1-4 till no air comes out of the vent screw at thermostat housing.
6. Close the vent screws.

Fig. 5.5.2-3: Venting screw - thermostat housing

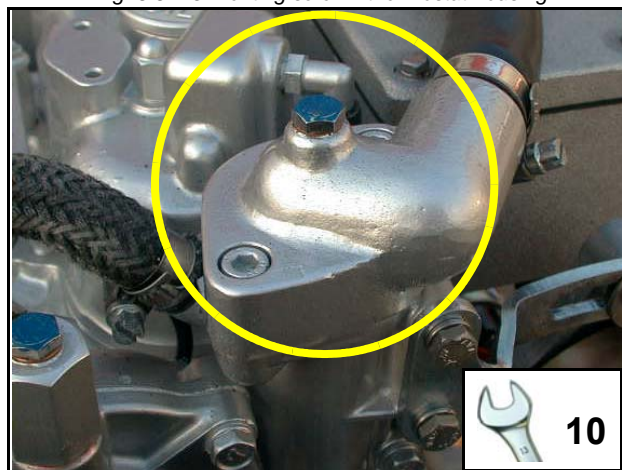

7. Fill up the expansion tank.
8. Close the expansion tank.
9. Re-ventilating process 10 Operating hours after the first start-up (and if necessary)

**Also after the first implementing a small amount of air can be reside in the cooling circuit. To ensure an immaculate and actual operating of the cooling system the ventilating process must be repeated casual in the next few days (weeks, if necessary). Small amount of air will still exit out of the ventilating openings, especially if the generator stood still for a long time.**

**During the ventilating process repeated checks must be made to check the cooling water is indeed circulating. If there are air bubbles in the internal cooling water pump, it could be that the cooling water is not circulating. The generator will heat up very quickly and switch off, because of overheating.**

**Attention!**



#### *Anti-freeze*

*In the interest of safety, the freezing point of the closed circuit coolant should be checked on a regular basis. Be sure that the coolant/antifreeze mixture is good for at least -15 °C (5 °F) and if it is possible that your genset experiences lower temperatures, for example during storage or transportation, then the entire cooling system should be drained and purged*

### **5.5.3 Pressure test for controlling the cooling water circuit**

---

Check if a temperature difference exists between cooling water in-flow and cooling water return flow by use of the hand.


Feel the cooling water in-flow line at the internal cooling water pump.

Feel the cooling water return pipe either at the outlet of the water-cooled exhaust elbow union or at the side, where this pipe exits at the heat exchanger.

The temperature difference between in-flow and return should be approximately 10 degrees.

### 5.5.4 Scheme for freshwater circuit at two circuit cooling system

Fig. 5.5.4-1: Scheme for freshwater circuit at two circuit cooling system

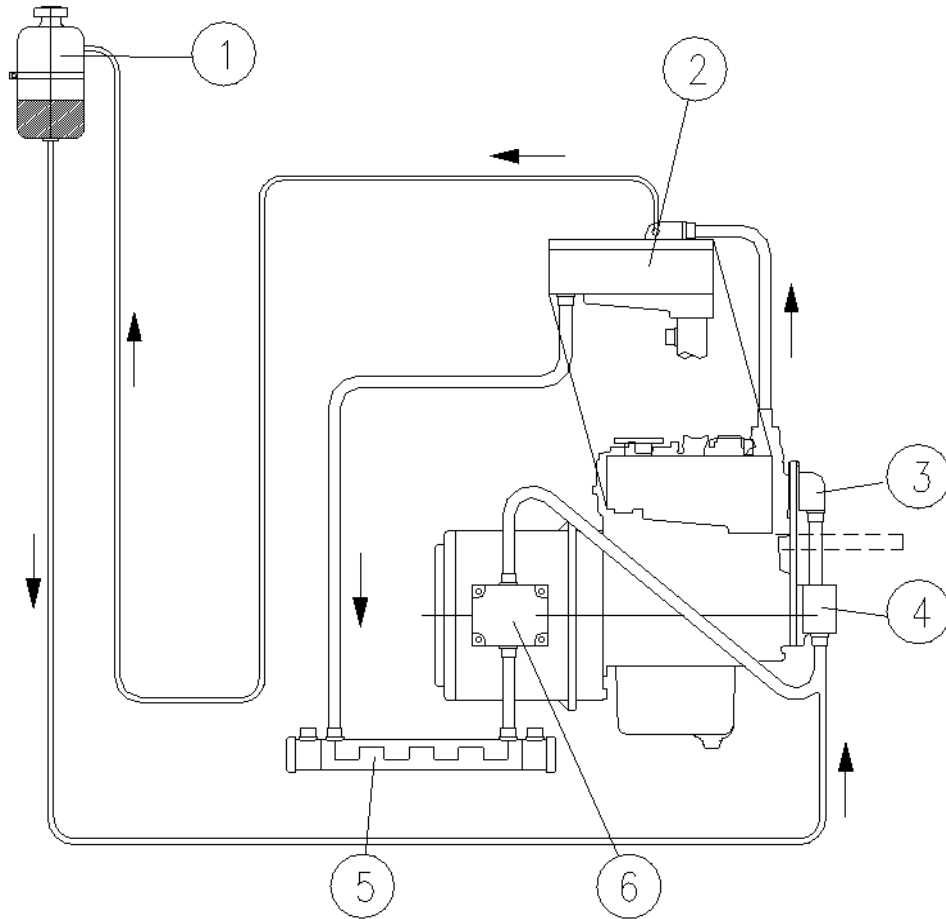

- 1. Expansion tank
- 2. Exhaust manifold
- 3. Thermostat housing

- 4. Freshwater pump
- 5. Heat exchanger
- 6. Cooling water connection block

## 5.6 Installation of the water cooled exhaust system

### 5.6.1 Installation of the standard exhaust system

The generator exhaust system must remain completely independent and separate from the exhaust system of any other unit(s) on board. The water lock must be installed at the lowest point of the exhaust system. An optional noise insulated water lock can also be installed. The exhaust hose descends from the capsule to the water lock. Then the hose rises via the „goose neck“ to the silencer (see drawing). The goose neck must be vertical and sit preferably along the ship's keel centre line. In order that the back pressure inside the exhaust is not too high, the total length of the exhaust system should not exceed 6 m (20 ft.)


By injecting the outlet raw water into the exhaust manifold, the exhaust gases are cooled and the noise emissions from the exhaust system are reduced.

Exhaust diameter see section 8.5, "Diameter of conduits," on page 155

Fig. 5.6.1-1: Installation scheme standard exhaust system

- A Position exhaust elbow at the generator to the muffler min.600mm
- B Position goose neck to the exhaust elbow at the generator max. 500mm above the exhaust elbow down to max. 800mm under the exhaust elbow
- C Position goose neck to the water line min. 600mm

- 1 Generator
- 2 Muffler
- 3 Goose neck
- 4 Silencer
- 5 Hull outlet

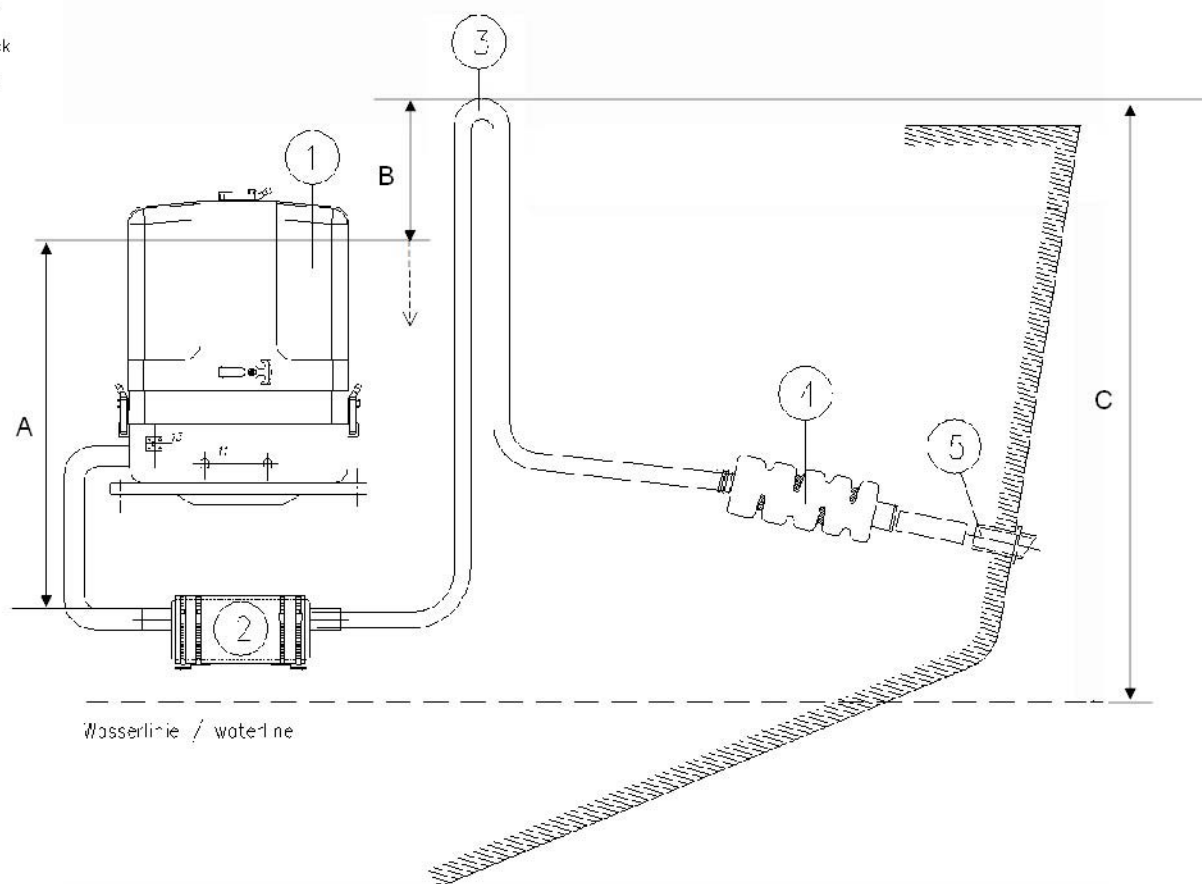

## 5.7 Installation of the waterlock

---

Pay attention to the right flow direction through the waterlock.

Note!



Unfortunately, it can occasionally occur that, because of an disadvantageous mounting position of the waterlock, sea water gets into the diesel engines' combustion chamber. This disables the diesel engine by irreversible damages. Quite frequently, this leads to discussions during which the parties involved in the yachts' construction or the installation of the generator have to explain themselves.

**One point in this situation can be clarified definitely:**

If sea water gets into the inner section of the engine, this is not possible due to constructional defects of the generator or to malfunctions on the engine itself. It can only reach the combustion chamber via the exhaust hose and thus get into the engine.

Thereby, the position of the generator and the waterlock, as well as the arrangement of the cooling water and exhaust hoses play the decisive role.

If the waterlock is arranged in an unfavourable position, the cooling water flowing back in the exhaust hose can rise so high, that it reaches the exhaust stack. Since at least one discharge valve is always open when the engine is shut off, the sea water has free access to the combustion chamber. By capillary action, this sea water then flows past the cocks and even reaches the engine oil in that way. (In fact, a surprisingly high oil level is a first indication of an upcoming catastrophe).

**If an usual high oil level can be detected and/or the oil is of a greyish colour, the engine must not be used anymore. This is a certain sign for cooling water that got into the oil pan. If the engine is started under these conditions, the water and the oil are mixed into an emulsion. The oil will quickly become so viscous that one will have to call it a paste. In this phase the fine oil hoses are blocked and a few moments later the machine gets destroyed because of insufficient lubrication. Before this happens, an immediate oil change should be made. Since the water can only reach the engine via the combustion chamber, it can be assumed that the compression rings will start to corrode. These effects have to be discussed with an engine expert. It will certainly be reasonable to immediately inject plenty penetrating oil through the intake stack and to slowly turn the engine with the starter motor.**

The cooling water can reach the exhaust area via the exhaust hose as well as via the cooling water feed.

### 5.7.1 Possible cause for water in the exhaust hose

---

#### 5.7.1.1 Possible cause: exhaust hose

If the cause is the exhaust hose itself, the following points are to be checked at the hose:

- a) Position of the waterlock is too high. The water reaches the exhaust hose.
- b) Position of the waterlock is too far away from the middle of the generator. The water reaches the exhaust hose in tilted position.
- c) The waterlock is too small relating to the length of the exhaust hose.

#### 5.7.1.2 Possible cause: cooling water hose

If the generator is not clearly installed 600 mm over the water line, the cooling water feed must be equipped with a „venting valve“ which is at least led out 600 mm over the water line. (This position must also be assured in every tilted position. Therefore, the venting valve should be located in the ships' center line, so that it cannot move in tilted position).

- a) Position of the venting valve is too low. The water flows into the exhaust area when the ship is tilted.
- b) Position of the venting valve is too far from the ships' center line. The water reaches the exhaust area when the



ship is tilted.

c) The venting valve does not work, because it jams or it is clogged. (The venting valve's function needs to be checked regularly.)

As it consistently happens that functioning risks are not realised during the laying of the exhaust hose, the following explanations refer explicitly to the exhaust hose. Here, the location, the size and the position of the „waterlock“ play a very decisive role:

### 5.7.2 Installation area of the waterlock

Concerning a water-cooled exhaust system, it must be regarded that - under no circumstances - cooling water from the exhaust hose can get into the exhaust elbow area at the engine. If this happens, the cooling water can get into the combustion chamber via an open discharge valve. This would lead to irreparable damage at the engine.

In addition to that, one has to reckon with possible tilted positions of sailing yachts, which makes the position of the waterlock even more important. In general one could say that:


The deeper the waterlock is located underneath the generator, the better the protection from entering water into the combustion chamber.

The picture below shows that the distance between the critical point at the exhaust elbow and the maximum permissible water level in the exhaust hose is stated with 600 mm. This distance should be understood as a minimum distance.

### 5.7.3 The volume of the waterlock


The waterlock must be measured so large, that it can take the entire amount of water flowing back from the exhaust hose. The amount of water depends on the hoses' length (L) and its cross section. While the diesel engine is running, cooling water is continuously injected into the exhaust system and is carted outside with the emissions by the exhaust gas pressure. When the engine is turned off, the number of revolutions sinks quite fast. By doing so, the point is reached where the exhaust gas pressure does not suffice anymore to cart the cooling water out. All cooling water remaining in the hose at that point flows back into the waterlock. At the same time, the diesel engine itself continues to cart cooling water through the cooling water pump, as long as it keeps on rotating.

**The waterlock must necessarily be measured large enough that it can take the entire amount of cooling water and, at the same time, does not exceed the prescribed vertical height of 600 mm up to the critical point at the exhaust elbow.**

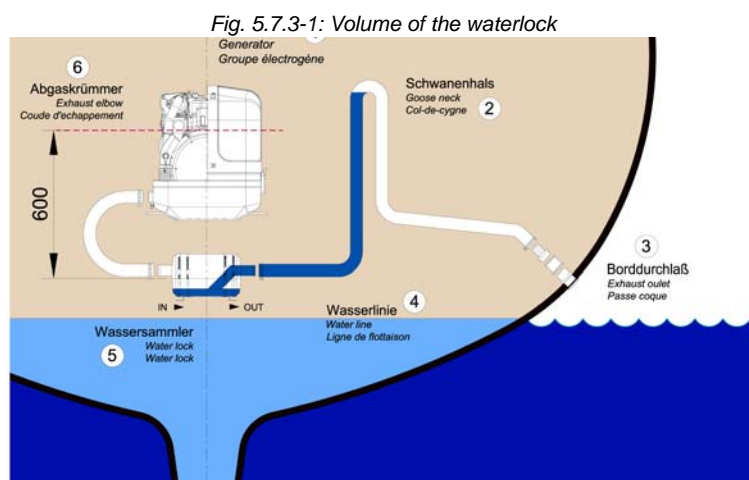

If there are any doubts, a verification can easily be made by temporarily using a clear-sighted hose (1) as exhaust hose. In that way, the cooling water level can be checked very easily.

Fig. 5.7.3-2: Testing the cooling water level

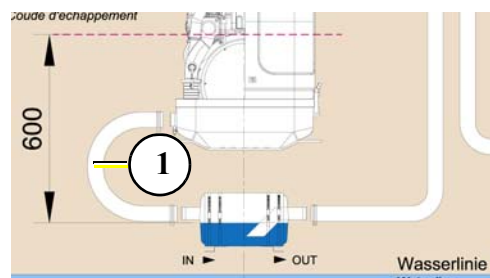

### 5.7.3.1 Ideal position of the waterlock

The ideal position of the waterlock would be in center underneath the generator.

Only in this position it is assured that the water level cannot change drastically in tilted position by the waterlock moving out of the center line.

See the following pictures:


In Fig. 5.7.3.1-1, the waterlock is mounted in center underneath the generator.

When the ship tilts, the position of the waterlock related to the critical point at the exhaust hose, changes only slightly.

#### Important Note!




Fig. 5.7.3.1-1: Ideal position of the waterlock

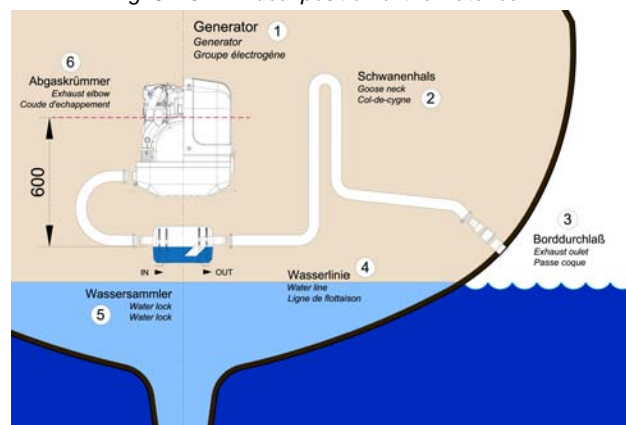

#### Tilted position 15 degrees - Fig. 5.7.3.1-2


The distance from the exhaust elbow to the hydrostatic head has derated to 540 mm.

Fig. 5.7.3.1-2: Tilted position 15 degrees

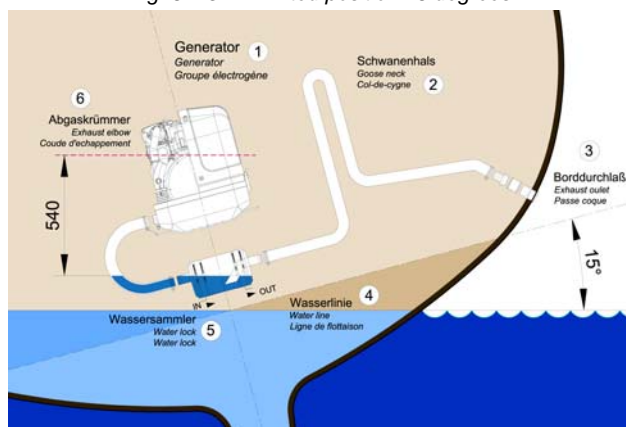


**Tilted position 30 degrees - Fig. 5.7.3.1-3**

The distance of the water level, even in ideal position, changes that only 458 mm distance remain. So the critical distance is under-run already.

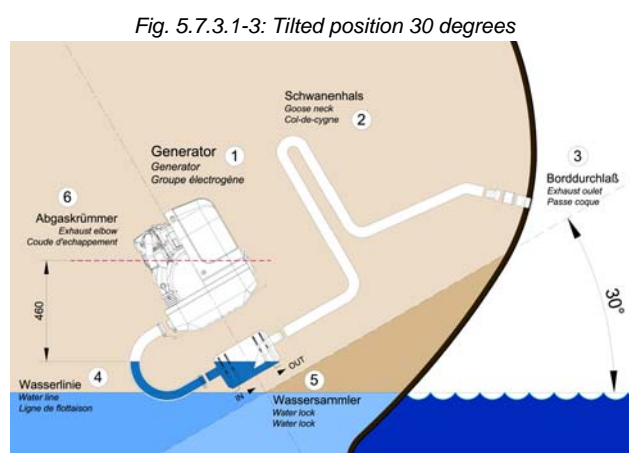
**Tilted position 45 degrees - Fig. 5.7.3.1-4**

In this case the water level rise so high, that the distance constitutes only 325 mm.


Even when the water lock is mounted in the ideal spot, at an extremely tilted position of 45 degrees there is still the risk that water can get straight into the discharge stack area through strong rocking motions („sloshing“). This shows that the distance of 600 mm represents a minimum size at which, even when installed ideally, the water can slosh into the exhaust elbow when the ship is very tilted or rocks very hard.

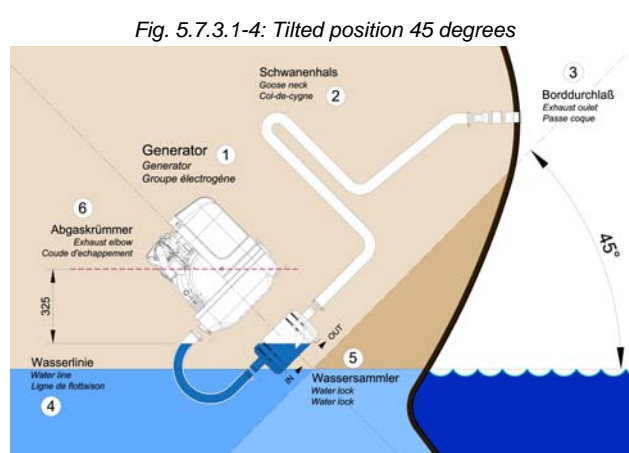
**Summary:**

The preset minimum height of 600 mm must be regarded unconditionally and is only valid if the waterlock is mounted in its ideal position in center underneath the generator. A higher position is highly recommended if it has to be reckoned with tilted positions of 45 degrees.


**5.7.3.2 Example of the installation of the waterlock off-center and possible effects:**

The following pictures are primarily relevant for an installation of the generator with the waterlock on sailing yachts. A change in the mounting position, caused by tilted position does not have to be reckoned concerning motor yachts. Here it is only necessary to regard that the volume of the waterlock is measured so large that it can take the entire amount of water flowing back, and at the same time, maintains the minimum distance of 600 mm.

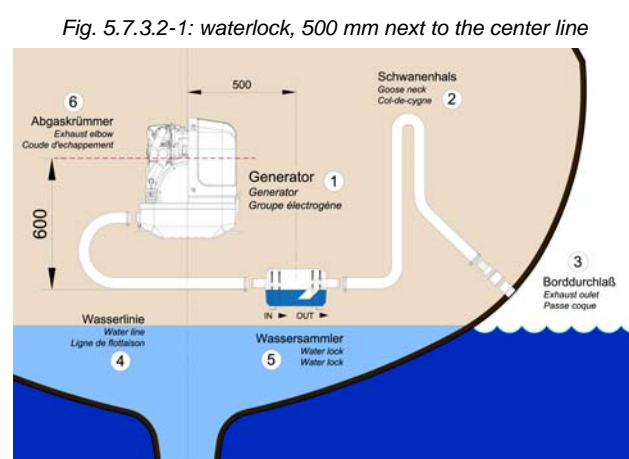**A) Installation of the waterlock 500 mm next to the generator's center line:**
**Installation of the waterlock 500 mm next to the generator's center line**


**Tilted position 45 degrees - Fig. 5.7.3.2-2**


The water level is now at the same height as the critical point at the exhaust elbow. If the ship is sailed in a tilted position of 45 degrees with an installation like this, the ingress of cooling water into the combustion chamber is inevitable. Irreparable damages are pre-programmed.

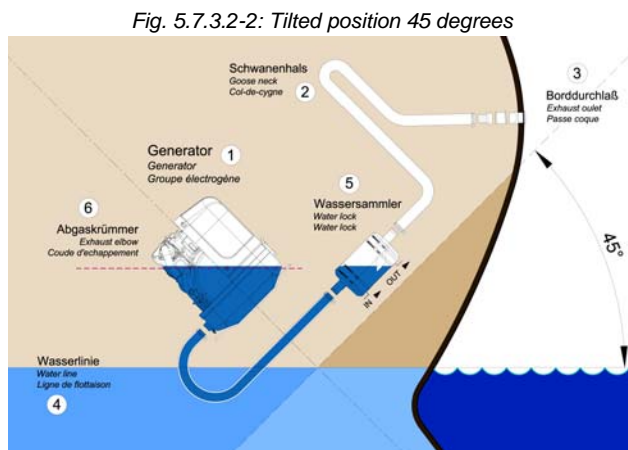

**B) Installation distance between waterlock and the generator's center line 1000 mm**

**Installation distance between waterlock and the generator's center line 1000 mm**


Fig. 5.7.3.2-3: waterlock, 1000 mm next to center line

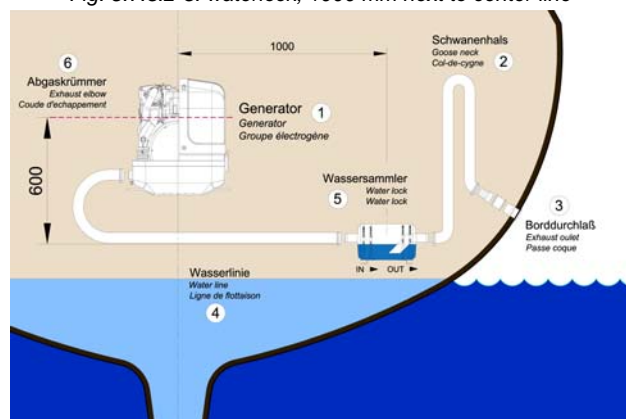

**Tilted position 30 degrees - Fig. 5.7.3.2-4**

The water level and the critical point at the exhaust elbow are at the same level now. If the ship is sailed in a tilted position of 30 degrees with an installation like that, the infiltration of cooling water into the combustion chamber is inevitable. Irreparable damages are pre-programmed.

Fig. 5.7.3.2-4: Tilted position 30 degrees

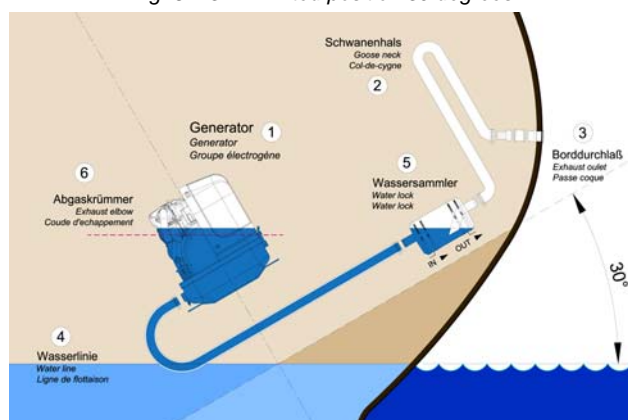

**Summary:**

Concerning sailing yachts it must be regarded, that the waterlock is mounted in center underneath the generator, at least in reference to the ships' center line. Thus the waterlock is prevented from „leaking“ very strongly when the ship is tilted.

The „leaking“ of the waterlock leads to a rise of the water level which then gets too close to the exhaust elbow's critical point.


**5.8 Exhaust / water separator**

In order to reduce the noise level of the generator unit to a minimum, an optional exhaust outlet muffler can be

mounted next to the through-hull fitting. Additionally there is a component at Fischer Panda, which acts as both an „exhaust goose neck“, and water separator. With this „exhaust/water separator“ the cooling water is derived over a separate pipe. The exhaust noises emanating from the exterior of the yacht are strongly decreased. Particularly the „water splash“.

**Water flow exhaust water separator**


Fig. 5.8-1: Water flow exhaust water separator

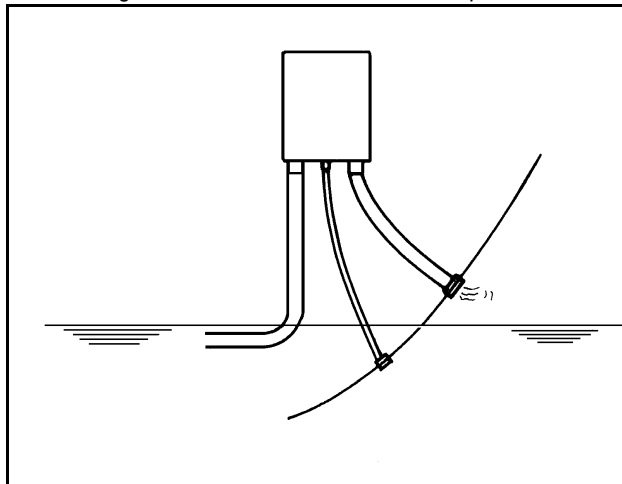

**Exhaust water separator**


Fig. 5.8-2: Exhaust water separator

- (1) Raw water outlet
- (2) Hose connector
- (3) Reducer (if required)
- (4) Hose
- (5) Hose connector
- (6) Sea cock
- (7) Hull outlet
- (8) Hose Clips

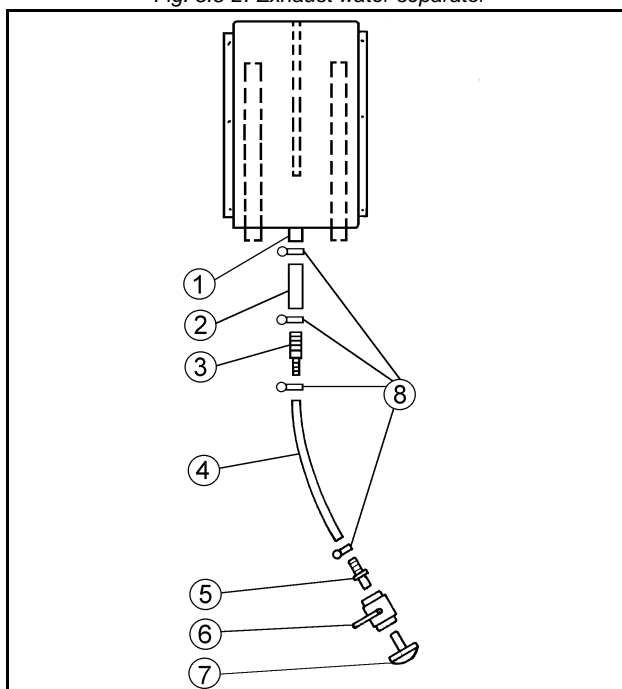

### 5.8.1 Installation exhaust water separator

Fig. 5.8.1-1: Installation exhaust water separator

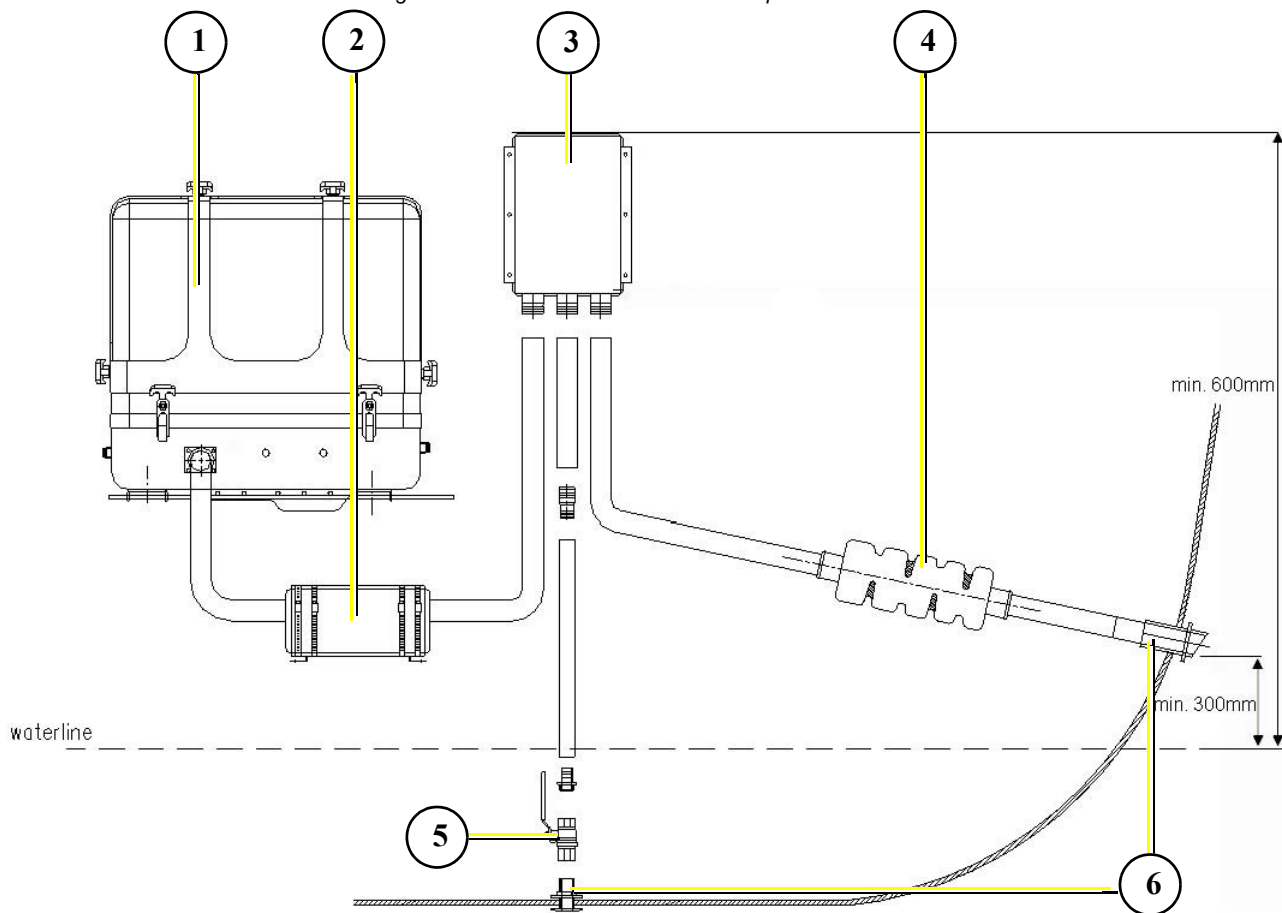

- |                            |                |
|----------------------------|----------------|
| 1. Generator               | 4. Silencer    |
| 2. Silencer / Water lock   | 5. Sea cock    |
| 3. Exhaust-Water-Separator | 6. Hull outlet |


If the exhaust water separator was sufficiently highly installed, a goose neck is no longer necessary. The exhaust/water separator fulfils the same function. If the „Super silent“ exhaust system were installed correctly, the generator will not disturb your boat neighbour. The exhaust noise should be nearly inaudible. The best result is reached, if the hose line, which derive the cooling water, is relocate on a short way „falling“ directly to the outlet and this outlet is under the waterline.

If the through-hull exhaust outlet has to be mounted far from the generator, an exhaust-water separator must definitely be installed. The raw water from the separator must then run along the shortest possible path in the through-hull outlet. For such long exhaust routes, the exhaust hose diameter should also be increased, f.e. from NW40 mm to NW50 mm in order to reduce the back-pressure. The exhaust may have a length of over 10m (32 ft.) if the exhaust hose diameter is increased. An additional outlet exhaust muffler close to the hull outlet will help further to reduce noise emissions.

The generator will not disturb your boat neighbours, if the „Super silent Exhaust System has been correctly installed. The exhaust noise should be almost inaudible.



Fig. 5.8.1-2: Example for an unfavourable installation

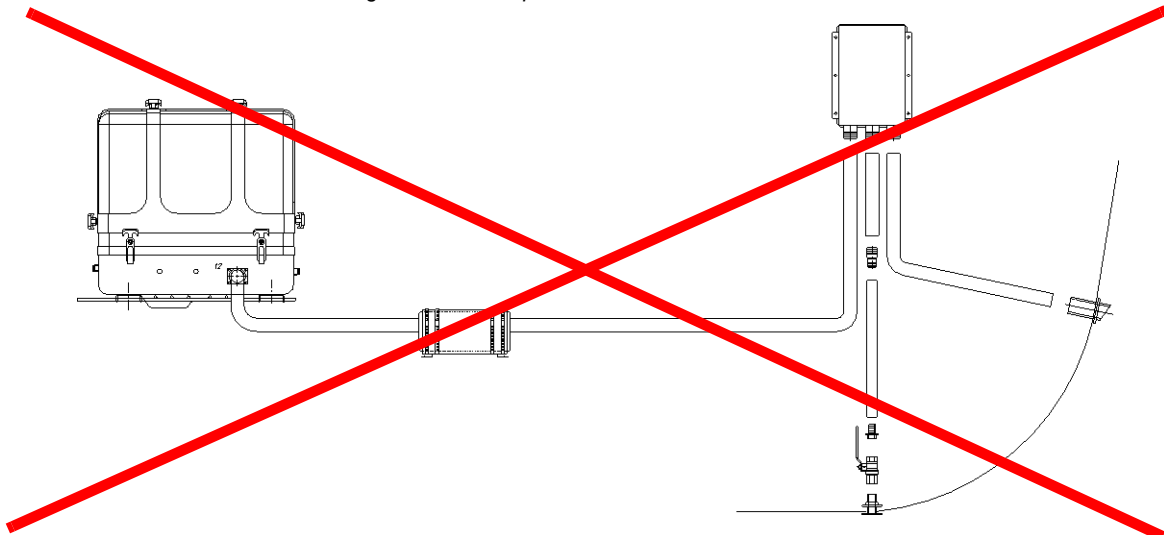

Example of an unfavourable installation:

- Water lock not far enough below the lowest level of the generator
- Distance water lock to exhaust/water separator too large

## 5.9 Installation of the fuel system

### 5.9.1 General references


Inside the generator capsule itself, there is the fuel filter installed (exception: Panda 4200 and 4500). Additional fuel filters (with water separator) must be mounted outside the capsule in easily accessible places in the fuel lines between the tank intake fuel pump and the diesel motor's fuel pump.

Generally forward and return fuel flow pipes must be mounted to the diesel tanks. Do not connect the generator fuel supply lines with any other fuel lines of other diesel systems.

- The following items need to be installed:
- Fuel supply pump (DC)
- Pre-filter with water separator (not part of the delivery)
- Fine particle fuel filter
- Return fuel line to fuel tank (unpressurized)

The electric cable for the fuel pump is already installed on the generator (length 5 m).

Fig. 5.9.1-1: Installation Scheme Fuel System

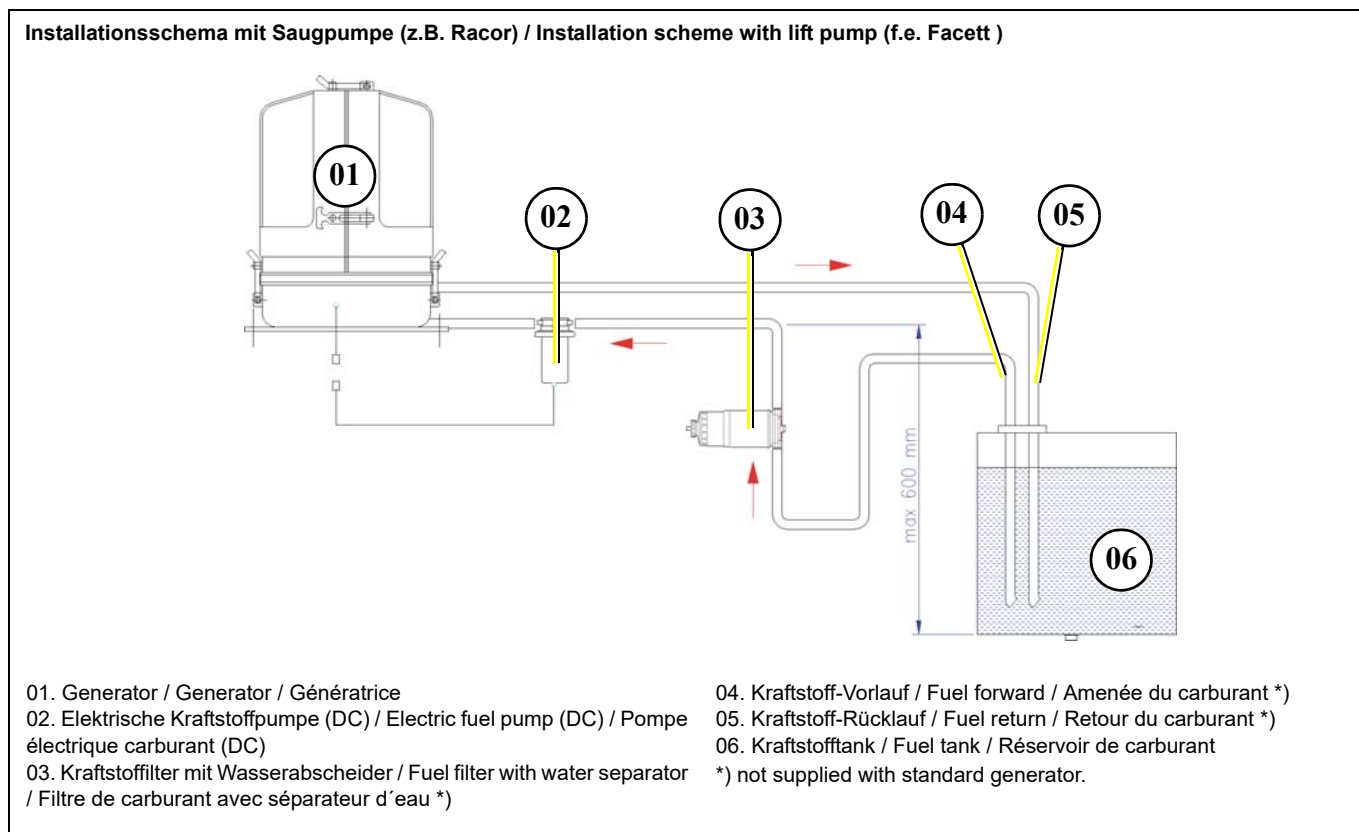

### 5.9.2 The electrical fuel pump

With the Panda generator is usually supplied an external, electrical fuel pump (DC). The electrical connections are pre-loaded at the generator with the lead planned.

Diameter of fuel lines: section 8.5, "Diameter of conduits," on page 155.

### 5.9.3 Connection of the fuel lines at the tank

#### Lead the return fuel pipe connected to the day tank to the floor

The return pipe connected to the tank must be dropped to the same depth as the suction pipe, if the generator is mounted higher than the tank, in order to prevent fuel running back into the tank after the motor has been switched off, which can lead to enormous problems, if the generator is switched off for a long period.

#### Non-return valve in the suction pipe

A non-return valve must be fitted to the suction pipe, which prevents the fuel flowing back after the generator has been switched off, if it is not possible to use the return flow pipe as a submerge pipe placed in the tank. The instructions „Bleeding Air from the Fuel System“ must be read after initial operation or after it has stood still for a long period, in order to preserve the starter battery.

#### Non-return valve for the fuel return pipe

If the fuel tank should be installed over the level of the generator (e.g. daily tank), then a non-return valve must be installed into the fuel return pipe to guarantee that through the return pipe no fuel is led into the injection pump.

#### ATTENTION!



### 5.9.4 Position of the pre-filter with water separator

Additionally to the standard fine filter a pre-filter with water separator must be installed outside of the sound insulation capsule in the fuel system line (not included in the delivery).

Fig. 5.9.4-1: Pre-filter with water separator



### 5.9.5 Ventilating air from the fuel system

Normally, the fuel system is designed to vent air itself i.e. as soon as the electric starter motor starts; the fuel pump starts working and the fuel system will be air-vent automatically after some time. It is, nevertheless essential, to vent the system as follows prior to the first operation (as all hoses are empty):

1. Switch main power switch on control panel „ON“.
2. Push failure bypass switch and hold tight.

The electric fuel pump has to be run audibly. By moving the failure bypass switch you can hear the solenoid valve of the generator starting and stopping (when the sound insulation cover is taken off).

3. After the fuel pump has been running 3 to 4 minutes, because the failure bypass switch has been pressed down, the bleeding screw of the solenoid valve has to be unscrewed. The switch has to be continuously depressed, when opening the screw. A piece of cloth or absorbent paper should be put under the connection to avoid fuel entering the sound insulation cover.

4. The air vent screw can be screwed in again, as soon as fuel runs out without bubbles. Then release the depressing the failure bypass switch.
5. Starting the generator


Now the generator can be started by pushing the „START“-button. The generator should start after a short while. One of the pipe union nuts of an injection hose has to be unscrewed, should the unit not start; then try to restart the generator. After the generator has started, the pipe union nut has to be tightened again.

Main power switch „OFF“

**Vent Screw at the fuel stop solenoid valve**

*Not installed at all models!*

Fig. 5.9.5-1: Vent screw at the fuel stop solenoid valve

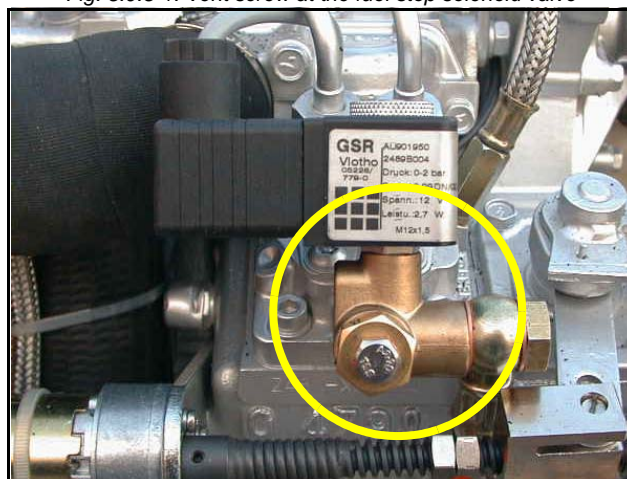

## 5.10 Generator DC system installation

The Panda generators from 6.500 NE upwards have their own dynamo to charge a DC starter battery.

It is recommended to install an additional starter battery for the generator.

The generator is then independent from the remaining battery set. This enables you to start the genset at any time with its own starter battery even if the other batteries are discharged. A further advantage of a separate starter battery is that it isolates the generator's electric system from the rest of the boat's DC system, i.e. minus pole (-) is not connected electrically to Earth/Ground.

The generator is then Earth/Ground free.

### 5.10.1 Connection of the starter battery block

An own separate starter battery must be installed for the generator.

The positive cable (+) of the battery is attached directly at the solenoid switch of the starter motor. The negative cable (-) of the battery is attached underneath the starter motor at the engine mount.

**Panda Generators Panda 6000 and higher normally provided with an alternator/dynamo to charge the starter battery. At generators without alternator/dynamo it is needed to charge the starter battery with an external battery charger.**

**Note:**



**Make sure that the voltage of the starter battery fits to the start system voltage**

**Attention!**



f.e. 12 V starter battery for a 12 V start system

f.e. 24 V starter battery for a 24 V start system (2x12 V batteries in a row)

To avoid large voltage drops the battery should be installed as near as possible to the generator. The positive terminal of the battery is attached at the red cable, the negative pole at the blue cable.

It must be guaranteed that first the cables are attached at the generator and then at the battery.

### Battery connection

Wrong connection of the battery bank can cause a short-circuit and fire.

Install an appropriate fuse and a battery circuit breaker in the plus pole cable of the battery, but with a distance to the battery of up to 300 mm (12 inch) at maximum.

The cable from the battery to the safety device must be secured with protective pipe/sleeve against chafing through.

For the connection use self-extinguishing and fire-protected cables, which are appropriate for temperatures up to 90 °C, 195 °F.

The batteries must be installed in such a way that they do not chafe through or other mechanical load can be stripped.

The battery poles must be secured against unintentional short-circuit.

The positive battery cable within the generator must be shifted in such a way that it is protected against heat and vibrations by appropriate sleeve/protective pipe. It must be shifted in such a way that it does not affect rotary parts or parts, that become hot in operation, e.g. wheel, exhaust elbow union, tail pipe and the engine. Do not lay the cable too tautly, since otherwise it could be damaged.

Make a test run after the installation and check the laying of the batteries during the test run and afterwards. If necessary, correct the laying.

Examine regularly the cable laying and the electrical connections.

### Positive battery cable

The positive (+) battery cable is connected directly to the solenoid switch of the starter.

NOTE:




Attention!: Consider correct connection sequence



Attention!: Right connection of the battery.



Fig. 5.10.1-1: Positive battery cable

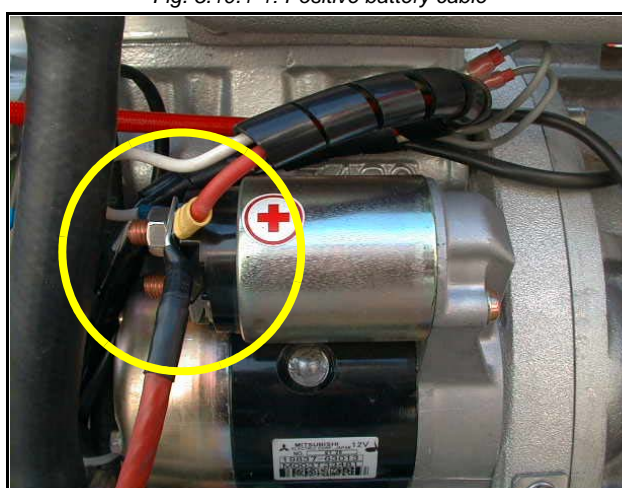



### Negative battery cable

The negative (-) battery cable is connected to the engine foot.

**Note! The battery negative pole may not be connected with the boat ground or with the protective grounding of the 120 V installation!**

Fig. 5.10.1-2: Negative battery cable




### DC-relay

The Panda generators 8000 to 30 are equipped with various DC-relays, which can be found under the terminal strip. The various relays have the following tasks (also see the DC circuit diagram)

1. Starter motor relay
2. Pre-glow relay (glow plugs)
3. Fuel pump relay

Sample Picture - See wiring diagram

Fig. 5.10.1-3: DC-relay

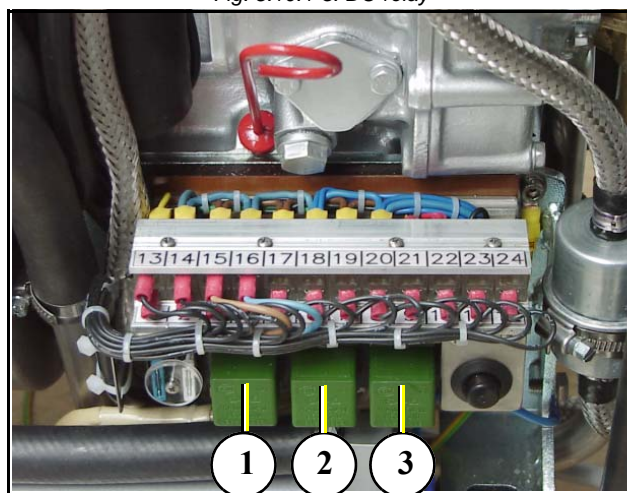

### DC starter motor

All Panda generators are equipped with an independent DC starter motor.

1. Solenoid switch for starter motor
2. Starter motor

Fig. 5.10.1-4: DC starter motor


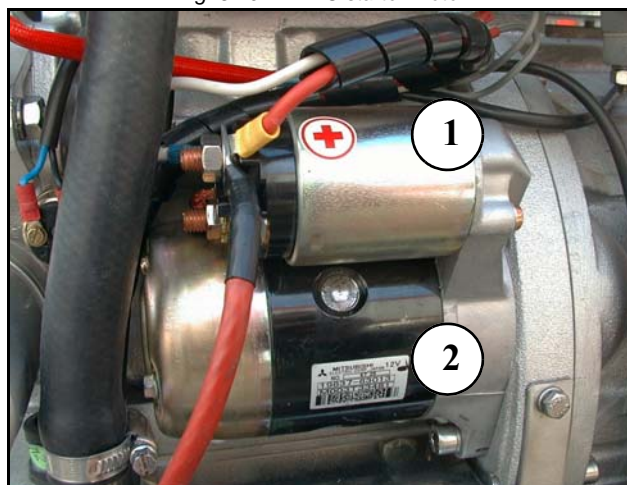




Fig. 5.10.1-5: Battery installation - Scheme

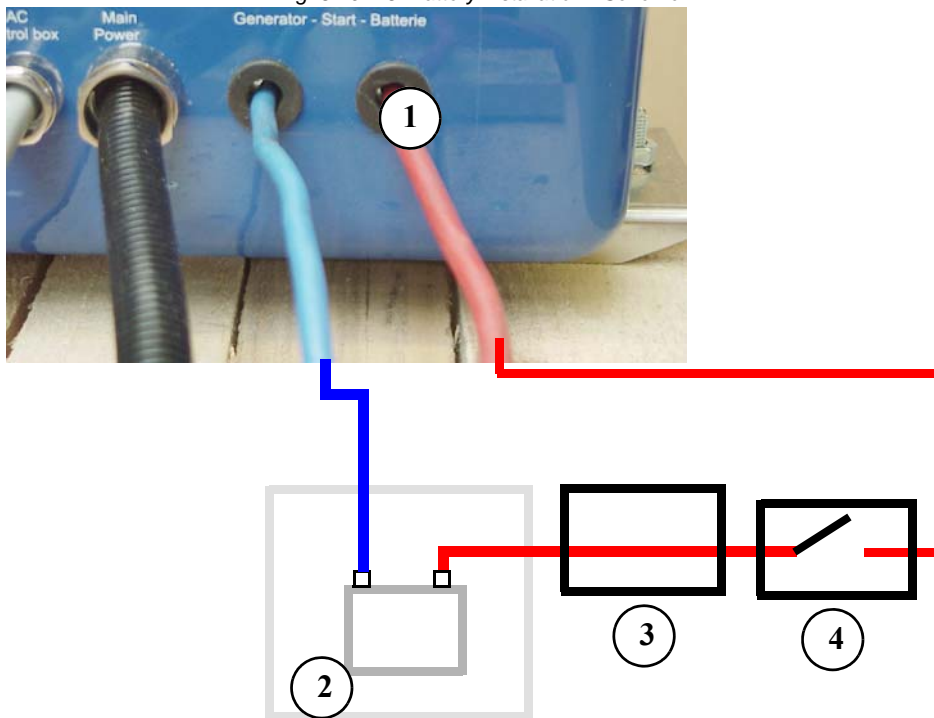

- 1. Generator
- 2. Battery block

- 3. Fuse
- 4. Battery main switch

**5.10.2 Connection of the remote control panel - see separate control panel manual**

## 5.11 Generator AC system installation

Before the electrical system is installed, READ the SAFETY INSTRUCTIONS of this manual FIRST! Be sure that all electrical installations (including all safety systems) comply with all required regulations of the regional authorities. This includes lightning conductor, personal protection switch etc.

Attention!



All electrical safety installations have to be made on board.

A power source selector switch must be installed between the generator (or if applicable, AC-Control box) and the ship's electrical supply system. This switch must be used to ensure that all AC consumers can be switched off at once. This switch should also be installed to keep the generator and shore (grid) power systems separate.

### 3-Way cam switch

A 3-way cam switch should be used. This switch basic positions: „Shore power“ - „OFF“ - „Generator“. If an (DC-AC) inverter is used, a fourth position will be required.


0. OFF

I. Generator

II. Shore power connection

III. Inverter

Fig. 5.11.0-1: 3-Way cam switch

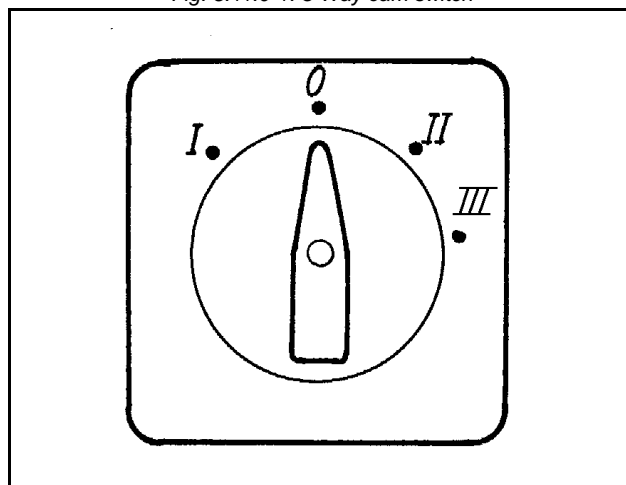

The cam-type switch must have 2 poles, so that „MP“ and „phase“ can be switched off.

If a 3-phase current system is also installed with the option of supplying from either the generator or shore power, an additional switch must be installed to keep these systems separate.

An alternative to a manual rotating switch is an automatic power relay. When the generator is not running, the relay remains in the shore power position. As soon as the generator is running, the power relay switches automatically to the generator position.

**Note: If the system has both single and 3-phase AC, it is CRITICAL that the two systems remain SEPARATE!**

### Protection conductor

The generator is provided with a PEN safety system, as standard, which connects the 3-phase delta centre point „N“ to the safety ground strap.

If a separate ground protection cable is necessary (i.e. due to national safety regulations), the bridge between the generator housing and ground (in the AC-Control box) must be disconnected. Once such a ground protection cable is installed, it must be connected to the ground straps of all on board electrical devices.

In order to monitor the electrical system, it is recommended to install a voltmeter (and, if possible, a current meter) down line from the power source selector switch so that all respective power sources can be monitored. A separate voltmeter for the generator, itself, is therefore not required.

### Electrical fuses

It is absolutely essential that the electrical system installation is inspected by a qualified electrical technician. The generator should have its own AC input electrical fuses. The fuses should be sized such that the rated current of the generator on each of the individual phases is not exceeded by more than 25 %.

Data for gensets with power output greater than 30 kW on request!

The fuses must be of the slow type. A 3-way motor protection switch must be installed to protect the electrical motor.

*Required fuses see rated current on the type plate*

#### **Required cable cross-sections**

*The following recommended electrical cable dimensions (cross sections) are the minimum required sizes for a safe installation (see section 9.3, "Cable cross section," on page 154).*

### 5.11.1 Insulation test

---

Once the electrical system installation is complete, a ground insulation test must be performed as follows:

Attention:



1. Switch off all on-board electrical devices.
2. Start the generator.
3. Measure the AC-voltage with a voltmeter (adjust to Volt/AC) between
  - a. generator housing and AC-Control box
  - b. generator housing and ground.
  - c. the measured voltage must not exceed 50mV (millivolts).
4. Once the safety systems have been installed, they must be checked. If a RCD (Leakage Current Relay) has been installed, it also has to be tested, in order to ensure that it functions properly. The individual phrases must be checked against each other, and between phase and ground, (the single phase or 4th phase also needs to be checked in this fashion).
5. If the generator is protected by a ground connection, then ALL electrical devices must also be connected to this „common“ ground (usually ground contacts are attached to the devices' metallic housings).

The electrical system installation must also comply with the hook-up requirements of the shore current grid. Generally a leakage current relay is sufficient for safe electrical operation; however, this must be confirmed by the electrical safety standard in the region where the system is attached to a main land power grid. The relay has to meet the required safety standard regulations.

#### Checking the electrical connections

There is always the possibility that circuits have been rerouted/changed or individual components have not been not been correctly laid out on the circuit diagrams.

The installation electrician should therefore check and label all electrical connections to ensure that they correspond to the main circuit diagram. The inspection and correct labelling is especially critical for terminals L1/ L2/L3/L1'N (for the 230 V - 50 Hz model) and for terminals L1/L2/L3/N & 1/ 2/ 4 for the 60 Hz (120 V) models. The electrician is therefore obliged, before installation to check whether the generator is earth-free. As long as this test has not been carried out all other components for electrical installation must be removed. Once the system has been installed and inspected, this test should also be performed with all electrical devices (i.e. voltage check between common and metallic housings) while the generator is running.



## 6. Maintenance Instructions

### 6.1 Personal requirements

---

The maintenance described here can be carried out by the operator unless otherwise indicated.

Further maintenance work may only be carried out by specially trained specialist personnel or authorized repairers (Fischer Panda Service Points). This is especially true for work on the valve setting, diesel injection system and for engine repair.

**The work described here can be taken as a guide. Since Fischer Panda does not know the exact installation and storage conditions, the work instructions and materials must be adapted by a local specialist. Damages caused by improper maintenance / repair are not covered by the warranty.**

**Attention!**



#### 6.1.1 Hazard notes for the maintenance

---

**Follow the general safety instruction at the front of this manual.**

**Note!**



**Danger for life! - The generator can be equipped with a automatic start device. This means the generator can be started by an external signal. To avoid an unexpected starting of the generator, the starter battery must be disconnected before start working at the generator.**

**Warning! Automatic start**



**Working at a running generator can result in severe personal injury. Therefore before starting work at the generator:**

**Warning! Risk of injury**



Make sure that the generator is stopped and the starter battery is disconnected to guarantee that the generator cannot be inadvertently started.

Do not run the generator with removed sound isolation cover

**Improper installation/maintenance can result in severe personal injuries or material damage.**

**Warning! Risk of injury**



- Always undertake installation/maintenance work when the generator is switched off.
- Ensure there is sufficient installation clearance before start working.
- Ensure tidiness and cleanliness at the workplace. Loose components and tools lying around or on top of each other are sources of accidents.
- Only perform installation work using commercially available tools and special tools. incorrect or damaged tools can result injuries.



**Oil and fuel vapours can ignite on contact with ignition sources. Therefore:**

- No open flames during work on the generator.
- Do not smoke.
- Remove oil and fuel residues from the generator and floor.

**Contact with engine oil, antifreeze and fuel can result in damage to health. Therefore:**

- Avoid skin contact with engine oil, fuel and antifreeze.
- Remove oil and fuel splashes and antifreeze from the skin immediately.
- Do not inhale oil and fuel vapours.

**Danger for Life. Improper handling, operation, installation and maintenance can result in severe personal injury and/or material damage.**

Electrical voltages above 60 volts are always dangerous to life). The rules of the respective regional authority must be adhered to. Only an electrician may carry out installation of the electrical connections for safety reasons.

**Generator, oil and antifreeze can be hot during/after operation. Risk of severe burns.**

**During Installation/maintenance personal protective equipment is required to minimize the health hazards.**

- Protective clothing
- safety boots
- protective gloves
- Ear defender
- safety glasses

**Disconnect all load during the work at the generator to avoid damages at the load.**

**Batteries contains acid or alkalis.**

Improper handling can result in battery explosion and leakage. Acid or alkalis can run out. An explosion of the battery is possible.

*See the operation and safety instruction from your battery manufacturer.*

Batteries contain corrosive acids and lyes.

Improper handling can cause the batteries to heat up and burst. Corrosive acid/lye may leak. Under unfavorable conditions, the battery may explode.

**Warning!: Danger of fire**



**Danger! Danger of poisoning**



**Attention! Danger to Life - High voltage**



**Warning! Hot surface/material**



**Instruction! Personal protective equipment necessary.**



**Attention! disconnect all load**



**Warning!**



Observe the instructions from your battery manufacturer.

## 6.2 Environmental protection

---

### Danger to the environment due to mishandling!

Significant environmental damage can occur, particularly for incorrect disposal, if environmentally hazardous operating materials are mishandled. Therefore:

- Always observe the instructions mentioned below.
- Take immediate action if environmentally hazardous materials reach the environment. Inform the responsible local authorities about the damage in the case of doubt.

*The disposal must be performed by a specialist disposal company.*

### Environmental protection!



## 6.3 Maintenance interval

---

For the maintenance interval, please see the „General information for PMS generators“ which are attached to this manual.

At generator with dynamic operation hours (f.e. Generators with iControl2 system) the maintenance interval can may be extended.

With the dynamic operation hours the service interval can be raised up to 30 % (200 h max.). Make sure that the dynamic operation hours are not reset accidentally between the service interval.

### Note:



## 6.4 General maintenance instructions

---

### 6.4.1 Checks before each start

---

- Oil level
- Leaks in the Cooling system
- Visual check for any changes, leaks in the oil drain system, v-belt, cable connections, hose clips, air filter, fuel lines

#### Once a month

- Grease/oil the servo motor - Trapezoid thread-spindle

Maintenance intervals - see separate data sheet

### 6.4.2 Check of Hoses and rubber parts in the sound insulated capsule

---

Check all hoses and hose connections for good condition. The rubber hoses are very sensitive to environmental influences. They wear out quickly in an environment of dry air, oil and fuel vapours, and high temperatures. The hoses must be checked regularly for elasticity. There are operating situations, when hoses must be renewed once a year.

Additionally to usual tasks of maintenance (oil level check, oil filter control etc.) further maintenance activities are to be accomplished for marine generators, such as control of the sacrificial anode (cooling water connection block) and

the front seal cover at the generator.

## 6.5 Oil change intervals

The first oil change is to be accomplished after a period of operation from 35 to 50 hours. Afterwards the oil is to be changed after 150 hours. For this, the oil SAE30 for temperatures over 20°C and SAE20 for temperatures between 5°C and 20°C is to be used. At temperatures under 5°C oil of the viscosity SAE10W or 10W-30 is prescribed.

For filling quantity, see „Technical Data“ at page 107.

## 6.6 Checking oil-level

**You require:**

**paper towels / cloth for the oil dipstick**

The generator must be placed at level.

- with vehicular generators: Place the vehicle on a levelled surface.
- with PSC generators: Place the generator on a levelled surface.
- with marine generators: Measure the oil-level when the ship is not lop-sided.

Run the generator for about 10 minutes to ensure that the engine is warm. Wait for 3 minutes, so the oil can flow back into the oil pan.

**Generator and coolant can be hot during and after operating.**

**Caution: Burn hazard!**



Wear personal protective equipment. (Gloves, protective goggles, protective clothing and safety shoes)

- Assure generator against accidental start.
- Open the generator casing.
- Pull the oil dipstick out of the check rail.
- Clean oil dipstick.
- Put the oil dipstick back into the check rail and wait for 10 seconds.
- Pull the oil dipstick out of the check rail and read off the oil-level at the lower end of the stick.


### Oil dipstick

The oil-level is to be checked by means of the oil dipstick. The prescribed filling level must not cross the „Max“-mark.

*We recommend an oil-level of 2/3.*

*Sample picture*

Fig. 6.6-1: Oil dipstick - Sample

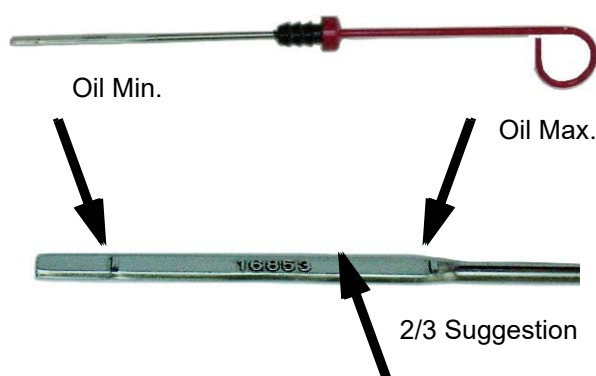


## Oil dipstick EA 300 Engine

Fig. 6.6-2: Oil dipstick

The oil-level is to be checked by means of the oil dipstick. The prescribed filling level must not cross the „Max“-mark.

We recommend an oil-level of 2/3.

Sample picture

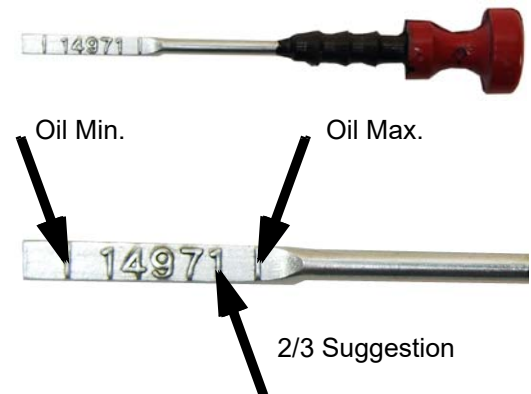

Oil should be refilled, if the oil-level is under 1/3 between the minimum and the maximum mark.

Fischer Panda recommends an oil-level of 2/3 between the minimum and the maximum mark.

If the oil-level is under the MIN-mark, check how many operating hours went by since the last oil change, by means of your service manual or an existing oil change tag. - with operating hours between 50 and 150 hours it is only necessary to refill oil. See „Refilling oil“ on page 2.

- with 150 operating hours or more the oil should be changed (See your generators' service table)
- if the oil-level is under the minimum mark by less than 50h, there might be a technical problem! In that case, we recommend going to a shop or a Fischer Panda service point.
- if the oil is cloudy or even „creamy“, coolant might have mixed with the oil. See a garage or a Fischer Panda service point immediately.

### 6.6.1 Refilling oil

---

**You require:**

**Engine oil**

1. Check oil-level as described under section 6.6, “Checking oil-level,” on page 94.
  2. Oil dipstick is pulled out of the check rail.
  3. Open the oil filler cap.
  4. Fill in oil (approx. 1/2 litre) and wait for about 2 min. so this it can flow into the oil pan.
  5. Wipe off the oil dipstick and put it into the check rail.
  6. Pull the oil dipstick out of the check rail and check the oil-level. See section 6.6, “Checking oil-level,” on page 94.
- If oil-level is still too low (under 2/3): repeat steps 4-6.

### 6.6.2 After the oil level check and refilling the oil

---

- Put the oil dipstick back into the check rail.
- Close the oil filling cap.
- Remove potential oil stains and splashes from the generator and surroundings.
- Close the generator casing.
- Remove lock against accidental generator start.

## 6.7 Replacement of engine oil and engine oil filter

---

You require:

- Engine oil. See attachment.
- New oil filter (not with generators with EA300 engines)
- Sealing for oil drain screw
- Personal protective gear
- Container to collect used oil (heat resistant and of sufficient size)
- Open-ended wrench for oil drain screw
- Paper towels and cloth
- Oil filter wrench
- Oil resistant mat, so prevent used oil from getting into underground water

The generator must be placed at level.

- with vehicular generators: Place the vehicle on a levelled surface.
- with PSC generators: Place the generator on a levelled surface.
- with marine generators: Change the oil when the ship is not lop-sided.

Run the generator for about 10 minutes to ensure that the engine is warm.

Wait for 3 minutes, so the oil can flow back into the oil pan.

**Generator and coolant can be hot during and after operating.**

**Caution: Burn hazard!**



Wear personal protective equipment. (Gloves, protective goggles, protective clothing and safety shoes)

1. Prepare generator.

- Assure generator against accidental start.
- Open the generator casing.
- with generators that have an external oil drain hose: Release the oil drain hose from the mounting.
- with generators that have an internal oil drain hose: Open the lead-through for the oil drain hose (left turn of the sealing). Pull out the sealing with the oil drain hose.

Place an oil resistant mat under the oil drain hose area and prepare the container.

2. Loosen oil filling cap

Unscrew the oil filling cap. This is necessary, because otherwise a vacuum will form and the oil can not completely drain off.

Sample picture

Fig. 6.7-1: Oil filling cap



3. Open oil drain screw.

Unscrew the oil drain screw by means of the open-ended wrench from the oil drain hose (rotating direction left). Use a second open-ended wrench to lock. Make sure to do this over the container. Use spanner size 17 mm.



Fig. 6.7-2: Oil drain hose



4. Discharge used oil.

Let the entire amount of oil drain out of the engine. This can take several minutes.


5. Remove used oil filter / clean oil screen

Release the oil filter by turning the filter wrench counterclockwise. The filter might be full of oil. Make sure to not spill anything and avoid skin contact.

Sample picture



Fig. 6.7-3: Oil filter

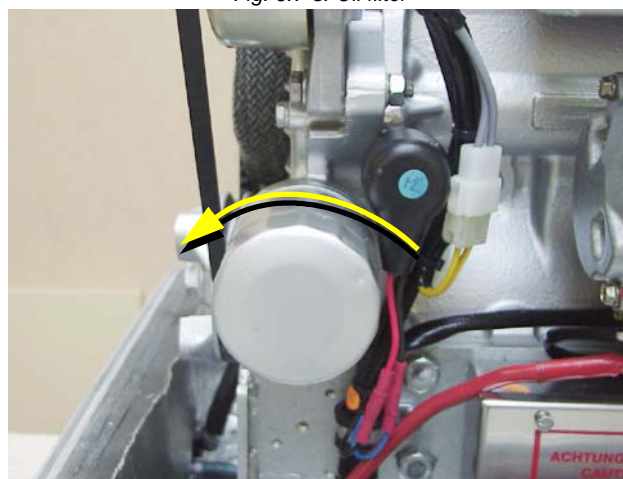



### Oil screen with generators with EA300 engines

The oil screen should be cleaned every 500 operating hours: to do so follow the instructions in the engine manual.

Use spanner size 17 mm.



Sample picture

Fig. 6.7-4: Oil screen



#### 6. Preparing a new filter

Clean the engines' filter holder brush a thin oil layer on the sealing of the new filter.

Fig. 6.7-5: Oil screen sealing ring



#### 7. Mounting the new filter

Carefully screw in the new filter by hand. It must not be tightened too much. Screw in the oil drain screw again and tighten it with the wrench. Use a new sealing for the oil drain screw.

#### 8. Fill in oil. (oil fill capacity: see attachment)

Fill the engine oil into the engine via feed hopper. Check oil-level after every 2 litres with the oil dipstick.

#### 9. Check proper filling level. See section 6.6, "Checking oil-level," on page 94.

When the proper filling level is reached, screw in the oil cap again. Run the engine for 10 minutes and then turn it off. Check the oil-level once more after several minutes with the oil dipstick. If it is too low, refill some oil.

#### 10. Clean up

Wipe off all oil splashes from the generator and make sure that the drain screw has no leak.

### 6.7.1 After the oil change

- Put the oil dipstick back into the check rail.
- Close the oil filling cap.
- Remove potential oil stains and splashes from the generator and surroundings.
- Close the generator casing.
- Remove lock against accidental generator start.
- Duly dispose of used oil and filter.

Used oil is very toxic and must not be disposed with domestic waste. It is prohibited to dispose used oil with waste water! Make sure that used oil is disposed properly (e.g.: where oil is bought or at collection stations).

## 6.8 Verifying the starter battery and (if necessary) the battery bank

Check the condition of the battery. Proceed here as prescribed by the battery manufacturer.


If from the battery manufacturer not otherwise mentioned.

### 6.8.1 Battery

#### 6.8.1.1 Check battery and cable connections

- Keep battery clean and dry.
- Remove dirty clamps.
- Clean terminal posts (+ and -) and clamps of the battery, and grease with acid-free and acid-resistant grease.
- When reassembling, ensure that clamps make good contact. Tighten clamp bolts hand-tight.


Fig. 6.8.1.1-1: Battery

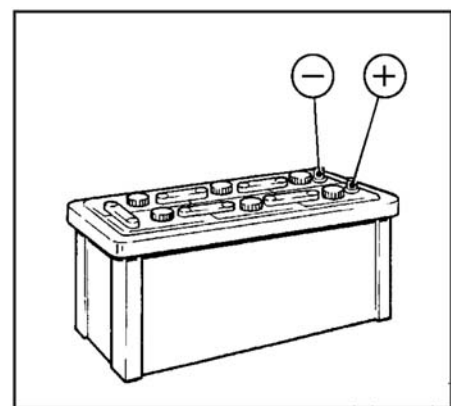

#### 6.8.1.2 Check electrolyte level

- Remove sealing caps 1.
- If testers 2 are present:
- Electrolyte level should reach the base of these.
- Without testers:  
The electrolyte level should be 10-15 mm above the top of the plates.
- If necessary, top up with distilled water.
- Screw sealing caps back in.


Fig. 6.8.1.2-1: Battery

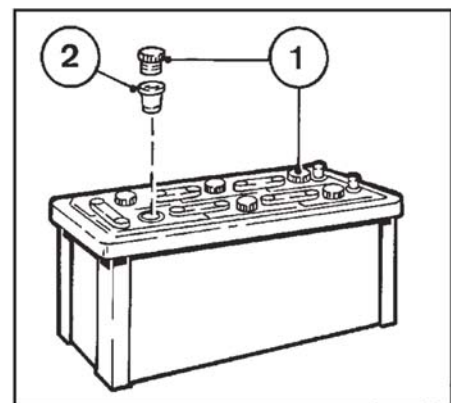

### 6.8.1.3 Check electrolyte density

- Measure the electrolyte density of individual cells with a commercial hydrometer. The hydrometer reading (see table on following page) indicates the battery's state of charge. During measurement, the temperature of the electrolyte should preferably be 20 °C.

Fig. 6.8.1.3-1: Battery

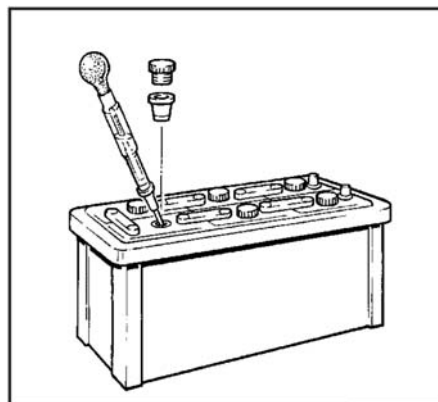

Electrolyte density		
in [kg/ l]		Charge status
Normal	Tropical	
1.28	1.23	well charged
1.20	1.12	semi-charged, re-charge
1.12	1.08	discharged, immediately charge

The gases emitted by the battery are explosive! Keep sparks and naked flames away from the battery!

Attention



Do not allow battery acid to come into contact with skin or clothing!

Wear protective goggles!

Do not rest tools on the battery!

## 6.9 Ventilating the fuel system

Normally, the fuel system is designed to ventilate air itself i.e. as soon as the electric starter motor starts operation the fuel pump starts working and the fuel system will be de-aerated after some time automatically. It is nevertheless essential to ventilate the system as follows prior to the first operation (as all hoses are empty):

Generators with iControl system do not need a Failure bypass switch. At these generators the fuel pump can be activated by an option of the control panel. See Control panel manual.

Attention:



1. Main power switch „OFF“

- Press failure bypass switch and keep firmly pressed. The electrical fuel pump must be audible. Switching on and off the solenoid valve at the generator will be audible by pressing the failure bypass switch (if capsule removed).


**Note!**



Generators with iControl system has no failure bypass switch. The Fuel pump can be activated at the iControl panel.

Please see iControl manual for details.

Fig. 6.9-1: Failure bypass switch

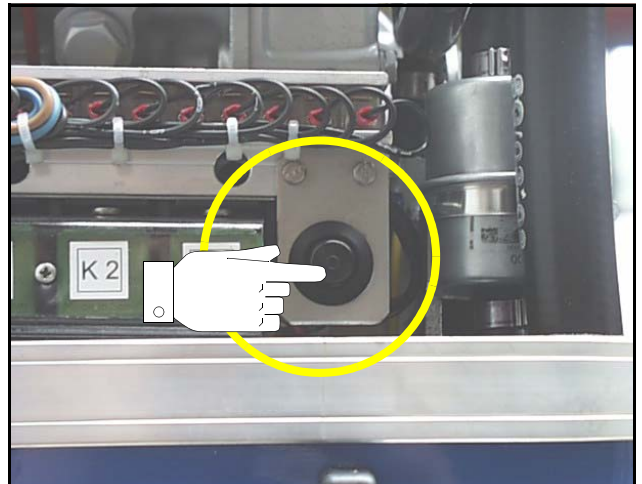

- Pressing the failure bypass switch for approx 3 - 4 minutes will loosen the ventilation screw located at the fuel solenoid valve. The button must continue to be pressed, whilst opening the screw. A large cloth or Kleenex tissue must be laid beneath the connection to prevent escaping fuel running into the capsule. If the fuel runs out without air bubbles, then the ventilation screw can be closed. Only then may the button be released.

Use spanner size 10 mm.



Fig. 6.9-2: Ventilation screw at the fuel solenoid valve



Not all generator models has a fuel solenoid valve. At generators without fuel solenoid valve, a single ventilation screw is installed.

**Note!:**




- Pressing the starter button can now start the machine. The machine should start after a short period.
- If this does not occur, then a connecting nut fitted to the injection line must be loosened and starting procedure repeated. Retighten the washers after successfully starting. The injection line must be raised by several millimetres.

Use spanner size 17 mm.



Fig. 6.9-3: Injection nozzles

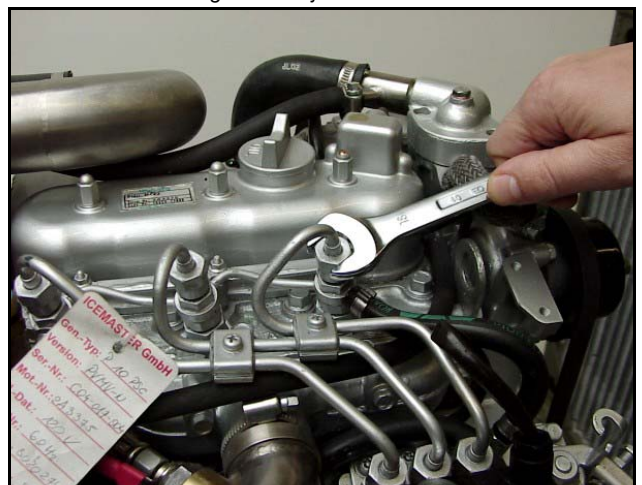

- Switch main switch „OFF“.

## 6.9.1 Replacement of the fuel filter

Exchanging the filter, depending upon fuel contamination, should take place after 300 operational hours at the very least. The inlet must be clamped, before exchanging the filter.

Remove the hoses from the used filter and fasten them to the new filter. The arrow on the filter housing indicates the direction of the fuel flow. A clogged filter causes a decreased power output of the generator.

Fig. 6.9.1-1: Fuel Filter




### 6.9.1.1 Optional fuel filter with sight glass

The filter change depends on the fuels' degree of pollution, but should be executed every 300 operating hours at the latest.

- 01. Fuel filter housing
- 02. Fuel filter element
- 03. Sight glass

Fig. 6.9.1.1-1: Fuel filter

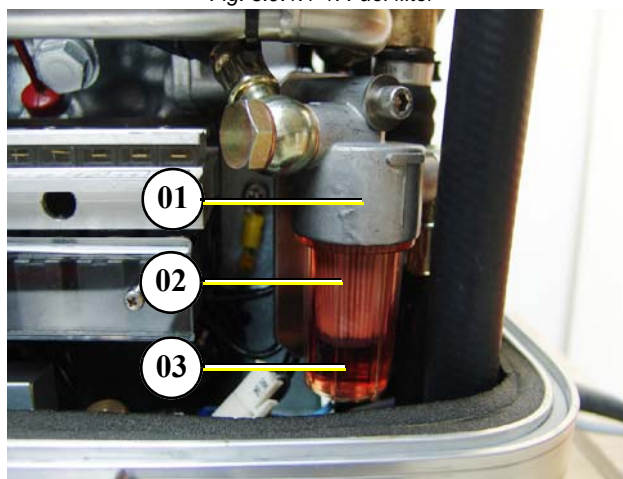

1. Unscrew the housing from its mount (left hand rotation).

Fig. 6.9.1.1-2: Fuel filter





2. Unscrew the filter element from the mount (left hand rotation).

Fig. 6.9.1.1-3: Fuel filter



3. Screw the new filter element into the mount.
4. Lubricate the sight glasses o-ring with a heat resistant grease (Specification: Antiseize) and screw the sight glass back into its mount (right hand rotation).

Fig. 6.9.1.1-4: Fuel filter



## 6.10 Checking the water separator in the fuel supply

The pre-filter with water separator has a cock underneath, by which means the water can be drained.

This water sinks to the bottom, due to the difference in the densities of water and fuel. Water is heavier than the diesel

*Sample picture*

Fig. 6.10-1: Pre-filter with water separator






### 6.10.1 Replace the air filter mat

1. Open the air suction housing by loosen the six screws on the housing cover.

Use spanner size 8 mm.




*Fig. 6.10-1: Air suction housing*

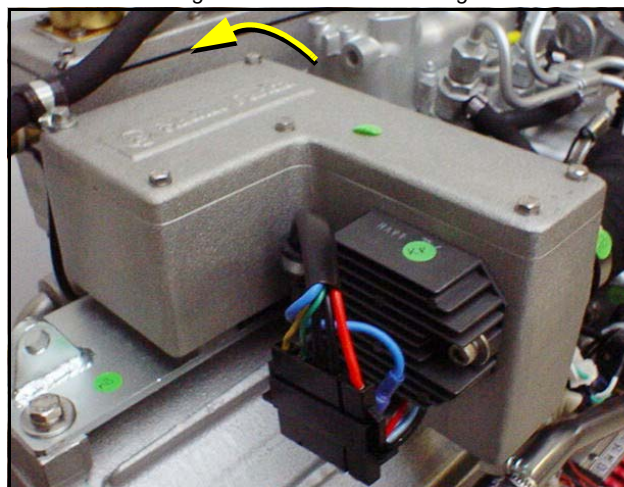

2. Change the air filter mat.
3. Close the suction air housing.


*Fig. 6.10-2: Opened air suction housing*

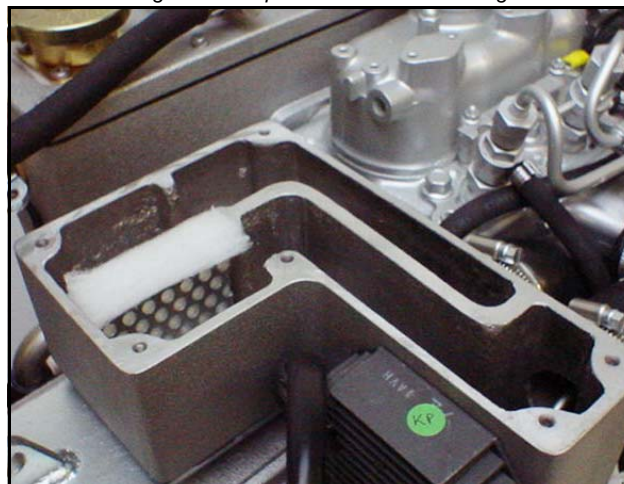

### 6.10.2 Alternative replacement of the air filter mat with pull out holder


1. Air filter housing with pull out holder.

*Fig. 6.10.2-1: Air suction housing with pull out holder*

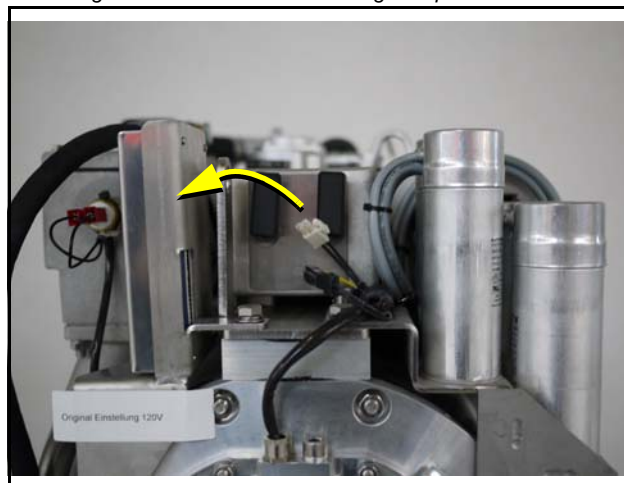


2. Tip the two fasteners 90°.

Fig. 6.10.2-2: Air suction housing with pull out holder

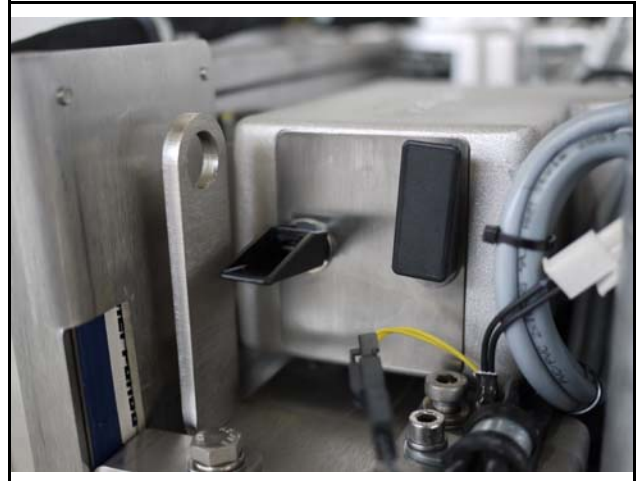

3. Pull the filter mat holder out.


Fig. 6.10.2-3: Air suction housing with pull out holder

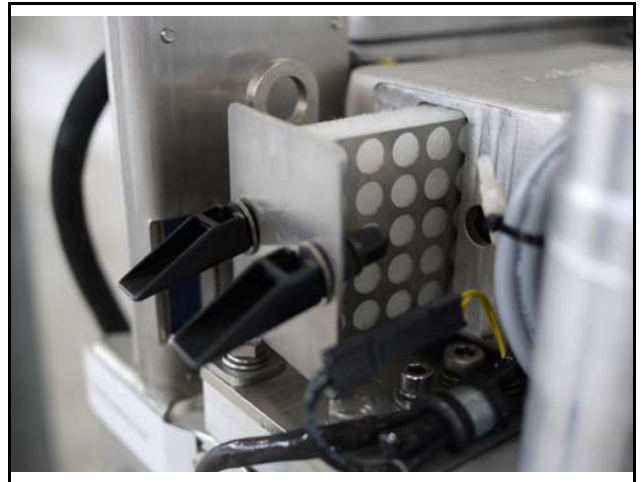

4. Replace the air filter mat.

Fig. 6.10.2-4: Air suction housing with pull out holder

5. Re-assembly in reversed order.

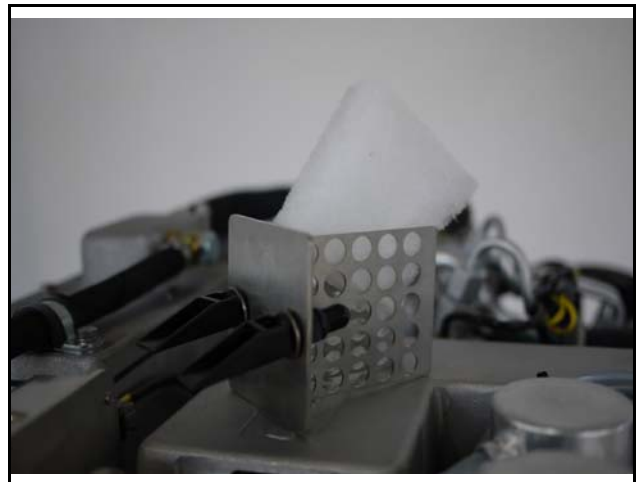


### 6.10.3 Alternative replacement of the air filter at housing with snap fasteners

1. Open the combustion air housing by loosening the closure on the right side of the housing.

01. Closure


Fig. 6.10.3-1: Air suction housing

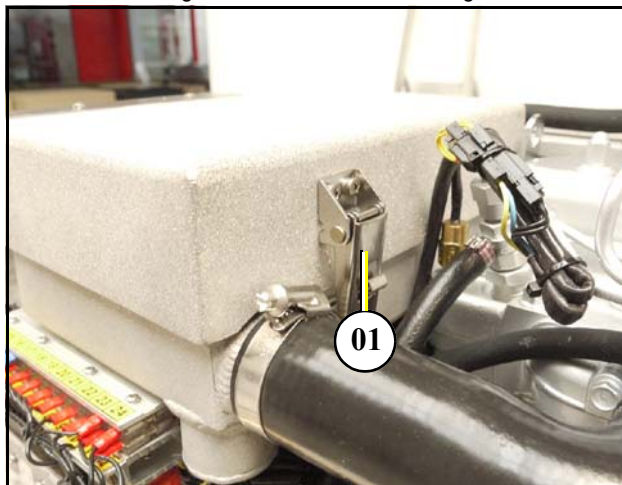

2. Open the combustion air housing by loosening the closure on the left side of the housing.

01. Closure

Fig. 6.10.3-2: Air suction housing

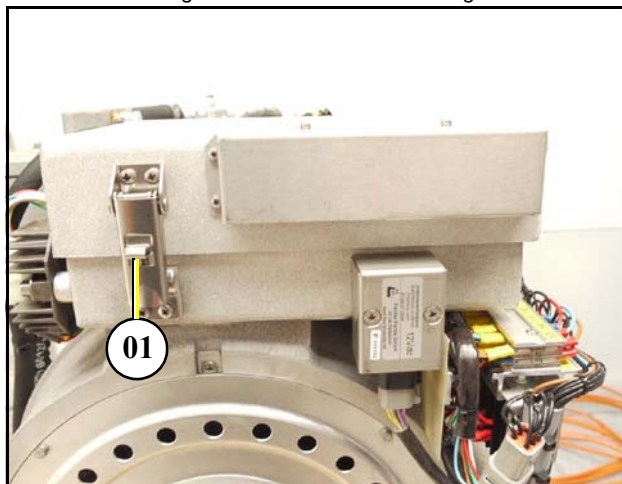


3. Open the air housing by pulling the cover.
4. Lift out the air filter element of the cover of the air filter housing.

01. Air filter

5. Replace cover in reverse procedure.

Fig. 6.10.3-3: Air suction housing

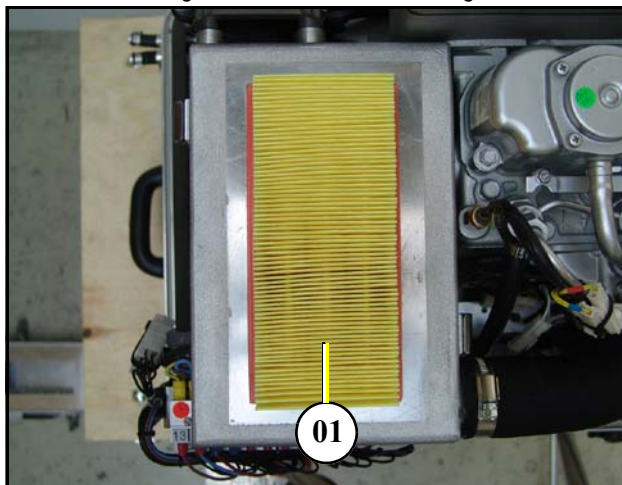

*Sample picture*



### 6.10.4 Ventilation of the coolant circuit / freshwater

#### Special notes for the ventilation of the cooling system

If the cooling water is drained, or if other air has entered the cooling system, it is necessary to ventilate the cooling system.

This ventilating procedure must be repeated several times:

**The generator must be switched off before opening the ventilating points!**

**Pay attention that the external coolant expansion tank is connected with the generator by the intended connection point.**

**Further it should be guaranteed that the expansion tank is attached in sufficient height (200 m) over the level of the generator highest point.**

#### Expansion tank

#### Attention



Fig. 6.10-1: Expansion tank



1. Open the ventilating screw above the cooling water pump casing. Not present at all models

Use spanner size 10 mm.



*Not present at all models*


Fig. 6.10-2: Ventilating screw



- Open the ventilating screw on the thermostat casing.  
Use spanner size 10 mm.



Fig. 6.10-3: Ventilating screw on the thermostat housing

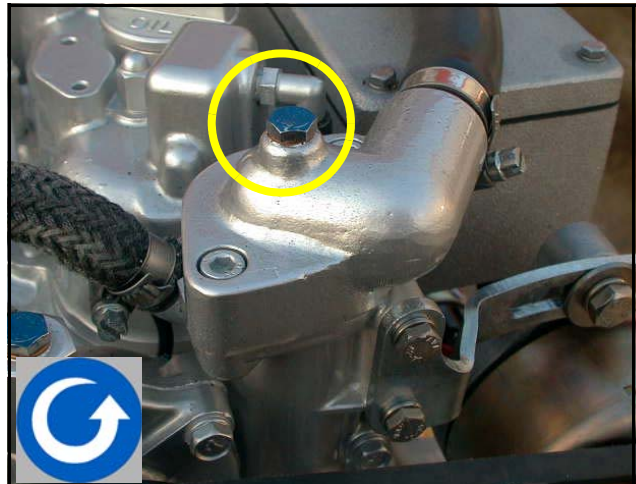

- Pour cooling water into the cooling water filling necks.  
(At generators without filler, The cooling water can be filled into the external expansion tank instead)
- If the cooling water level no longer drops (the cooling water level in cold waters must cover the tin in the exhaust elbow), close the filler cover and the cooling water screws and then start the generator.
- Run the generator for approx. 60 Seconds, then switch off
- Refill cooling water via the compensation tank.
- The compensation tank is connected to the generator by two hoses.

Fig. 6.10-4: Cooling water filler cap



The external compensation tank should be filled to a max 20 % in a cold state. It is very important that a larger expansion area is maintained above the cooling water level.


- Repeat this procedure 1 - 5 times.

If there is no change to the state of the cooling water level, the generator is re-started for 5 minutes. Thereafter the de-aeration must be repeated two to three times.

**The ventilation screw above the cooling water pump casing may not be opened under any circumstances, whilst the generator is running. Air will be sucked through the opening, if this should happen by mistake. Venting the whole system afterwards is necessary and very difficult.**



Fig. 6.10-5: Ventilation screw above the cooling water pump casing

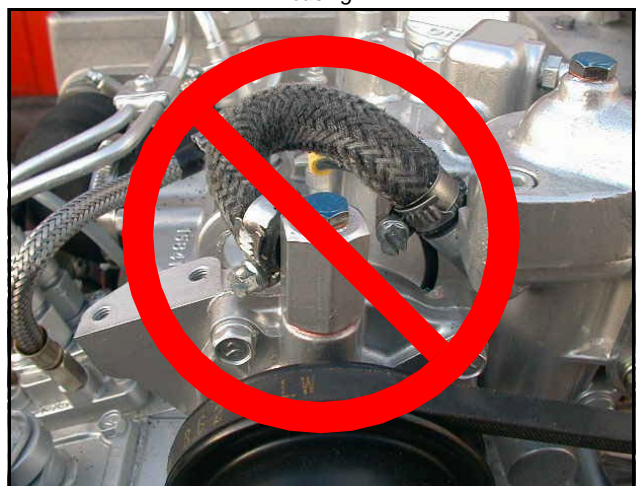

## 6.11 V-belt replacement for the internal cooling water pump

The V-belt wears in a short time due to high ambient temperature within the closed capsule (approx. 85 °C). The air in the generator capsule is not only warm but also very dry. Therefore it is possible, that the „softener“ in the rubber compositors wear after a very short time of operation.


Therefore, the V-belt must be checked in short time distances. It may be possible, that the V-belt must be changed after a few weeks. Therefore the V-belt must be checked every 150 hours. The v-belt must be seen as a wearing part. Therefore it is necessary to have enough spare V-belts on board. We therefore recommend to have the Fischer Panda Service Kit on board.

1. Loose the screw on the upper alternator mounting.



Sample picture

Fig. 6.11-1: Alternator screw

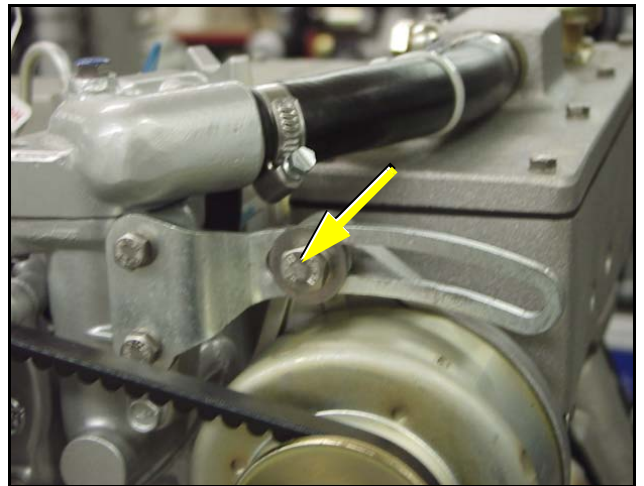

2. Loose the screw underneath the alternator.



Sample picture

Fig. 6.11-2: Screw underneath the alternator






3. The alternator must be pressed in the direction of the thermostat housing.
4. Exchange the V-belt.

*Sample Picture*


Fig. 6.11.0-3: Alternator

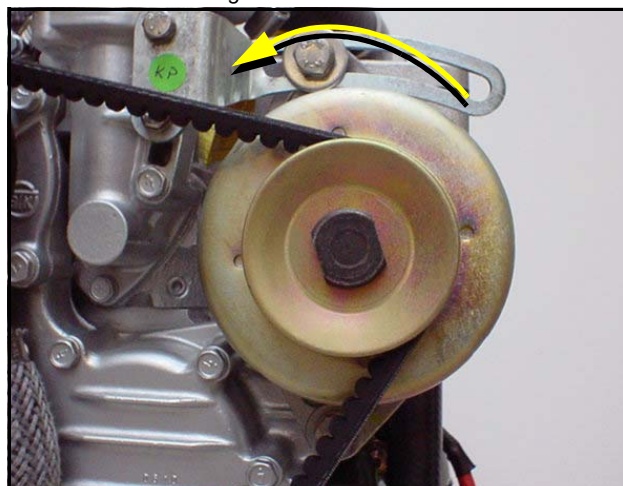

5. Afterwards, the V-belt must be tightened again.
6. The V-belt must be tightened in such a way, that it is possible to press it about approx. 10 mm.
7. Tighten the screws above and underneath the alternator.

*Sample picture*

Fig. 6.11.0-4: V-belt

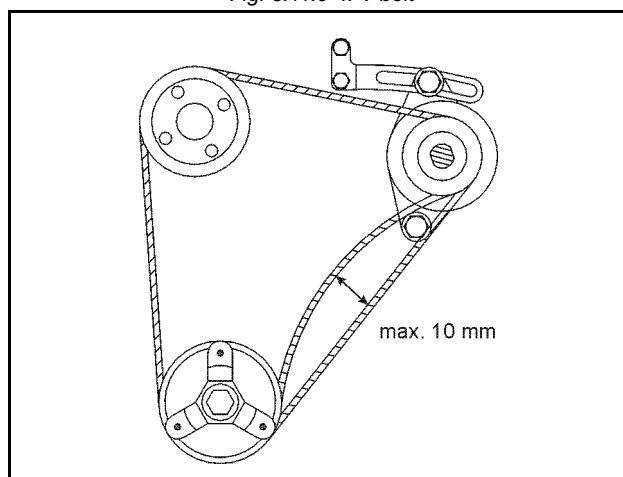

## 6.12 The raw water circuit

---

### 6.12.1 Clean raw water filter

---

The raw water filter should be released regularly from arrears. In each case the water cock must be closed before. It is mostly sufficient to beat the filter punnet.

If water should seep through the cover of the raw water filter, this may be sealed in no case with adhesive or sealant. Rather must be searched for the cause for the leakage. In the simplest case the sealing ring between caps and filter holders must be exchanged.

Fig. 6.12.1-1: Raw water filter



## 6.13 Causes with frequent impeller waste

---


The impeller of the cooling water pump must be regarded as wearing part. The life span of the impeller can be extremely different and exclusively depends on the operating conditions. The cooling water pumps of the PANDA generators are laid out in such a way that the number of revolutions of the pump lies low compared with other gensets. This is for the life span of the pump a positive effect. Unfavourable affects the life span of the impeller, if the cooling water sucking in way is relatively long or the supply is handicapped, so that the cooling water sucking in range develops a negative pressure. This can reduce first of all the power of the cooling water pump extremely that the wings of the impeller are exposed to very strong loads. This can shorten the life span extremely. Further the operation of the impeller pump loaded in waters with a high portion of suspended matters. The use of the impeller pump is particularly critical in coral water bodies. Cases are well-known, which a impeller pump had so strongly run after 100 hours already that the lip seal on the wave was ground in. In these cases sharp crystal parts of the coral sand assess in the rubber seal and affect like an abrasive the high-grade steel shank of the impeller pump. If the generator were mounted over the water level it is particularly unfavourable for the impeller pump. After the first start some seconds will pass by, until the impeller can suck in cooling water. This short unlubricated operation time damages the impeller. The increased wear can lead after short time to the loss. (see special notes: "Effects on the impeller pump, if the generator is mounted over the waterline")

### 6.13.1 Replacement of the impeller

Close the raw water stop cock.

*Representative picture*


Fig. 6.13.1-1: Raw water cock

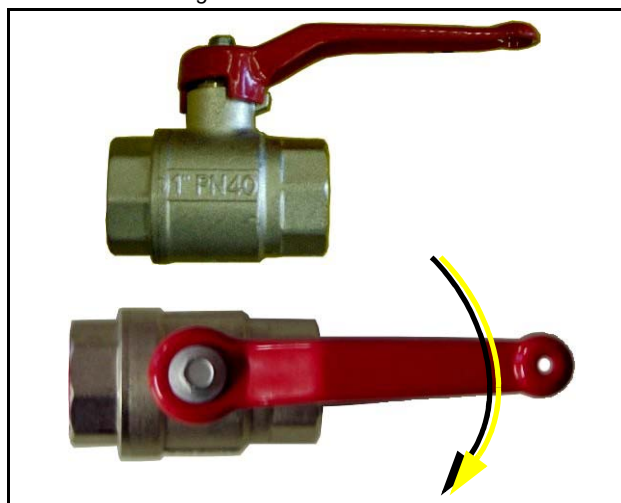

Raw water pump on the front side of the genset.

*Representative picture*

Fig. 6.13.1-2: Raw water pump

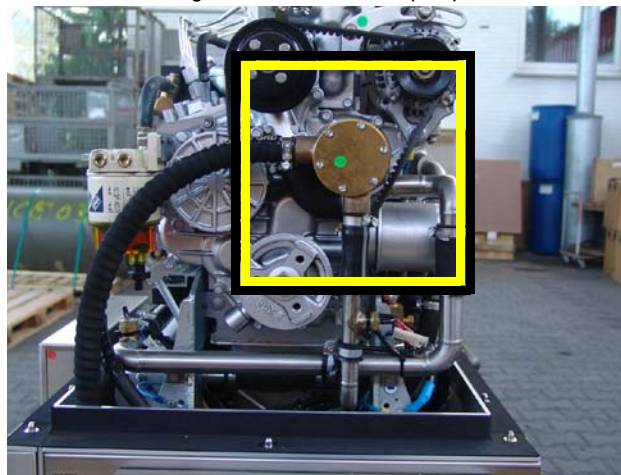

Remove the cover of the raw water pump by loosen the screws from the housing.

Fig. 6.13.1-3: Cover raw water pump



*Representative picture*


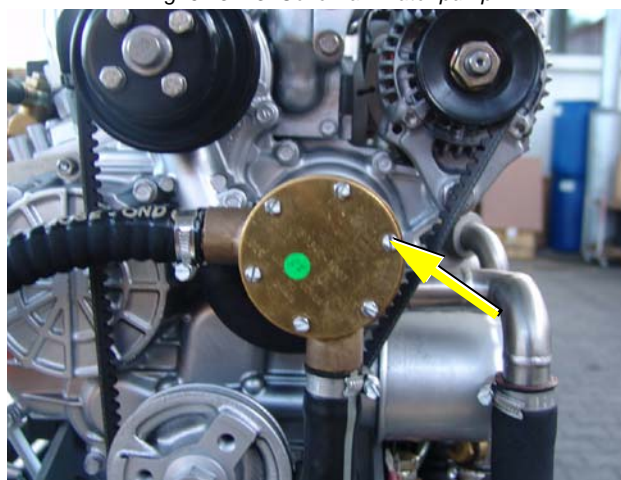


Fig. 6.13.1-4: Impeller pump

Pull to the impeller with a multigrip pliers of the wave.

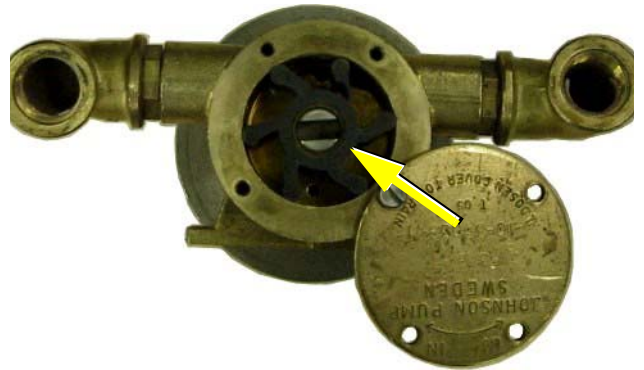

Mark the impeller, to make sure that these is used in the correct position at re-installation.

*Representative picture*

**Check to the impeller for damage and replace it if necessary.**

Before the reinsertion into the housing the impeller should have been lubricated with glycerin or with a non-mineral oil based lubricant e.g. silicone spray.

The impeller is attached to the pump wave (if the old impeller is used, pay attention to the before attached marking).

*Representative picture*

Fig. 6.13.1-5: Impeller



**Fastening the cover and use a new seal.**



*Representative picture*

Fig. 6.13.1-6: Gasket



### 6.13.2 Check and discharge the capacitors

**NEVER** check the capacitors whilst the generator motor is running! Charged capacitors can be lethal. Do not contact the capacitors with bare fingers or non-insulated metallic objects! In order to test the capacitors, the terminal lead wires have to be disconnected using pliers or a screwdriver with insulated handle(s). Once the wires have been removed, the capacitors must be discharged by bridging the capacitor terminals with a discharge reactor.

**Attention!**






The capacitors can be checked using a multimeter with capacitor measuring.

The capacitors fitted inside the cabinet are discharged over the soldered resistor at every capacitor. The discharge over the discharge reactor (see special tools) is security because the capacitor voltage is lethal.

**Discharge the capacitor - single phase**

- 01. Discharge reactor (5-10kOhm)
- 02. Multimeter
- 03. Capacitor


Fig. 6.13.2-1: Discharge capacitor single phase

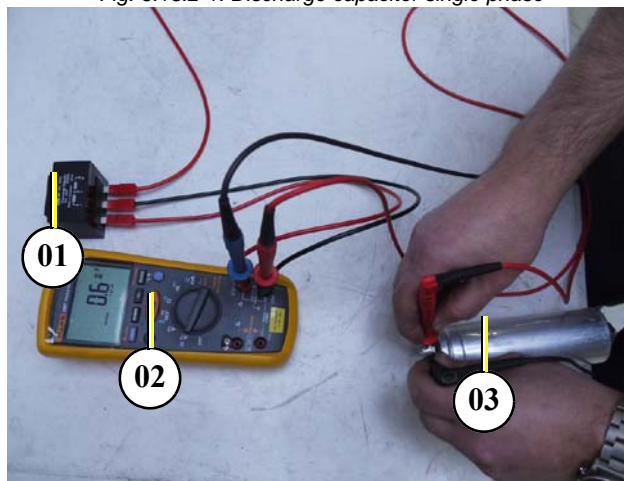

**Discharge the capacitor - three phase**

- 01. Discharge reactor (5-10kOhm)
- 02. Multimeter
- 03. Capacitor

Fig. 6.13.2-2: Discharge capacitor three phase

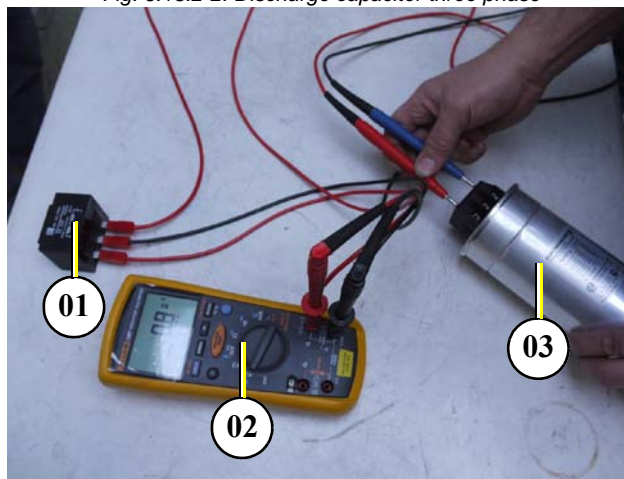

At three phase capacitors the discharge must be made between every phase (L1-L2; L2-L3; L1-L3)

**Checking**

Switch the multimeter to capacitor measuring and connect the meter end probes to the capacitor terminals. Measure capacity of the capacitor.

Fig. 6.13.2-3: Capacitor checking



**Check all capacitors in the electrical cabinet**

Test each capacitor by touching the multimeter (set on capacitor measuring) probes on the capacitor terminals: measure the capacity of the capacitors.

The capacitors should not be removed from the electrical cabinet before the check is made.

### **Checking the electrical connections to the Capacitor**

It must be ensured that the electrical connections to the capacitor are always tight fitting. Loose connections with transitional resistance can mean that the contact surfaces will become heated externally. This can lead to faster deterioration of the capacitors.



## 6.14 Replacing the electric starter

The described procedure is representative for Fischer Panda generators. The original location of the item must be taken from the generator description of this manual. All replacements and repairs should be done by a trained person.

**Ensure that the generator cannot be started up accidentally. Remove battery main switch.**

For part numbers, refer to the spare parts catalogue.

1. Open the capsule.
  01. Electric starter

**NOTE: Representative procedure**



**ATTENTION!**



Fig. 6.14-1: Electric starter

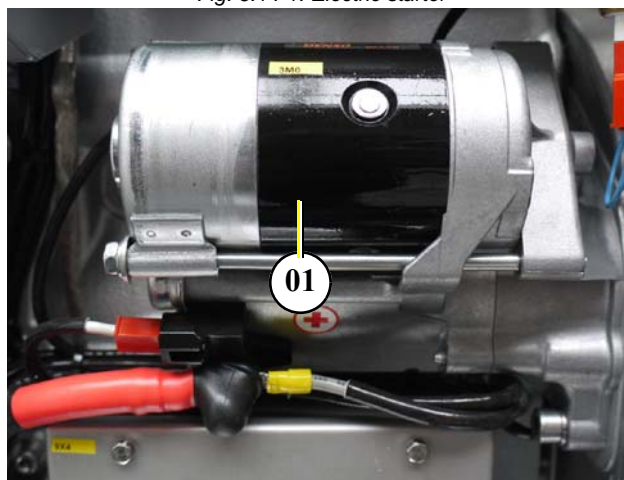


Fig. 6.14-2: Electric starter


2. Pull off connector.



3. Pull off rubber cap.
4. Loosen hex nut with wrench with W.A.F. 13 mm and remove the electric connections.



Fig. 6.14-3: Electric starter

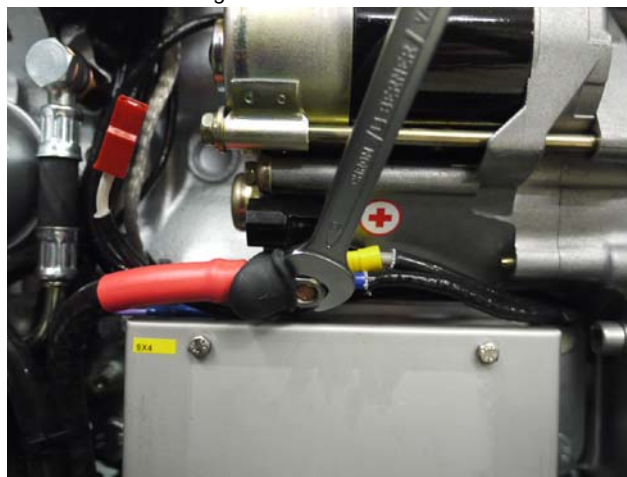

5. Loosen the lower attachment screw with a hex socket wrench.



Fig. 6.14-4: Electric starter



**Tools needed:**

01. Socket wrench with long and short extension and size 6 mm socket

Fig. 6.14-5: Tools



The upper attachment screw is visible from up top, view between engine and exhaust manifold.

- Slide the socket wrench fitted with both extensions under the exhaust manifold and insert in the hex socket screw. Loosen upper attachment screw.




- Pull out electric starter.
- To reinstall, reverse the order of steps.

Fig. 6.14-6: Electric starter



Fig. 6.14-7: Electric starter

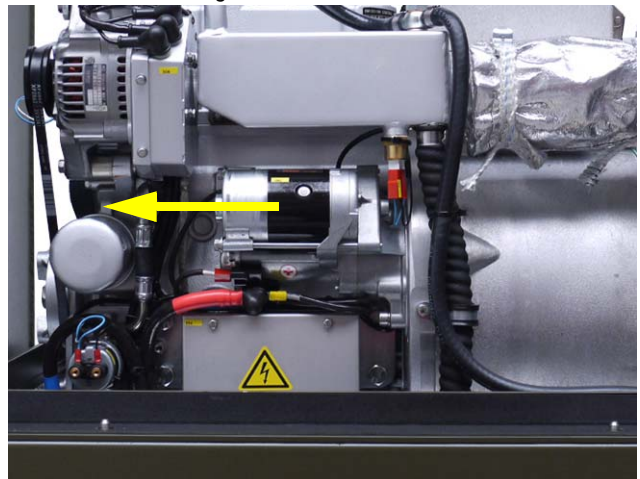

## 6.15 Replacing the oil pressure switch

The described procedure is representative for Fischer Panda generators. The original location of the item must be taken from the generator description of this manual. All replacements and repairs should be done by a trained person.

**Ensure that the generator cannot be started up accidentally. Remove battery main switch.**

For part numbers, refer to the spare parts catalogue.

1. Open both connectors (01) on the oil pressure switch.
2. Pull off rubber cap (02).

**NOTE: Representative procedure**



**ATTENTION!**



Fig. 6.15-1: Oil pressure sensor

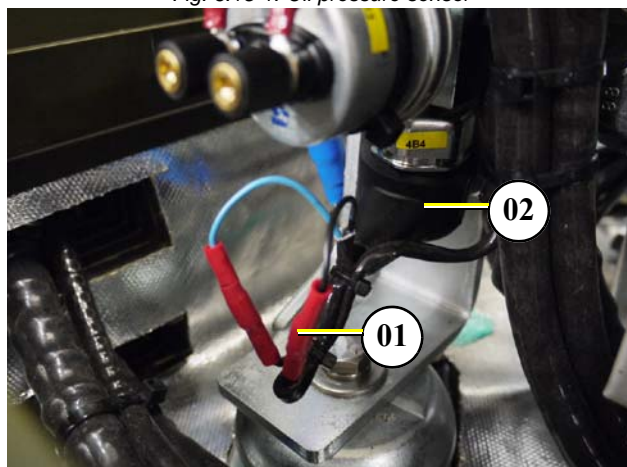


Fig. 6.15-2: Oil pressure sensor

3. Loosen and remove oil pressure switch 4B4 using a wrench with W.A.F. of 29 mm. A large piece of cloth or absorbent tissue must be placed under the connection to prevent escaping oil from running into the capsule.



4. To reinstall, reverse the order of steps. The switch is fitted with a tapered thread and requires no special seal.






### 6.15.1 Replacing the oil pressure sensor (optional component)

1. Unscrew both connectors (01) on the oil pressure sensor.

Fig. 6.15.1-1: Oil pressure sensor

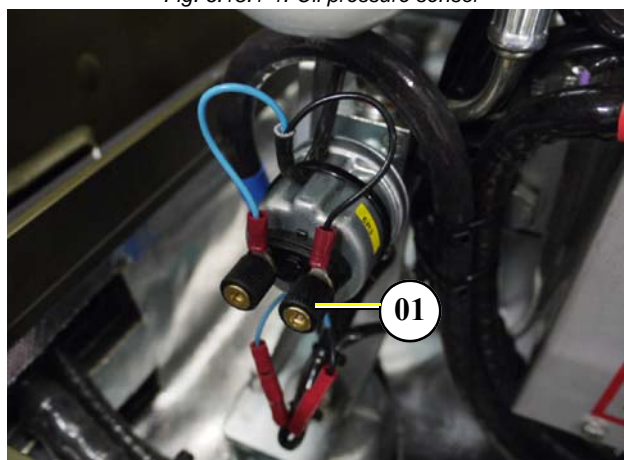

2. Loosen and remove oil pressure sensor 6R3 using a wrench with W.A.F. of 17 mm. A large piece of cloth or absorbent tissue must be placed under the connection to prevent escaping oil from running into the capsule.



To reinstall, reverse the order of steps. The sensor is fitted with a tapered thread and requires no special seal.

Fig. 6.15-2: Oil pressure sensor



## 6.16 Replacing the operating current relays

The described procedure is representative for Fischer Panda generators. The original location of the item must be taken from the generator description of this manual. All replacements and repairs can be done by the user.

**NOTE:Representative procedure**



1. Remove the two fixing screws of the plastic cover using a size 0 or 1 phillips screwdriver.



Fig. 6.16-1: Relay



2. Remove the plastic cover.

Fig. 6.16-2: Relay



3. Pull relay from the socket and replace with new relay.
4. To reinstall, reverse the order of steps.

Fig. 6.16-3: Relay



## 6.17 Replacing the fuses

The described procedure is representative for Fischer Panda generators. The original location of the item must be taken from the generator description of this manual. This replacement can be done by the user.

**NOTE:Representative procedure**



The fuses should be replaced every 2000 operating hours.



**Figures similar!**

1. Remove the two fixing screws of the plastic cover using a size 0 or 1 phillips screwdriver.



*Representative picture*

2. Remove the plastic cover.

*Representative picture*

3. Using the fuse extraction tool, remove the fuse and replace it with a new one.



4. To reinstall, reverse the order of steps.

*Representative picture*

Fig. 6.17-1: Fuse


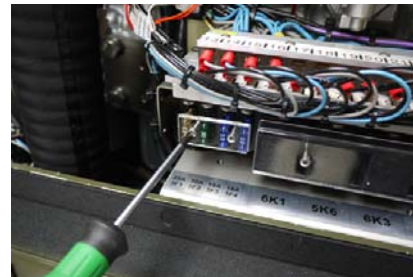


Fig. 6.17-2: Fuse



Fig. 6.17-3: Fuse

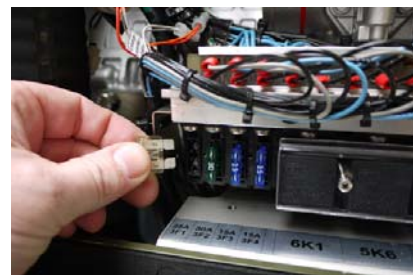

## 6.18 Replacing a thermoswitch

The described procedure is representative for Fischer Panda generators. The original location of the item must be taken from the generator description of this manual. All replacements and repairs should be done by a trained person.

**Ensure that the generator cannot be started up accidentally. Remove battery main switch.**

For part numbers, refer to the spare parts catalogue.

1. Open the capsule.
  01. Thermoswitch

**NOTE: Representative procedure**



**ATTENTION!**



Fig. 6.18-1: Thermoswitch

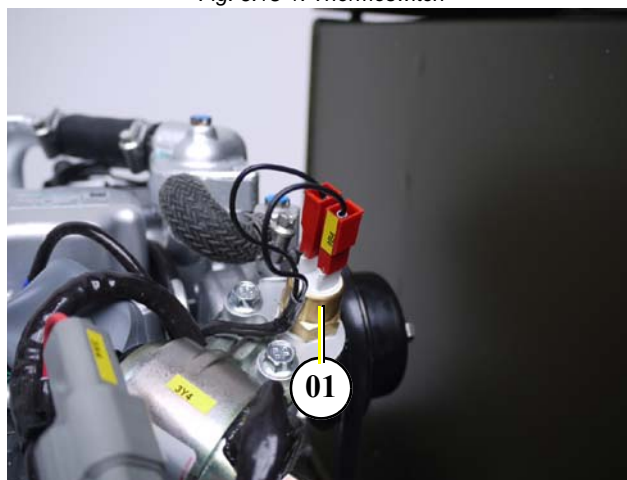


Fig. 6.18-2: Thermoswitch

2. Remove cable ties.



3. Disconnect electric supply line of the thermostat.

*Fig. 6.18-3: Thermostat*

4. Loosen thermostat with a wrench with W.A.F. 22 mm.

*Fig. 6.18-4: Thermostat*

5. Before installing the new thermostat, check the label for correct item.
6. To reinstall, reverse the order of steps.

*Fig. 6.18-5: Thermostat*

## 6.19 Replacing the injection nozzles

The described procedure is representative for Fischer Panda generators. The original location of the item must be taken from the generator description of this manual. All replacements and repairs should be done by a trained person.

**NOTE: Representative procedure**



**Ensure that the generator cannot be started up accidentally. Remove battery main switch.**

**ATTENTION!**



### Injection lines

Figures similar!

1. Remove cable ties from the injection lines.



2. Loosen the pipe clamps (1) using a PH2 phillips screwdriver.



Fig. 6.19-1: Injection nozzles


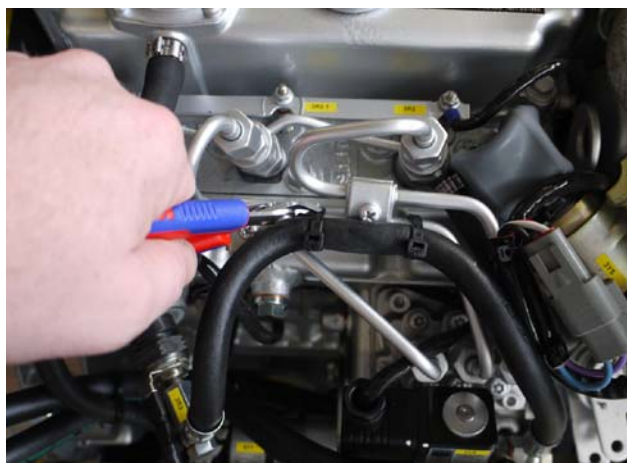


Fig. 6.19-2: Injection nozzles





3. Loosen the union nut on the injection lines (1). Wrench with W.A.F. of 17 mm.

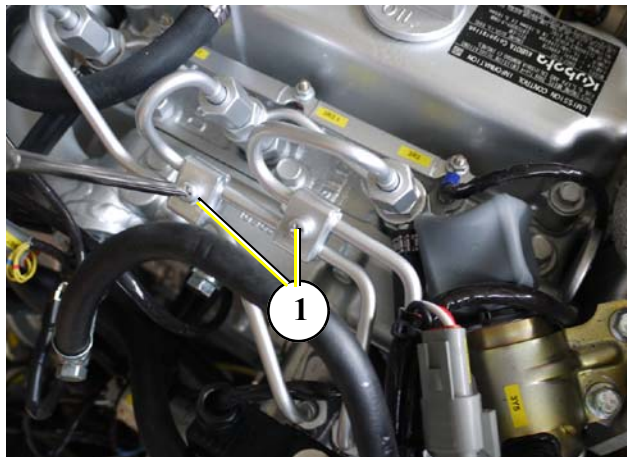


**For assembly:**

- Blast dust out of the lines using compressed air. Then, reassemble the lines by proceeding in the reverse order of steps.

(1) Injection line

Torque	Injection line union nut	24.5 to 34.3 Nm 2.5 to 3.5 kgm 18.1 to 25.3 pound-foot
--------	--------------------------	--


Fig. 6.19-3: Injection nozzles

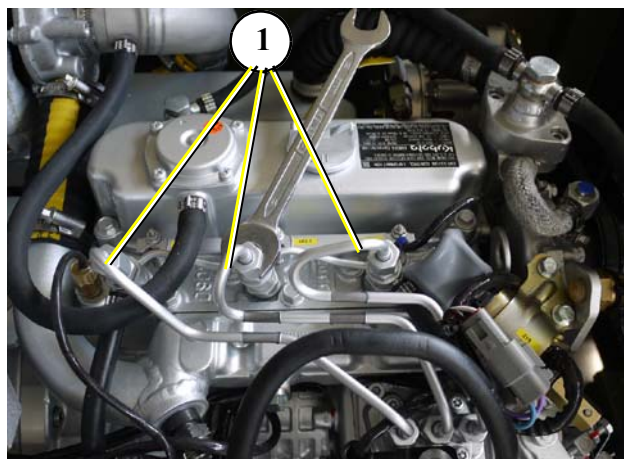

**Nozzle holder assembly and glow plug**

1. Dismount the return line (1). Wrench with W.A.F. of 17 mm.
2. Remove the nozzle holder assembly (4). Wrench with W.A.F. of 21 mm.
3. Remove the copper seal (5) and the heat shield (6).
4. Dismount the connector (2) from the glow plugs (3)
5. Remove the glow plugs (3).

Fig. 6.19-4: Injection nozzles

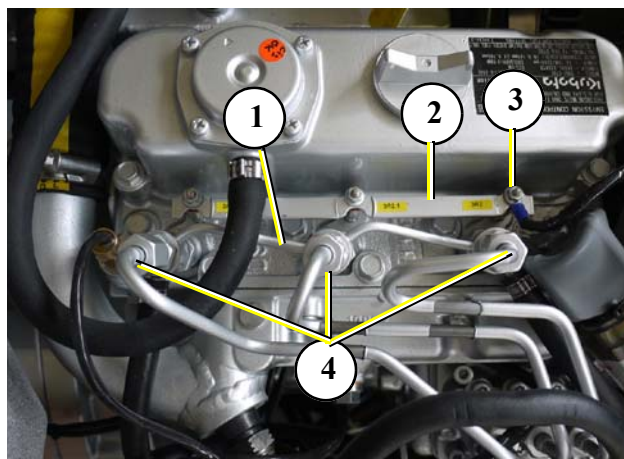


**For assembly:**

- Replace the copper seal and the heat shield with new parts.

- (1) Return line
- (2) Connector
- (3) Glow plug
- (4) Nozzle holder assembly
- (5) Copper seal
- (6) Heat shield

Torque	Fixing nut for overflow oil line	19.6 to 24.5 Nm. 2.0 to 2.5 kgm 14.5 to 18.1 pound-foot
	Nozzle holder assembly	49.0 to 68.6 Nm 5.0 to 7.0 kgm 36.2 to 50.6 pound-foot
	Glow plug	7.8 to 14.7 Nm. 0.8 to 1.5 kgm 5.8 to 10.8 pound-foot

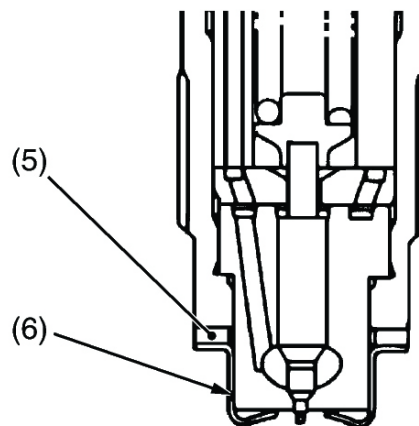




**Removing the nozzle heat shield ring seal within the scope of the maintenance work.**

**IMPORTANT!**

- Use a phillips screwdriver (1) with a diameter greater than the hole in the heat ring seal (approx. 6 mm (1/4 in)).
1. Lightly turn the screwdriver (1) into the hole in the heat ring seal.
  2. Rotate the screwdriver three to four times in each direction.
  3. When rotating the screwdriver, slowly extract the heat ring seal (4) together with the injection nozzle gasket (3).
  4. If the heat ring seal drops back in, repeat the procedure above.

Fig. 6.19-5: Injection nozzles

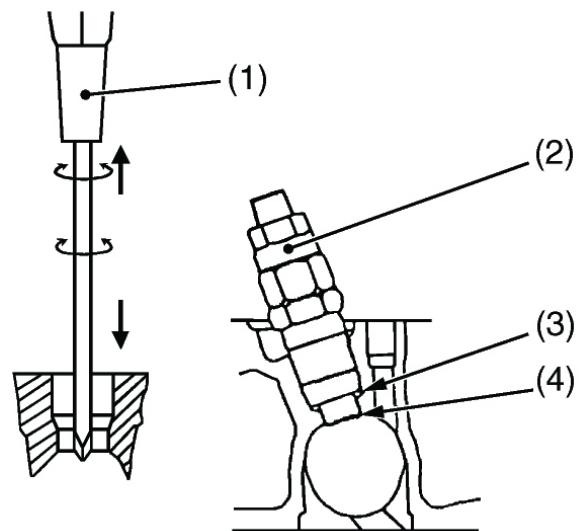

**For assembly:**

- If the injection nozzle is uninstalled for cleaning or maintenance purposes, the heat seal ring and the injection nozzle gasket must be replaced.

- (1) Phillips screwdriver (2) Injection nozzle
- (3) Injection nozzle gasket (4) Heat ring seal

**6.20 Replacing the glow plugs**

The described procedure is representative for Fischer Panda generators. The original location of the item must be taken from the generator description of this manual. All replacements and repairs should be done by a trained person.

**NOTE:Representative procedure**




**Ensure that the generator cannot be started up accidentally. Remove battery main switch.**

**ATTENTION!**



1. Open the capsule.
  01. Glow plugs

Fig. 6.20-1: Glow plugs

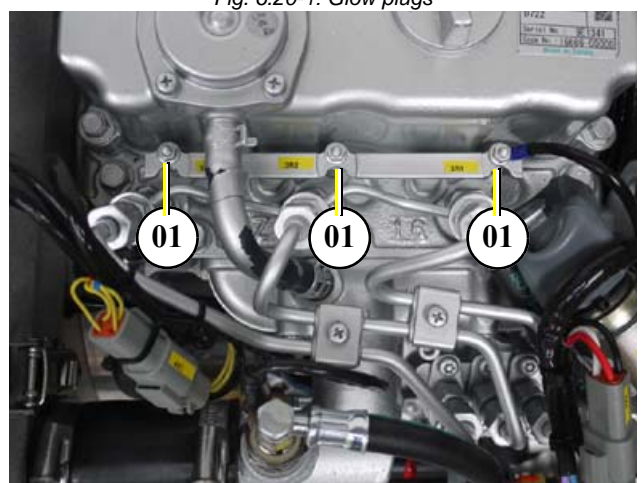

**Figures similar!**

- Remove the three hex screws using a size 7 mm socket wrench .



- Remove the glow plug connector.

- Loosen the glow plug using a socket wrench with a long size 10 mm socket.



Fig. 6.20-2: Glow plugs



Fig. 6.20-3: Glow plugs


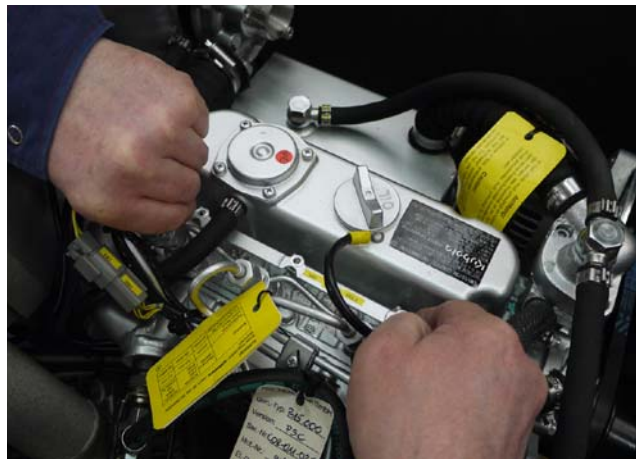


Fig. 6.20-4: Glow plugs



5. Remove glow plug.
6. To reinstall, reverse the order of steps.

*Fig. 6.20-5: Glow plugs*

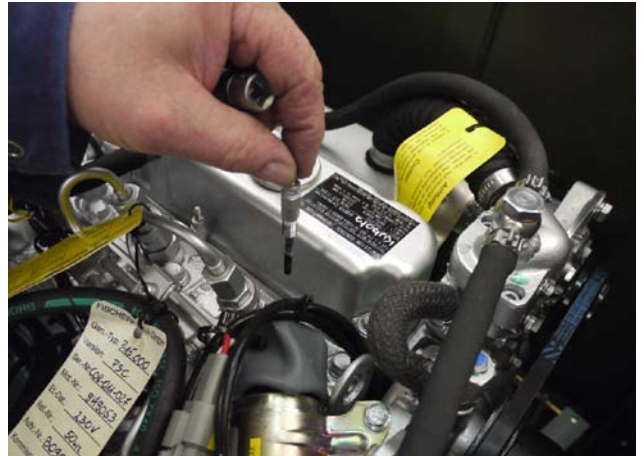

**6.21**

---

---

Leere Seite / Intentionally blank

## 7. Generator Faults

### 7.1 Personal requirements

---

The work described here, unless otherwise indicated, are performed by the operator.

More repair work may be performed only by specially trained personnel or by authorized repair shops (Fischer Panda service points). This is especially for working on the valve timing, fuel injection system and the engine repair.

### 7.2 Hazard notes for the troubleshooting

---

**Follow the general safety instruction at the front of this manual.**

**Notice!**



**Danger for life! - The generator can be equipped with an automatic start device. This means the generator can be started by an external signal. To avoid an unexpected starting of the generator, the starter battery must be disconnected before start working at the generator.**

**Warning!: Automatic start**



**Working at a running generator can result in severe personal injury. Therefore before starting work at the generator:**

**Warning!: Risk of injury**



Make sure that the generator is stopped and the starter battery is disconnected to guarantee that the generator cannot be inadvertently started.

Do not run the generator with removed sound isolation cover.

**Improper installation/maintenance can result in severe personal injuries or material damage.**

**Warning!: Risk of injury**



- Always undertake installation/maintenance work when the generator is switched off.
- Ensure there is sufficient installation clearance before start working.
- Ensure tidiness and cleanliness at the workplace. Loose components and tools lying around or on top of each other are sources of accidents.
- Only perform installation work using commercially available tools and special tools. incorrect or damaged tools can result injuries.

**Oil and fuel vapours can ignite on contact with ignition sources. Therefore:**

**Warning!: Danger of fire**



- No open flames during work on the generator.
- Do not smoke.
- Remove oil and fuel residues from the generator and floor.



**Contact with engine oil, antifreeze and fuel can result in damage to health. Therefor:**

- Avoid skin contact with engine oil, fuel and antifreeze.
- Remove oil and fuel splashes and antifreeze from the skin immediately.
- Do not inhale oil and fuel vapours.

**Danger for Life. Improper handling, operation, installation and maintenance can result in severe personal injury and/or material damage.**

Electrical voltages above 48 volts (battery chargers greater than 36 volts) are always dangerous to life). The rules of the respective regional authority must be adhered to. Only an electrician may carry out installation of the electrical connections for safety reasons.

**Generator, oil and antifreeze can be hot during/after operation. Risk of severe burns.**

**During Installation/maintenance personal protective equipment is required to minimize the health hazards.**

- Protective clothing
- safety boots
- protective gloves
- Ear defender
- safety glasses

**Disconnect all load during the work at the generator to avoid damages at the load.**

**Danger!: Danger of poisoning**



**ATTENTION!: Danger to Life - High voltage**



**Warning!: Hot surface/material**



**Instruction!: Personal protective equipment necessary.**



**Attention!: Disconnect all load**



### 7.3 Tools and measuring instruments

---

---

**In order to be able to manage disturbances while driving, the following tools and measuring instruments should belong to the equipment kept on board:**

- Multimeter for voltage (AC), frequency and resistance
- Measuring instrument for inductance
- Measuring instrument for capacity
- Current absorbing clamps
- Thermometer (ideal is a infra-red thermometer)
- Pressure device (pincer) for coolant circuit

## 7.4 Troubleshooting table and flowchart

---

### 7.4.1 Generator output voltage too low

---

For 50 Hz versions: less than 200 V

Cause	Solution
Generator is overloaded.	Reduce the electrical load (switch off load)
Motor is not reaching the rated rpm.	Refer to „motor faults“ section.
Defective capacitor(s).	Check capacitors and replace if necessary.

### 7.4.2 Generator voltage too high (more than 240 V - 50 Hz)

---

Cause	Solution
Over-energizing due to wrong capacitors.	Check capacitors type and replace if necessary.
Measuring voltage on the VCS circuit board is missing.	Check VCS System, check cable connections.

### 7.4.3 Generator voltage fluctuates

---

Cause	Solution
1. Disturbances on the electrical system/user side. 2. Motor disturbances.	1. Check if electrical load is fluctuating. 2. Refer to section: „Motor runs irregular“.

### 7.4.4 Generator not able to start electric motor

---

Cause	Solution
If the generator is unable to supply enough power to start an electric motor 1-phase, it is usually because the motor draws too much current during starting process.	Check the motor's current draw required for starting (switch to 3-phase, if possible). This could be remedied by providing stronger capacitors or installing an optional „Easy Start Booster Set“ (see Appendix). Enquire at your nearest Panda dealer or directly at the manufacturer.

### 7.4.5 Diesel motor fails to start

---

Cause	Solution
Starter battery switched „OFF“.	Check position of battery switch and switch „ON“ (if installed).
Starter battery voltage insufficient (battery too weak).	Inspect battery terminals and cables for a good electrical connection (Inspect against corrosion, tattered wires, etc.).
Starting current disrupted.	During the normal starting process, the battery voltage drops to 11V with a fully charged battery. If the voltage does not drop during starting, the electrical connection is faulty. If the battery voltage drops lower than 11V, then the battery has been discharged.

### 7.4.6 Starter is turning motor, but fails to start

---

Cause	Solution
Fuel inlet solenoid valve not opening.	Check wire connections and circuitry to solenoid valve. (ref. DC wiring diagram: Relay K2, Fuse)
Fuel pump not working.	Check fuel-filter and pump: clean if necessary.

Cause	Solution
Lack of fuel.	Check fuel supply.
Glow-plugs not working correctly.	Check glow plugs and heating time.
Too much air in fuel lines.	Test fuel system for leakage. Bleed air from fuel system (refer to section „Bleeding Air from Fuel System“).
Fuel-filter blocked.	Replace fuel filter.

### 7.4.7 Motor does not achieve enough speed during starting process

Cause	Solution
Starter battery voltage insufficient.	Check battery.
Damaged bearing(s) piston (seized).	Repairs need to be carried out by Kubota-Service. (refer to Kubota motor-manual)
Cooling water in combustion chamber.	<ol style="list-style-type: none"> <li>1. Turn generator „OFF“ at control panel.</li> <li>2. Remove the glow plug (see Kubota-manual).</li> <li>3. Rotate the motor by hand carefully.</li> <li>4. Check if there is water in the oil and change both oil and filter if necessary.</li> <li>5. Determine cause for excess water in the combustion chamber. The excess water can be caused by a defective air vent in the cooling water system, which should be checked and cleaned, or replaced if faulty.</li> </ol>

### 7.4.8 Motor runs unsteady

Cause	Solution
Disruption in the area of the injection systems' automatic advance.	Repair / Check the automatic advance via the motor service.
Air in the fuel system.	Ventilate the fuel system.

### 7.4.9 Motor speed drops

Cause	Solution
Lack of fuel	Check fuel supply system: - fuel filter, renew if necessary - check fuel pump - check fuel lines (bleed if necessary)
Lack of intake air.	Check air intake paths. Check and clean air filter (and intake muffler if installed).
Generator overloaded by too many load.	Reduce the electrical load (switch off load).
Generator overloaded by over-energizing.	Check that the proper capacitor type is installed and that they are connected correctly.
Defective generator (windings, bearings, or other).	Generator must be sent to manufacturer for repair of damaged bearings or winding.
Damaged engine.	Repair of bearing damage, etc., by Kubota-Service.

### 7.4.10 Motor runs in off position

Cause	Solution
Fuel inlet solenoid valve or throttle shut solenoid is not switching off.	Check wire connections to solenoid. Check valve functions as in the „Fuel Solenoid Valve“ or in the throttle shut off solenoid sections. Replace if necessary.

### 7.4.11 Motor stops by itself

Cause	Solution
Lack of fuel.	Check fuel supply system.
Excess heat in cooling system (thermo switch tripped)-lack of cooling water. Is indicated on the remote control panel.	Check cooling water system flow: water pump, inlet water filter, extra heat exchanger coolant flow.



Cause	Solution
Lack of oil pressure sensor tripped). Is indicated on the remote control panel.	Check oil-level and if necessary top up. Check motor's oil-pressure and have repaired by Kubota-Service if necessary.

#### 7.4.12 Sooty, black exhaust

---

Cause	Solution
Generator is overloaded.	Check electrical load and switch off unnecessary load.
Insufficient intake air.	Check intake air filter; clean if necessary.
Fuel injector faulty.	Replace injector.
Valve clearance incorrect.	Readjust valve clearance to correct value (refer to Farymann-manual).
Poor fuel quality.	Use better quality diesel (recommended: 2-D Diesel).
Poor combustion.	Incorrect AFR (air/fuel ratio) due to motor timing adjustment. Have motor serviced by Kubota.

#### 7.4.13 Generator must be shut off immediately if:

---

Cause	Solution
<ul style="list-style-type: none"> <li>- motor rpm suddenly rises or drops</li> <li>- unusual noise comes from genset</li> <li>- exhaust colour suddenly becomes dark</li> <li>- leakage in the cooling water system.</li> </ul>	Refer to respective section of manual and if necessary, have repaired by Kubota-Service, or Panda representative.

### 7.4.14 Troubleshooting flowcharts

Fig. 7.4.14-1: Troubleshooting flowchart - Page 1


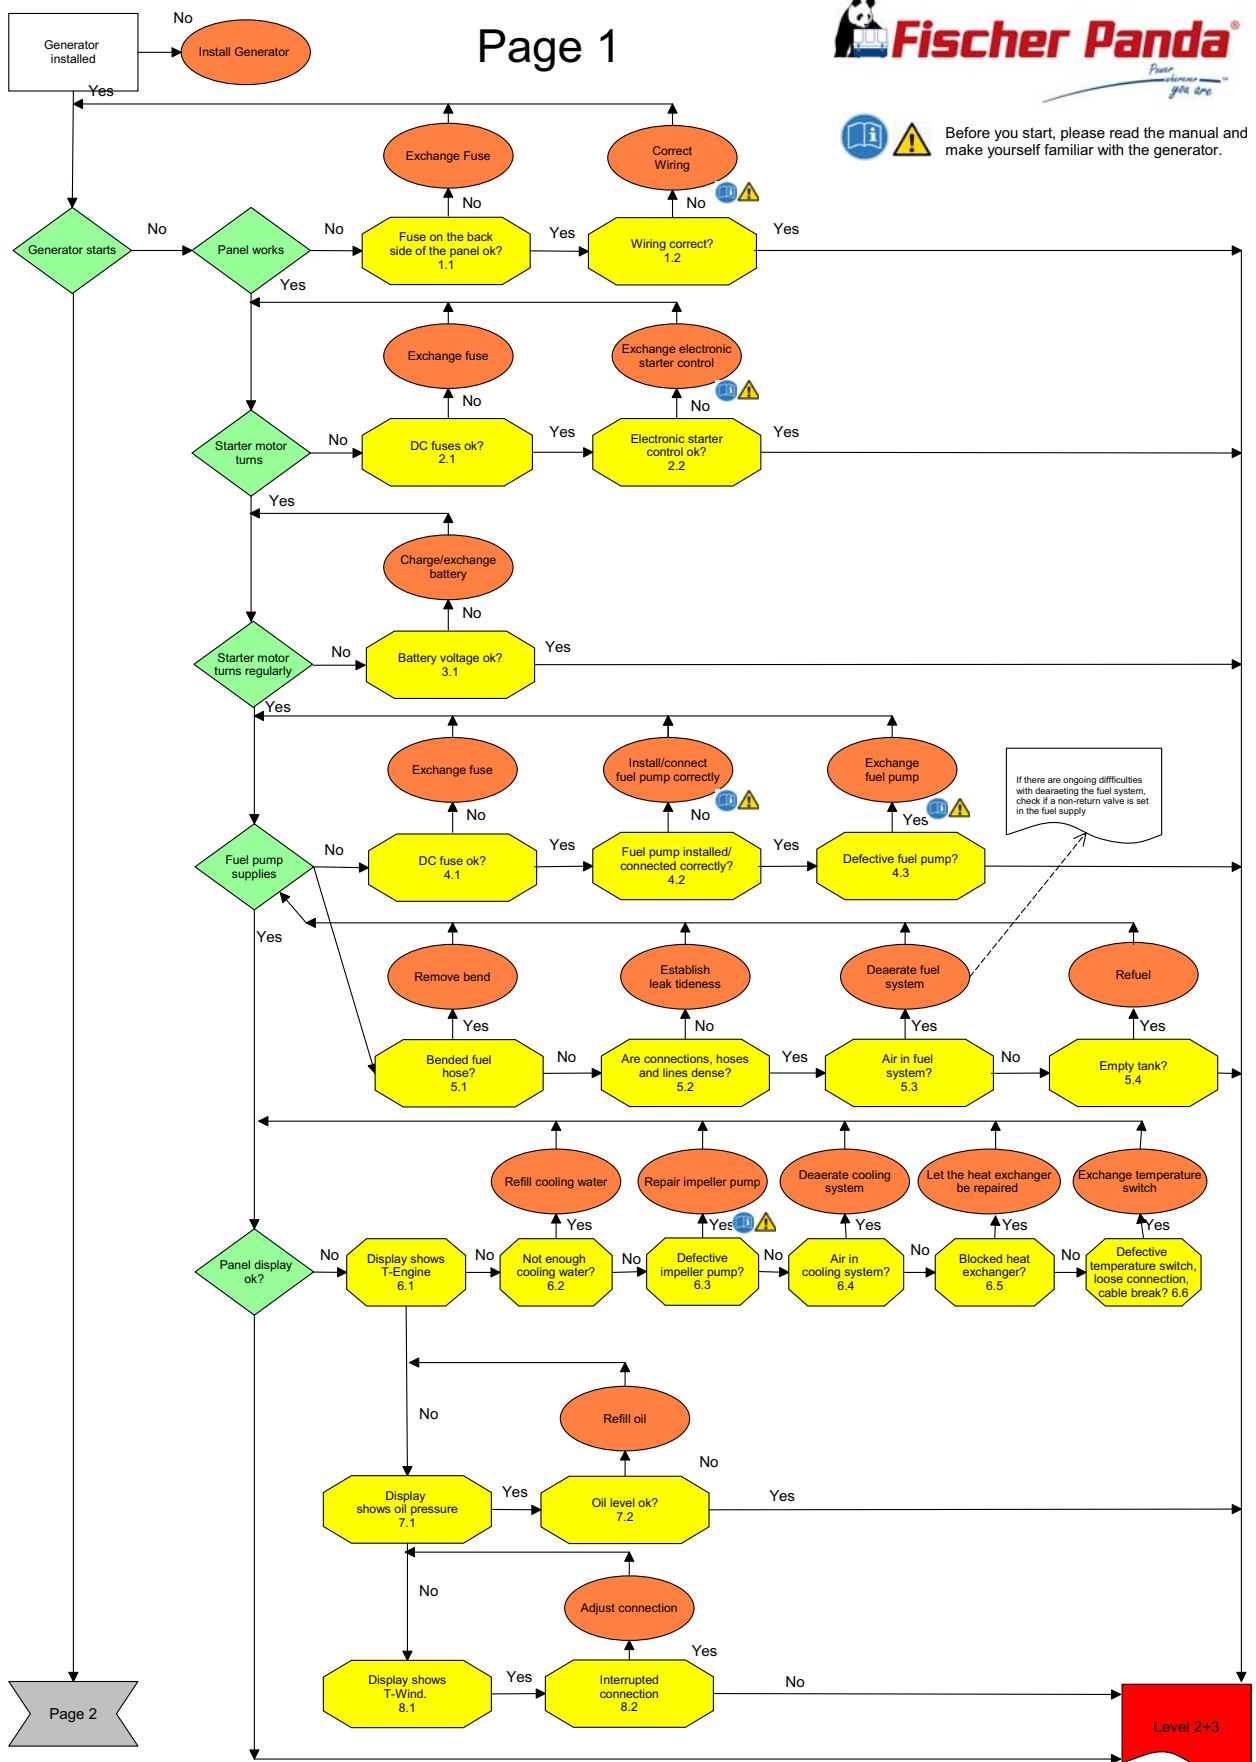


Fig. 7.4.14-2: Troubleshooting flowchart - Page 2

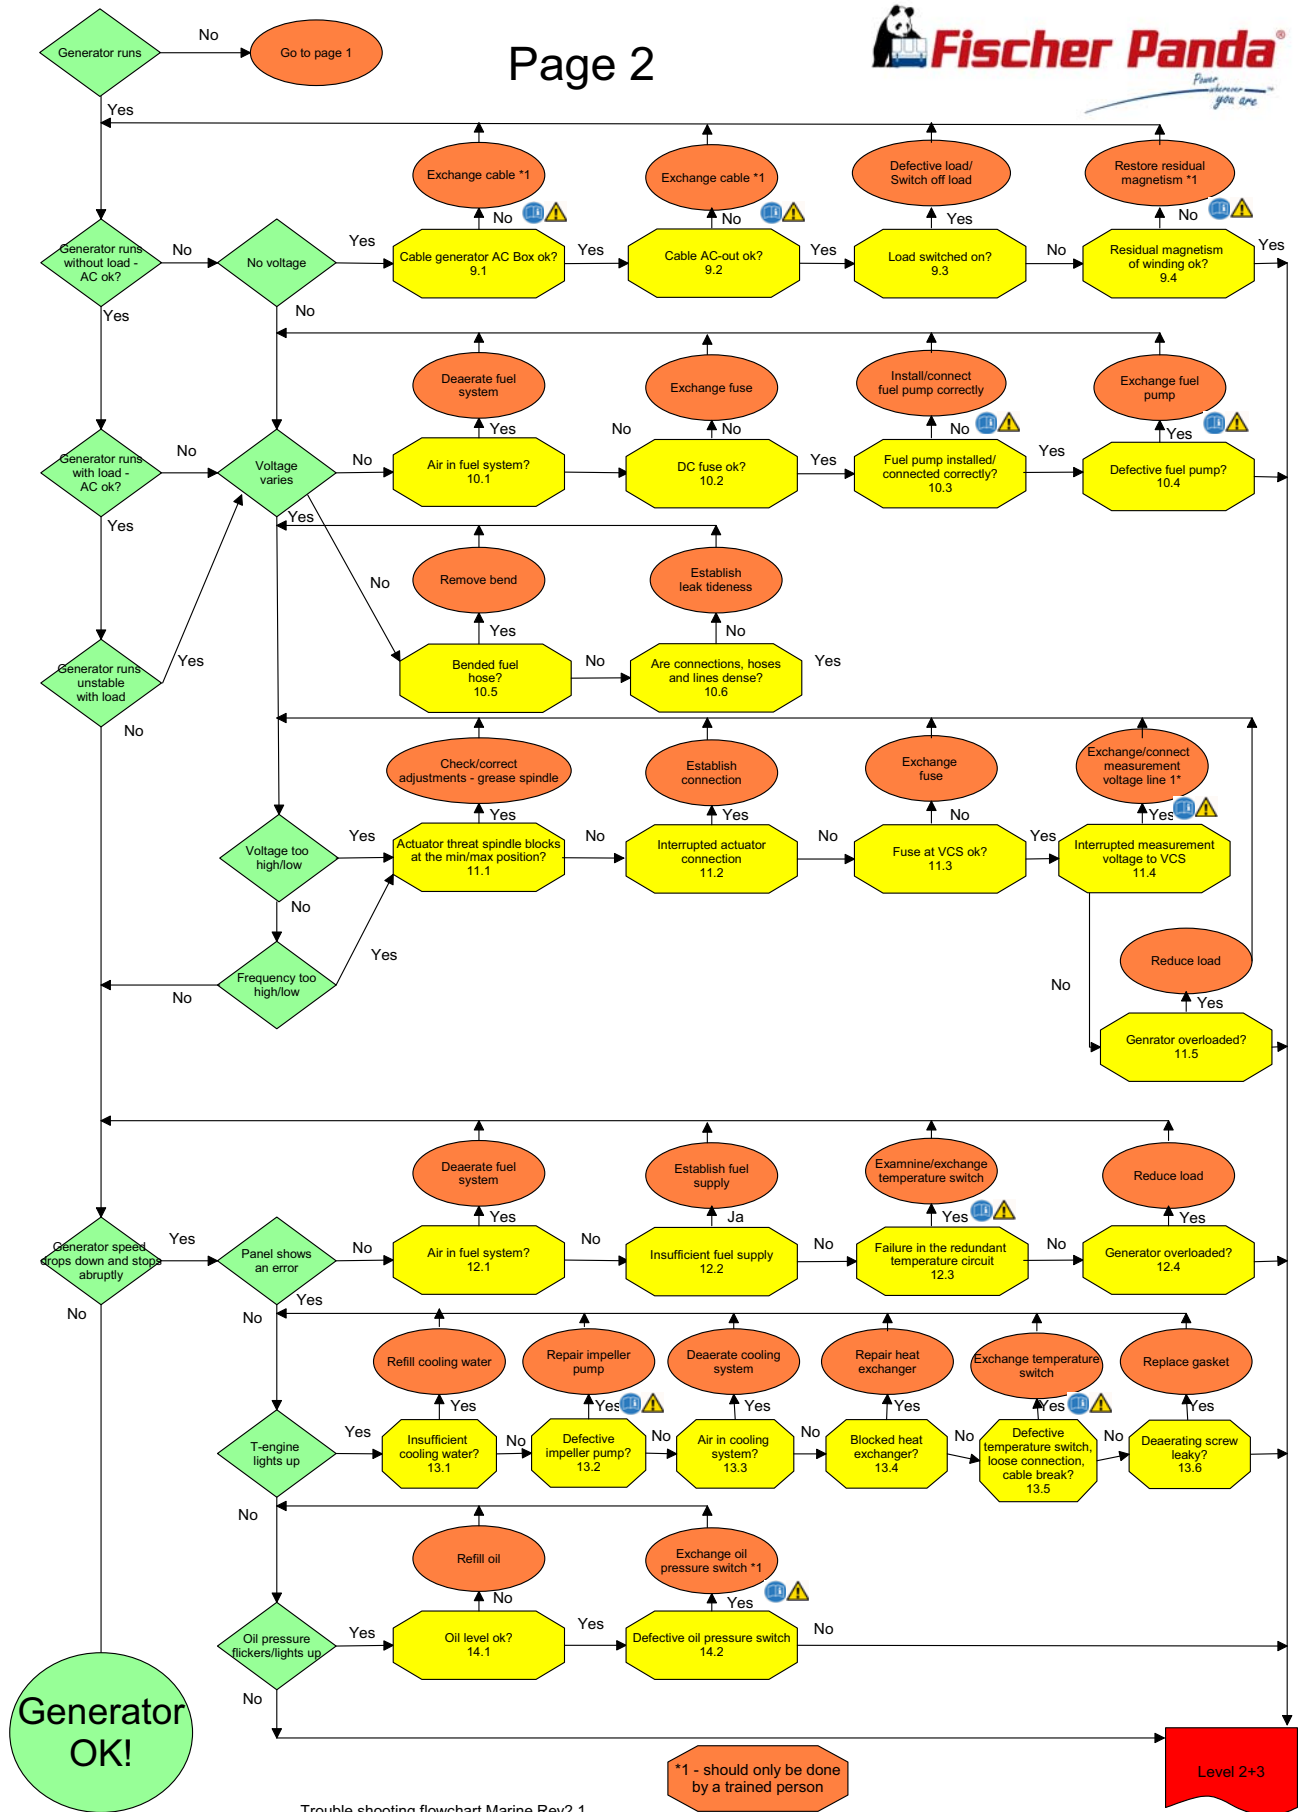

### 7.4.14.1 Details and explanations concerning the troubleshooting flowchart

Each failure position in the flowchart above contains a reference number.

With this reference number, the corresponding work steps can be taken from the list below.

#### 1.1 Fuse at the remote control panel.

Execute the fuse exchange as indicated in the data sheet of your remote control panel. Please note that not all remote control panels do have a corresponding fuse.

#### 1.2 Correct the wiring.

Get the wiring of the generator and the wiring of the external components checked according to the installation instructions in this manual and the data sheets, as well as descriptions of the external components and correct them if necessary.

**These operations are to be executed by a trained professional only!**

**Attention: Voltage up to 400 V - Danger to life!**



#### 2.1 Exchange DC fuse (Fuse for the starter circuit) - see wiring scheme

Exchange the relevant fuses at the generators' terminal block.

A defective fuse is not always visually detectable. Measure the fuse with a multimeter for connecting passage.

#### 2.2 Exchange anti-repeat starter device.

Loosen the connecting plug of the anti-repeat starter device.

Loosen the holding screws of the anti-repeat starter device.

Mount the new anti-repeat starter device in reversed order.

#### 3.1 Charge/exchange starter battery.

Proceed according to battery manufacturer instructions.

#### 4.1 Exchange DC fuse (Fuse for the fuel pump) - see wiring scheme

Exchange the relevant fuses at the generators' terminal block.

A defective fuse is not always visually detectable. Measure the fuse with a multimeter for connecting passage.

#### 4.2 Correct mounting/connection of the fuel pump.

Check the appropriate polarity at the connections and the tight fit of the connections at the fuel pump.

#### 4.3 Exchange fuel pump.

Loosen the electric connections of the fuel pump.

Loosen the holding screws of the fuel pump.

Mount the new fuel pump in reversed order.

#### 5.1 Remove buckling from the fuel hose.

Remove any buckling and improve the installation to avoid further disruptions.

#### 5.2 Sealing the connections.

Seal the system in an appropriate way. The system has to be checked for leakage at frequent intervals.

#### 5.3 Ventilating the fuel system.

Ventilate the fuel system as stated in the chapter 'Installation'. If air keeps entering into the fuel system, this might be an indication for a leaking connection or porous hoses. Then the fuel system should be inspected by a professional.

#### 5.4 Refuelling

Refuel your vehicle/the generator as described in the board manual.

**6.2 Refill cooling water.**

Refill the cooling water as described in the chapter Maintenance’.

**6.3 Defective impeller pump.**

Replace the defective impeller as described in the chapter Maintenance’.

**6.4 Air in the cooling system.**

Ventilate the cooling system as described in the chapter Maintenance’.

**6.5 Heat exchanger blocked.**

Get the heat exchanger repaired at a Fischer Panda Service point/Service Centre.

**6.6 Defective temperature switch, possibly loose contact/cable break.**

Get the temperature switch repaired at a Fischer Panda Service point/Service Centre.

**7.2 Oil level too low.**

Refill oil as described in the chapter Maintenance’.

**8.2 Connection assembly interrupted.**

Repair the connection assembly.

**9.1 Defective cable to the AC-Box.**

Get the cable to the AC-Box exchanged by a Fischer Panda Service point/Service Centre.

**The operations are to be executed by a trained professional only!**

**Attention: Voltage up to 400 V - Danger to life!**



**9.2 Defective cable AC out.**

Get the cable AC out exchanged by a Fischer Panda Service point/Service Centre.

The operations are to be executed by a trained professional only!

**Attention: Voltage up to 400 V - Danger to life!**



**9.3 Defective consumer load.**

Exchange consumer load/do not operate anymore.

**9.4 Missing residual magnetism.**

Let the residual magnetism be restored.

The operations are to be executed by a trained professional only!

**Attention: Voltage up to 400 V - Danger to life!**



**10.1 Air in the fuel system.**

Ventilate the fuel system as described in the chapter Installation’.

**10.2 Defective DC fuse fuel pump**

Exchange the relevant fuses at the generators’ terminal block.

A defective fuse is not always visually detectable. Measure the fuse with a multimeter for connecting passage.

**10.3 Incorrect attachment of the fuel pump.**

Get the installation corrected at a Fischer Panda Service point/Service Centre.

#### 10.4 Defective fuel pump.

Get the fuel pump exchanged at a Fischer Panda Service point/Service Centre.

#### 10.5 Buckled fuel hose.

Arrange the fuel hose in a way that no buckles can form.

#### 10.6 Leaky connections/pipes.

Seal the connections professionally - Exchange leaky pipes.

#### 11.1 Actuator arbor is jammed.

Check the Max/Min-adjustments and grease the actuator arbor, as described in the chapter Generator Faults'.

#### 11.2 Connection assembly actuator disrupted.

Rebuild connection assembly.

#### 11.3 Defective DC fuse on the VCS.

Get the relevant fuses exchanged at a Fischer Panda Service point/Service Centre.

The exchange is described in the chapter Generator Faults'.

A defective fuse is not always visually detectable. Measure the fuse with a multimeter for connecting passage.

**The operations are to be executed by a trained professional only!**

**Attention: Voltage up to 400 V - Danger to life!**



#### 11.4 Disrupted measuring voltage to VCS.

Get the measuring voltage cable connected/exchanged by a Fischer Panda Service point/Service Centre.

**The operations are to be executed by a trained professional only!**

**Attention: Voltage up to 400 V - Danger to life!**



#### 11.5 Generator is overloaded.

Reduce the load. Ensure that the generator does not get overloaded.

#### 12.1 Air in the fuel system.

See 10.1

#### 12.2 Lack of fuel

Re-assemble the fuel supply.

#### 12.3 Faults in the redundant temperature circuit.

Get the temperature switch as well as the connection assemble and electric cables checked and repaired by a Fischer Panda Service point/Service Centre

#### 12.4 Generator is overloaded.

See 11.5

#### 13.1 Lack of cooling water.

Refill the cooling water as described in the chapter Maintenance'.

#### 13.2 Defective impeller pump.

Replace the defective impeller as described in the chapter Maintenance'.

#### 13.3 Air in the cooling system.

Ventilate the cooling system as described in the chapter Maintenance'.



**13.4 Heat exchanger blocked.**

Get the heat exchanger checked and repaired by a Fischer Panda Service point/Service Centre.

**13.5 Defective temperature switch, possibly loose contact/cable break.**

Get the temperature switch checked and repaired by a Fischer Panda Service point/Service Centre.

**13.6 Leaky ventilation screw.**

Renew the ventilation screw sealing.

**14.1 Oil level too low.**

Refill oil as described in the chapter Maintenance'.

**14.2 Defective oil pressure switch.**

Get the oil pressure switch exchanged by a Fischer Panda Service point/Service Centre.

## **7.5 Overloading the generator**

---

Please ensure that the generator is not overloaded. This must be considered, especially with regards to multi power generators. In this case the extra load including the electrical performance can be considerably greater than the drive performance of the motor, which can eventually lead to a damaged motor.

The full nominal performance of the generator is fore-mostly for short term use. It is, however, required to start electric motors with high starting current or achieve special starting procedures at peak loads. 70% nominal load is ideal for a long motor life. (Continual use means uninterrupted use of the generator for many hours). This should be taken into consideration when connecting devices. This ensures extended motor life.

It is no problem for the motor to be run occasionally for 2 - 3 hours at full load. The complete conception of Panda Generator ensures that even during extreme conditions, an overheating of the motor will not occur. Accumulation of soot will occur if run for long periods at full load.

**Effects of Short Circulating and Overloading on the Generator**

The generator cannot be damaged by short-circuit or overloading. Short-circuit and overloading suppress the magnetic excitation of the generator, thus, no current is generated and the voltage will collapse. This condition is immediately offset, once the short circuit has been eliminated and/or the electrical overload removed.

**Overloading the Generator with Electric Motors**

With the operation of electric motors it must be considered that these take up a multiple of their rated output as starting current (six to tenfold).

If the power of the generator for the engine is not sufficient, the voltage in the generator breaks down after switching on the engine. For special approach problems the manufacturer can give recommendations regarding the accomplishment of the situation (e.g. amplified condensers, gradual start switch or extra developed starting unit for electric motors).

The system efficiency can be improved up to 50% and the starting current can be improved up to 100% by a professional adjustment of the engines. If the inductive load (electrical motors etc.) lies over 20% of the generator rated output compensation is appropriate (see in addition also the writing: „Operation Instructions for Generators with Inductive Loads“).

### 7.5.1 Monitoring the generator voltage

---

see "Safety first!" on Page 10.

**ATTENTION!**



The voltage range of the power stations normally lies between 200 and 240 V (100 - 130 V in the 60 Hz version). In some countries even substantially larger tension deviations are being called „normally“. The Fischer Panda generators are aligned that they keep these default values during normal load.

With high load or overload it can occur that the voltage drops on 190 V (95 V in the 60 Hz version) and partly still more deeply. That can become critical for certain devices (e.g. for electric motors, cooling compressors and possibly for electronic devices). It must be paid attention that the voltage for such consumers are sufficient. This can be supervised by a voltmeter.

The voltmeter should be always installed behind the change over switch generator/land power, so that each voltage source is shown. No further voltmeter is provided for the generator itself.

If additional consumers are switched on, the voltage must be controlled in each case at the voltmeter. Sensitive devices must be switched off so long, until the voltage exceed the critical parameter.

Under certain circumstances the generator provides over voltage. This arises if the number of revolutions of the generator is increased. Changing the number of revolutions may be made only with a tachometer and/or a voltmeter.

If sensitive and/or valuable devices are used, which are to be protected against this risk, an automatic over voltage protection must be mounted (voltage control with disconnection).

### 7.5.2 Automatic voltage monitoring and auto-shut down

---

If air conditioning units (compressors) or other such valuable equipment is installed on-board, it is recommend that an automatic voltage monitoring unit be installed to protect this equipment from possible sharp voltage drops. The voltage monitoring system shuts down the entire system (and therefore all users) by means of a circuit breaker relay as soon as the voltage falls below a set value (the monitor will also shut down the on-board grid automatically when the generator is stopped). Such a relay with contactor can be obtained from the installation or as a complete unit from your Fischer Panda dealer.

## 7.6 Generator output voltage is too low

If the AC generated is too low, then the consumers should be disconnected, one after the other, in order to reduce the load on the generator. Generally the problem is then solved. The frequency should be checked, if the output voltage is correct after the consumers have been disconnected. Should this be above the prescribed generator idling speed, it can be assumed that one or several condensers are defective.

### 7.6.1 Discharging the capacitors

**Never work on the control box, if the generator is running! Do not touch the capacitors contacts, see "Safety first!" on Page 10.**

**ATTENTION!**

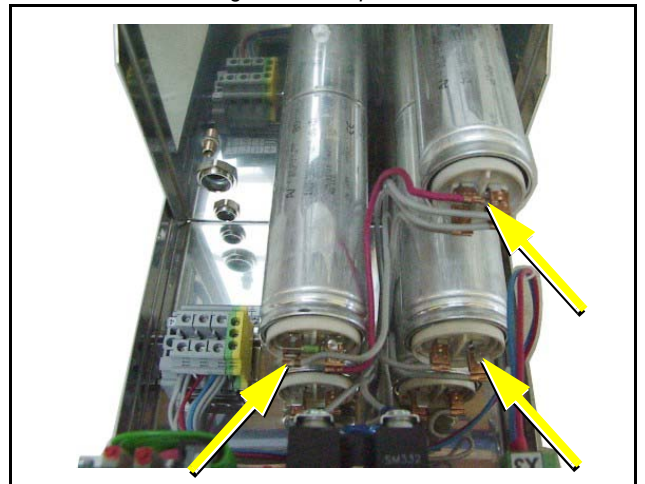


Fig. 7.6.1-1: Capacitors

#### Capacitors

1. Switch off the generator.
2. Remove the starter battery.
3. Open the AC-Control Box.

**The capacitors are discharged by short fusing both contacts. The contacts (Flat plug) can be bridged by means of a screwdriver with an insulated handle (short-circuit).**



## 7.6.2 Checking the capacitors

If the capacitors are to be checked, make sure that the capacitors has been discharged.

**ATTENTION!**



A visual check can give information on whether the capacitors are defective:

- Dielectric leak?
- Did the capacitor become longer?

### Multimeter

The capacitors can be tested by means of a multi-meter, which is fitted with a buzzer. The multi-meter should be switched to open and both capacitor connections connected to the multi-meter.

The capacitors can be tested with a multi-meter. Switch the measuring instrument to „pass“ and connect both connections of the capacitors to the connections at the measuring instrument.

Touch the two contacts of the capacitors by means of the test prods. A charge should be fed to the capacitor by the internal battery.

Fig. 7.6.2-1: Multimeter



Should a steady sound or no sound be heard, the capacitors are defective and must be replaced.

A capacity measuring instrument must be used in order to check whether the capacitors have full capacity.

The capacitors, which do meet the prescribed capacity value at this measurement, should be exchanged as fast as possible. If all capacitors prove to be still functional, then a check must be made, as to whether the connections to the strip are correct.

### 7.6.2.1 Checking the electrical connections to the capacitors

It must be ensured that the electrical connections to the capacitors are always tight fitting. Loose connections with transitional resistance can mean that the contact surfaces will become heated externally. This can lead to an increased deterioration of the capacitors.

## 7.6.3 Check the generator voltage

**The following steps must be taken, in order to test whether the stator winding generates sufficient voltage:**

1. Ensure that the connection to the shipboard circuit is interrupted.
2. Remove all electrical wires in the generator junction box.
3. Starter battery must be connected to the generator.
4. Start generator.
5. Measure the voltage between the phases and neutral.

Both partial windings must be connected for the 60 Hz Version, i.e. there must be a connection made between wire 1 and 3 (see circuit plan).

*(Note: The current arises from the rest magnetism of the rotor, which induces a voltage in the winding).*

### 7.6.4 Measuring the ohm resistance of the generator windings

If a short circuit could not be found by using a multi-meter, then the windings parts of the generator must be checked by means of an Ohmmeter that is suitable for low resistance values.

- Set the measuring device to measure resistance. If you hold the poles of the measuring device against each other, then 0.00 Ohms should be shown. If the pole has been isolated then the display should show an overflow. Please carry out this test to check the device.
- Measure the resistance within the individual windings.

If there are large deviations, it must be assumed that there is a windings short circuit. This also leads to non-excitation of the generator.

The actual values between the windings parts and the earth cannot, however, be exactly determined. Fore-mostly, the values of all three measurements must be the same, if possible. Deviations from each other show there is windings short-circuit. In this case, the generator windings must be renewed by an electrician.

### 7.6.5 Check the windings for short circuit

Ensure that the generator has been switched off and cannot be inadvertently switched on. Disconnect the wires to the battery for this.

1. All wires in the junction box or - if necessary - in the circuit distribution box must be disconnected. Ensure that the wires are no longer carrying an electrical current, before being disconnected (see "Discharging the capacitors" on Page 145.)
2. Remove the Bridges between „N“ and „PE“, so that the windings and casing do not come into electrical contact.
3. Make a check, by means of a Multimeter, as to whether there is a current between the individual winding terminals and the casing (PE).

The contacts to measured are not relevant to the type of generator (see type plate):

HP1 - 50 Hz: L, Z

HP1 - 60 Hz: L, Z


HP3 - 50 Hz: L1, L2, L3

HP3 - 60 Hz: L1, L2, L3, 1, 2, 3, 4

DVS - 50 Hz: L1, L2, L3, L1'

DVS - 60 Hz: L1, L2, L3, L1', 1, 2, 3, 4

Fig. 7.6.5-1: Generator type plate

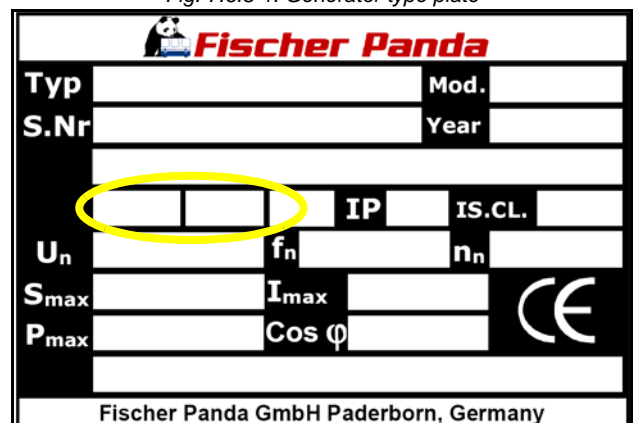

The generator must be sent for a check to the factory or be re-winded locally, when a pass (beep) should be determined. Windings data can be requested for this, if it is necessary.

## 7.6.6 Measuring the inductive resistance

---

An Ohm measurement of a winding does not always give reliable information concerning the state of the winding. If there are resistance irregularities between the windings parts, this is a sure sign that the winding is defective. This means the opposite cannot be concluded. This means a winding can also be defective, if the resistance values between the windings parts do not show great deviation.

Measurement of the inductive resistance gives a better reading. A Special measuring device is necessary for this.

The inductively is measured in the same manner as the resistance, i.e. the windings parts are compared. The value of the inductive resistance is given in mH (milli Henry).

*Note: The values are greatly dependent upon the measuring method (type of ohmmeter).*

## 7.7 Generator provides no voltage

---

---

### 7.7.1 Rotor magnetism loss and „re-magnetising“


---

See “Safety Instructions - Safety First!” on Page 15.

**ATTENTION!**



In the case of asynchronous generators, the generator cannot independently increase voltage after standing still, or, if it is switched off under full load. This is because the rotor has lost its remaining magnetism.

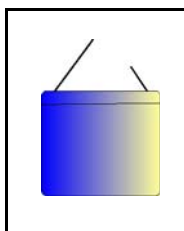

This remaining magnetism can be restored simply by use of a DC battery. In addition the „shore power“ must be switched off and any connection to an AC-source must be interrupted.

Likewise the generator must be switched off, i.e. also the starter may not be operated. The power source selector is switched to „generator“. Only the plug socket must be connected with the generator.

Now the two poles of a 9 Volt battery are connected to the plug socket or held against the appropriate contacts of the on-board current distributor. Do not use a battery bank or the generator starter battery, this could damage the winding. The DC voltage only may be applied for a short time (1-2 seconds). In the winding the remaining magnetism is restored by a short current pulse, and the generator can normally be started.



## 7.8 Engine starting problems

### 7.8.1 Electric fuel solenoid valve

The fuel solenoid valve is located in front of the injection pump. It opens automatically, if the „START“-button is pressed on remote control panel. If the generator is switched to „OFF“, the solenoid valve closes. It takes some seconds, before the generator stops.


If the generator fails to start, runs rough, does not reach the proper RPM, or does not stop properly, the first item to suspect in most cases it is the fuel solenoid valve and should be inspected first.

A check of the fuel solenoid valve by removing the plug from the fuel solenoid valve for a short period whilst in operation (first remove the small retention screw) and replace it immediately. The motor should „react immediately“ by revving high. If the motor does not react sharply to the re-connection of the solenoid wire, it is a sign that the solenoid valve could be faulty.

1. Fuel solenoid valve
2. Fuel injector
3. Ventilation screw

Sample Picture

Fig. 7.8.1-1: Fuel solenoid valve

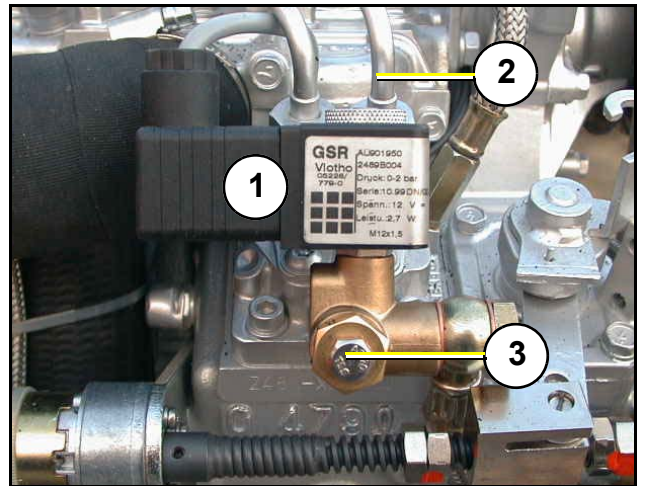


### 7.8.2 Re-start with failure bypass switch

The start-failure bypass switch enables an immediate restart facility of the generator, should it cut out, even if this was caused by over-heating. There is normally a requirement to wait until the motor has cooled down to the correct temperature. This can last for several hours in certain circumstances, since the generator is enclosed in a sound-insulated casing, which prevents heat loss.

#### Failure Bypass Switch

Sample Picture

Fig. 7.8.2-1: Failure bypass switch

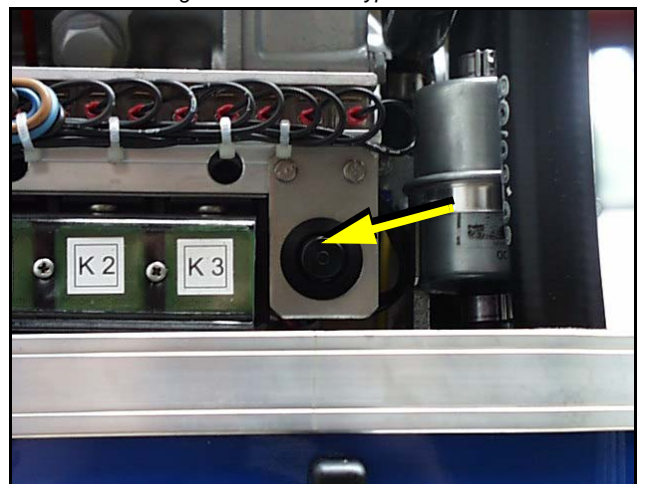

This period can be reduced by pushing the button on the front of the generator. The generator can be started by means of the remote control as long as the button is depressed. The switch/ button bypasses any faults allowing the generator to run.

Before depressing the button, check the oil level with the dip stick to determine whether the generator has sufficient oil, as it is possible that the oil pressure switch causes the generator to cut out. If it has been ascertained that the reason for the motor cutting out is overheating and not lack of oil, the generator can be run for several minutes without load, so that the motor is cooled by the circulating coolant.

**BEWARE:**

**If the temperature is the reason for the generator cutting out when it is running under load, then an immediate check must be made to determine the cause. It could be a fault with the cooling system, one of the fans, the air-intake or a fault with the external cooling system.**

Continual use of the starter-failure bypass switch should be avoided, while the generator cuts out during operation.

The generator must always run without load for several minutes before being switched off, so that temperature compensation occurs. Heat accumulation can cause the generator to overheat, even after it has been switched off.

Should the overheating alarm be set off, caused by heat accumulation, after the generator has been switched off, then this can also be bypassed using the switch.

### 7.8.3 Lifting solenoid for motor stop - optional

There are two different versions of lifting solenoids:

**A. Energized to stop**

The lifting solenoid is furnished with voltage and pulled by pushing the „OFF“-button on the remote control panel. By doing that, the injection pump is set on zero lift and the generator stops.

**B. Energized to run**

This version is equipped with two solenoids, an operation- and a holding solenoid. After applying voltage, the operation solenoid pulls the adjusting lever of the injection pump, which gives way to the fuel. After reaching its end position, the operation magnet is switched off and the holding solenoid keeps that position as long as the generator is operating.

**The „START“-button should not be pressed any longer than 5 sec. during the starting process, or the lifting solenoid draws too much current over the starter motor. Otherwise the lifting solenoid needs to be disconnected.**


**ATTENTION!**



**Lifting solenoid for motor stop**

*Sample Picture*

Fig. 7.8.3-1: Lifting solenoid for motor stop

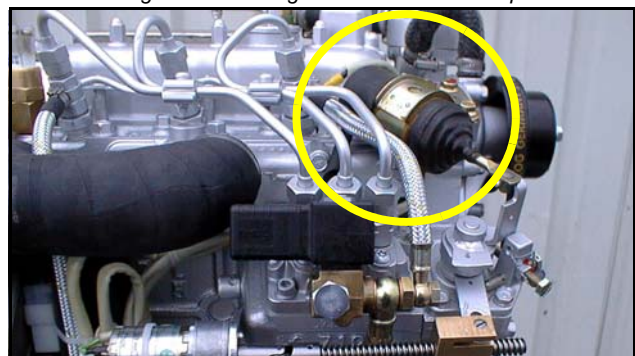

**Damage to starter motor**

The starter is fitted with a free wheel or axial rotating spring cog, which prevents the starter being driven externally by means of the motor. The free wheel will be heavily worn, if the starter still operates, thereby causing damage to the springs, roller bearings or cog teeth. This could lead to complete destruction of the starter.

**It is important that every person who operates the generator is informed of this situation. This is practically**

the only handling error that can be made on board that can lead to fatal consequences for both generator and operator.

### 7.8.4 Troubleshooting table

---

For Troubleshooting see “Troubleshooting table and flowchart” on Page 134.



## 8. Tables

### 8.1 Technical data

---

---

For the technical data of the engine, see engine manufacturer manual.

### 8.2 Fuel

---

---

Use a clean Diesel fuel oil according to DIN590:1999 or better. For Generators with common rail or particle filter use DIN590:2009 or better.

Do not use alternative fuel, because its quality is unknown or it may be inferior in quality. Kerosene, which is very low in cetane rating, adversely affects the engine.

### 8.3 Engine oil

---

---

#### 8.3.1 Engine oil classification

---

##### 8.3.1.1 Operating range:

The operating range of an engine oil is determined by SAE class. „SAE“ is for the union of American auto engineers (Society of Automotives Engineers).

The SAE class of an engine oil only informs over the viscosity of the oil (larger number = more viscous, smaller number = more highly liquidly) e.g. to 0W, 10W, 15W, 20, 30, 40. The first number shows the liquid of the oil with cold weather, the second number refers to the fluidity with heat. Complete yearly oils have usually SAE classes of SAE 10W-40, SAE 15W-40 etc.

##### 8.3.1.2 Quality of oil:

The quality of an engine oil is specified by the API standard („American Petroleum Institutes“).

The API designation is to be found on each engine oil bundle. The first letter is always a C.

##### **API C for diesel engines**

The second letter is for the quality of the oil. The more highly the letter in the alphabet, the better the quality.

API C for diesel engine

Examples for diesel engine oil:

API CC Engine oil for small demands

API CD Engine oil for suction- and turbo diesel engine

API CF Replace the specification API CD since 1994

API CG Engine oil for highest demands, turbo-tested

**See technical data for the specified engine oil**


**Notice!:**



Fig. 8.3.1.2-1: Engine oil type.

Engine oil type	
over 25 °C	SAE30 or SAE10W-30; SAE10W-40
0 °C to 25 °C	SAE20 or SAE10W-30; SAE10W-40
below 0 °C	SAE10W or SAE10W-30; SAE10W-40

Fig. 8.3.1-2: Temp. range of the SAE classes

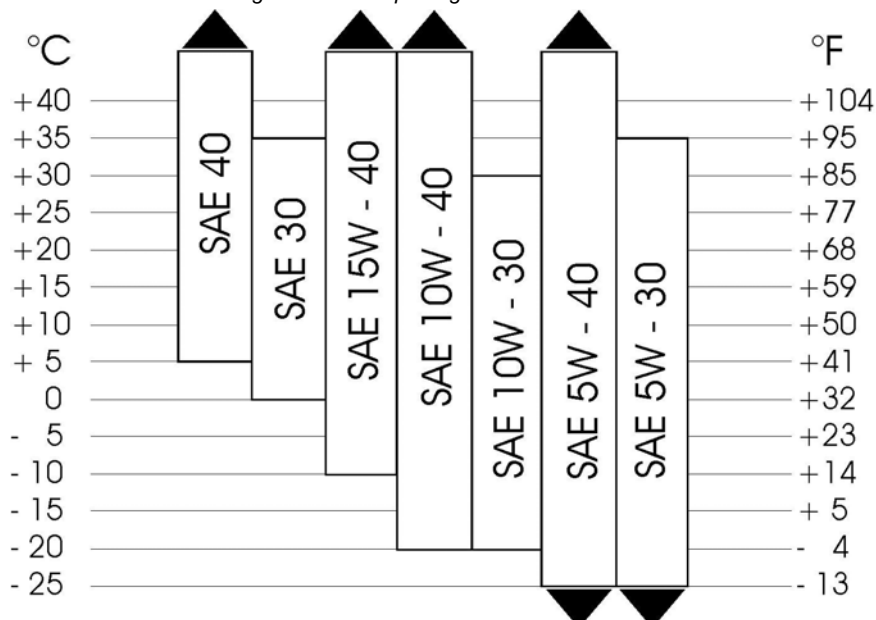

## 8.4 Coolant specifications

Use a mixture of water and antifreeze. The antifreeze needs to be suitable for aluminium. The antifreeze concentration must be regularly checked in the interests of safety.

Fischer Panda recommend to use the product: GLYSANTIN PROTECT PLUS/G 48

Engine coolant automotive industry Product description		
Product name	GLYSANTIN ® PROTECT PLUS / G48	
Chemical nature	Monoethylenglycol with inhibitors	
Physical form	Liquid	
Chemical and physical properties		
Reserve alkalinity of 10ml	ASTM D 1121	13 – 15 ml HCl 01 mol/l
Density, 20 °C	DIN 51 757 procedure 4	1,121 – 1,123 g/cm <sup>3</sup>
Water content	DIN 51 777 part 1	max. 3,5 %
pH-value undiluted		7,1 – 7,3



### 8.4.1 Coolant mixture ratio

Water/antifreeze	Temperature
70:30	-20 °C
65:35	-25 °C
60:40	-30 °C
55:45	-35 °C
50:50	-40 °C

### 8.5 Diameter of conduits

Fig. 8.5-1: Diameter of conduits

Generator type	Ø Cooling water conduit		Ø Exhaust conduit [mm]	Ø Fuel conduit	
	Freshwater [mm]	Seawater [mm]		Supply [mm]	Return [mm]
Panda PMS 3,8 ND	12	12	30	8	8
Panda PMS 4,5 ND	12	12	30	8	8
Panda PMS 4500 SCB	12	12	30	8	8
Panda PMS 5000 SCE	12	12	30	8	8
Panda PMS 4500 FCB	12	12	30	8	8
Panda PMS 5000 LPE	16	16	30	8	8
Panda PMS 6000 ND	20	20	40	8	8
Panda PMS 8000 NE (8 mini Digital)	20	20	40	8	8
Panda PMS 9000 ND	20	20	40	8	8
Panda PMS 12000 NE (12 mini Digital)	20	20	40	8	8
15 mini Digital	20	20	40	8	8
Panda PMS 14000 NE	20	20	40	8	8
Panda PMS 18 NE (16 Digital)	25	20	50	8	8
Panda PMS 24 NE (22/25 Digital)	25	20	50	8	8
Panda PMS 30 NE	25	20	50	8	8
Panda PMS 33 KU	30	25	50	8	8
Panda PMS 42 KU	30	30	50	8	8
Panda PMS 32 YA	30	30	50	8	8
Panda PMS 50 YA	30	30	60	8	8
Panda PMS 60 YA	-	-	60	8	8
Panda PMS 50 MB	40	30	60	8	8
Panda PMS 60 MB	40	40	60	8	8
Panda PMS 60 Hatz		30	76	13	13
Panda PMS 75 MB	40	30	60	8	8
Panda PMS-HD 7,5-4 KU	25	20	40	8	8
Panda PMS-HD 09-4 KU	25	20	50	8	8
Panda PMS-HD 12-4 KU	25	20	50	8	8
Panda PMS-HD 17-4 KU	25	25	60	8	8
Panda PMS-HD 22-4 KU	30	30	60	8	8
Panda PMS-HD 30-4 KU	30	30	60	8	8
Panda PMS-HD 40-4 KU	30	30	60	8	8
Panda PMS-HD 60-4 DZ	-	-	-	-	-

Generator type	Ø Cooling water conduit		Ø Exhaust conduit [mm]	Ø Fuel conduit	
	Freshwater [mm]	Seawater [mm]		Supply [mm]	Return [mm]
Panda PMS-HD 70-4 DZ	-	-	-	-	-
Panda PMS-HD 85-4 DZ	-	-	-	-	-
Panda PMS-HD 110-4 DZ	-	-	-	-	-
Panda PMS-HD 130-4 DZ	-	-	-	-	-

## 8.6

---

## 9. Remote Control Panel P4 Control



 <b>Fischer Panda</b>	Art Nr.	0000522
 <b>Fischer Panda</b>	Bez.	Remote Control Panel P4 Control

Tabelle 1:

	Dokument	Hardware	Software
Aktuell:	R03	V1.00	-----
Ersetzt:	R02.1	V1.00	-----

### 9.1 Remote control panel

#### Remote control panel P4 Control

The remote control panel is necessary to control the generator and to evaluate the motor/generator properties. The generators will automatically cutout, if it does not run as required. The generator may not be run without the remote control panel.

Fig. 9.1-1: Remote control panel



## 9.1.1 Cleaning and Replacing parts at the generator

---

### Disconnect the battery when working on the generator

The battery must always be disconnected (first negative then positive pole), when work on the generator or the electrical system of the generator are made, so that the generator can not be started accidentally.

This is especially true for systems with an automatic start function. The automatic start function is to be deactivated before the work.

*Sea valve must be closed. (only PMS version)*


**Note also the safety of the other components of your system.**

**Generator, oil and antifreeze can be hot during/after operation.  
Risk of severe burns.**

### Attention!:



### Note!:

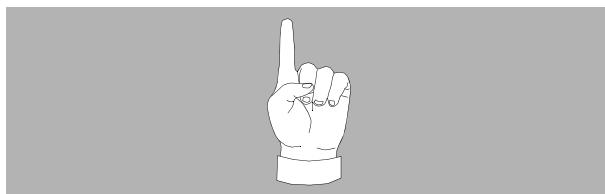


### Warning!: Hot surface/material



## 9.2 Front side


Fig. 9.2-1: Remote Control Panel - Front Side

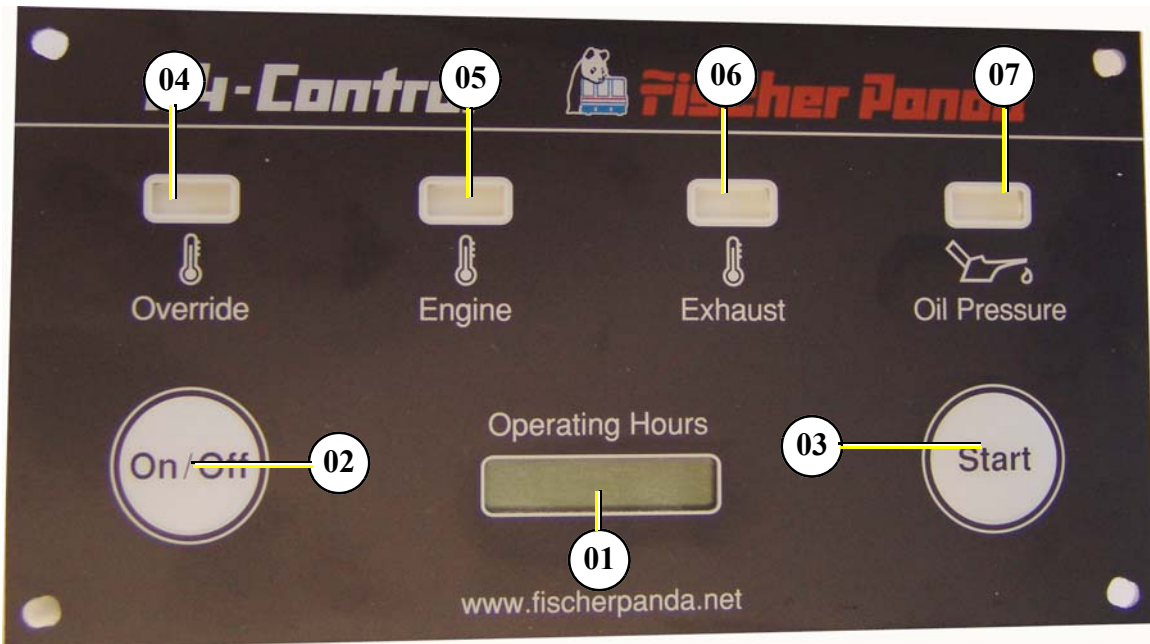

- |                              |   |
|------------------------------|---|
| 01) Display operating hours  | 05) Warning light for engine temperature  |
| 02) Power „ON/OFF“-button    | 06) Warning light for exhaust temperature |
| 03) Generator „Start“-button | 07) Warning light for oil pressure        |
| 04) Control light „Override“ |   |

### 9.2.1 Back side

Fig. 9.2.1-1: Remote control panel - back side

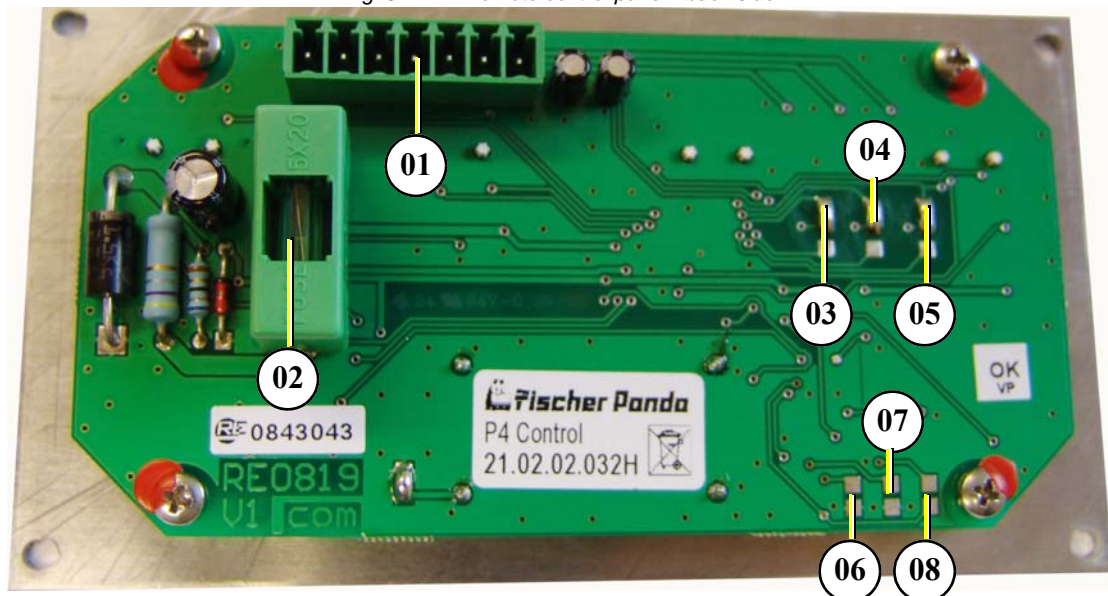

- |                                   |                 |
|-----------------------------------|-----------------|
| 01) Connector for generator cable | 05) Jumper J101 |
| 02) Fuse 0,5A                     | 06) Jumper J104 |
| 03) Jumper J103                   | 07) Jumper J105 |
| 04) Jumper J102                   | 08) Jumper J106 |

## 9.3 Operation manual

---

### 9.3.1 Preliminary remarks

---

#### Advices concerning the starter battery

Fischer Panda recommends normal starter battery use. If a genset is required for extreme winter conditions, then the starter battery capacity should be doubled. It is recommended that the starter battery be regularly charged by a suitable battery-charging device (i.e., at least every 2 months). A correctly charged starter battery is necessary for low temperatures.

### 9.3.2 Override function

---

Depending on the installation situation, a heat accumulation inside the generator sound insulated capsule may occur (especially after longer run time with high load). According to this situation the engine overheat switch release after the generator has already stopped. The generator can not be started until the engine has cooled down.

To prevent this, the P4 Control panel has an override mode. While the start button is pressed and several seconds after it (can be modified with jumpers on the panel back side), the temperature error is ignored. The circulation of the cooling water cool down the engine and the generator can be started normal.

The control light „Override“ is turned on:

- if the panel is on and the generator is stopped (function control)
- during the „Start“ button is pressed (Override active)
- during the set time after the „Start button is released“ (Override active)

**Not in use at the Panda 4000s series.**


### 9.3.3 Daily routine checks before starting

---

1. Oil Level Control (ideal level: 2/3).

**True, the diesel motor automatically switches off when there is a lack of oil, but it is very damaging for the motor, if the oil level drops to the lowest limit. Air can be sucked in suddenly when the boat rocks in heavy seas, if the oil level is at a minimum. This affects the grease in the bearings. It is therefore necessary to check the oil level daily before initially running the generator. The oil level must be topped up to the 2/3 level, if the level drops below the min. mark**

**Notice!: OIL PRESSURE CONTROL!**

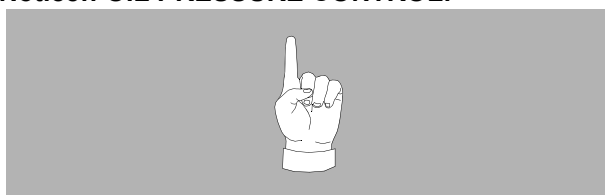

2. State of cooling water.

The external compensation tank should be filled up to a maximum of in a cold state. It is very important that large expansion area remains above the cooling water level.

3. Open sea cock for cooling water intake. (only Marine)

For safety reasons, the sea cock must be closed after the generator has been switched off. It should be re-opened before starting the generator.

4. Check raw water filter. (only Marine)

The raw water filter must be regularly checked and cleaned. The impeller fatigue increases, if residual affects the raw water intake.

5. Check all hose connections and hose clamps are leakage.



Leaks at hose connections must be immediately repaired, especially the raw water impeller pump. It is certainly possible that the raw water impeller pump will produce leaks, depending upon the situation. (This can be caused by sand particles in the raw water etc.) In this case, immediately exchange the pump, because the dripping water will

be sprayed by the belt pulley into the sound insulated casing and can quickly cause corrosion.

6. Check all electrical lead terminal contacts are firm.

This is especially the case with the temperature switch contacts, which automatically switch off the generator in case of faults. There is only safety if these systems are regularly checked, and these systems will protect the generator, when there is a fault.

7. Check the motor and generator mounting screws are tight.

The mounting screws must be checked regularly to ensure the generator is safe. A visual check of these screws must be made, when the oil level is checked.

8. Switch the land electricity/generator switch to zero before starting or switch off all the load. (only Marine)

The generator should only be started when all the load have been switched off. The excitation of the generator will be suppressed, if the generator is switched off with load connected, left for a while, or switched on with extra load, thus reducing the residual magnetism necessary for excitation of the generator to a minimum. In certain circumstances, this can lead to the generator being re-excited by means of a DC source. If the generator does not excitate itself when starting, then excitation by means of DC must be carried out again.

9. Check the automatic controls functions and oil pressure.

Removing a cable end from the monitoring switch carries out this control test. The generator should then automatically switch off. Please adhere to the inspection timetable (see Checklist in the appendix).

### 9.3.4 Starting the generator

---

1. Open sea lock and close battery switch if necessary.
2. Push „ON/OFF“ button to switch panel on.
3. Push „Start/Stop“ button to start the generator.
4. Switch on load.

**In the event of starting problems, close the sea water inlet cock. Panda marine generators only.**

Should there be any reason to turn the engine (over) or start the engine i.e. to bleed the fuel system, the sea water inlet cock must be closed! During the starting process, the cooling water pump is driven with the motor. The cooling water is discharged to the exhaust outlet and, since the motor has not run, the exhaust pressure is not high enough to expel the sea water which has been brought to the exhaust outlet. To avoid filling the exhaust outlet with water and causing further problems, close the inlet sea water valve.

*Once the engine is running, be sure to open the inlet valve!*

**Attention!:**



### 9.3.5 Stopping the generator

---

1. Switch off load.
2. If the load is higher than 70 % of the nominal load, the generator temperatures should be stabilised by switching off the load for at least 5 minutes.


At higher ambient temperatures (more than 25 °C) the generator should always run for at least 5 minutes without load, before it is switched off, regardless of the load.

3. Press „OFF“ button and switch off the generator.
4. Activate additional switches (Battery switch, fuel stop valve etc.).

**Never switch off the battery until the generator has stopped.**


5. If necessary, close sea cock.

**Notice!**

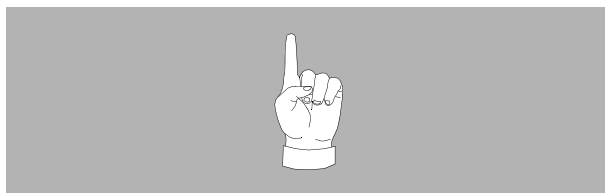

**If the generator switches itself off with the operation with load for temperature reasons, must be examined immediately, which the cause is. That can be an error at the cooling system or any error in the range of the outside cooling system.**

**:Notice!**

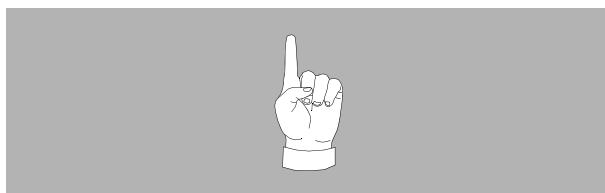


## 9.4 Installation of the panel

### 9.4.1 Connection of the remote control panel

As standard a 7 core connection-cable, 7m long, is included in the supply. Cores are numbered from 1 to 7. The control cables are securely connected to the genset. On the back of the control panel there are terminals numbered from 1 - 7. Connect the cores of the control-cable in respective order.

Please ensure that the remote control panel is installed in a protected, dry and easily accessible place.

Fig. 9.4.1-1: Remote control panel - back side

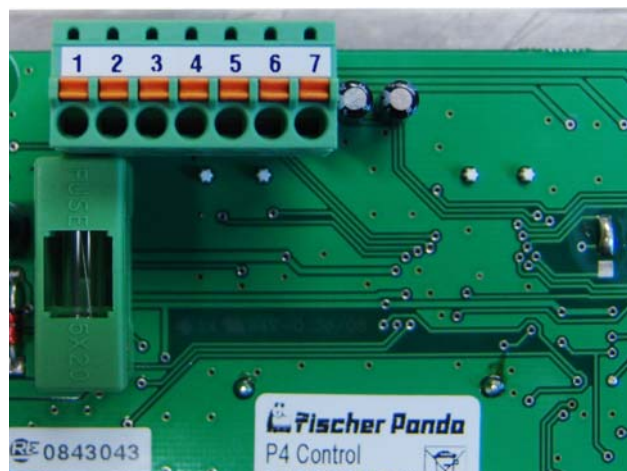

Term.-No	Terminator.-name	i / o	Description
1	Vbat	i	Power supply 12 V (+)
2	GND	i	Power supply 12 V (-)
3	T-Cyl	i	<p>Error „engine temp“. Temperature switch engine head in.</p> <p>Can be set up by jumper as NC or NO</p> <p>Gives 22 mA (12 V +) on the switch.</p> <p>This error is ignored while the „Start“ button is pressed and several seconds after it is released (time set up by jumpers)</p> <p>The yellow „Override“ LED is on while the error is ignored.</p> <p>Status is displayed by green/red LED.</p>

4	T-EXH	i	Error „exhaust temp.“. Temperature switch exhaust elbow in. Can be set up by jumper as NC or NO Gives 22 mA (12 V +) on the switch. Status is displayed by green/red LED.
5	Oil-Press	i	Error „oil pressure“. Oil pressure switch in. Can be set up by jumper as NC or NO Gives 22 mA (12 V +) on the switch. Status is displayed by green/red LED.
6	Start	o	Start relay out . Is active while the „Start“ button is pressed. The supply voltage is switched on the relay. (see remarks 1-3)
7	Fuel-Pump	o	Fuel pump relay out. Is active, if no error (temp. or oil press. at 3, 4, 5) is applied. Is active during the „Override“. The supply voltage is switched on the relay. (see remarks 1-3)


- 1) Max. current out continuous operation: 0,25 A short time 0,4 A
- 2) Max. current out is limited by the panel fuse (minus 0,1 A for the panel).
- 3) The out is protected by an freewheeling diode.

## 9.5 Jumper configuration

### 9.5.1 Jumper configuration for the input

#### 9.5.1.1 Jumper J101-J103

Fig. 9.5.1.1-1: Jumper J101 - J103

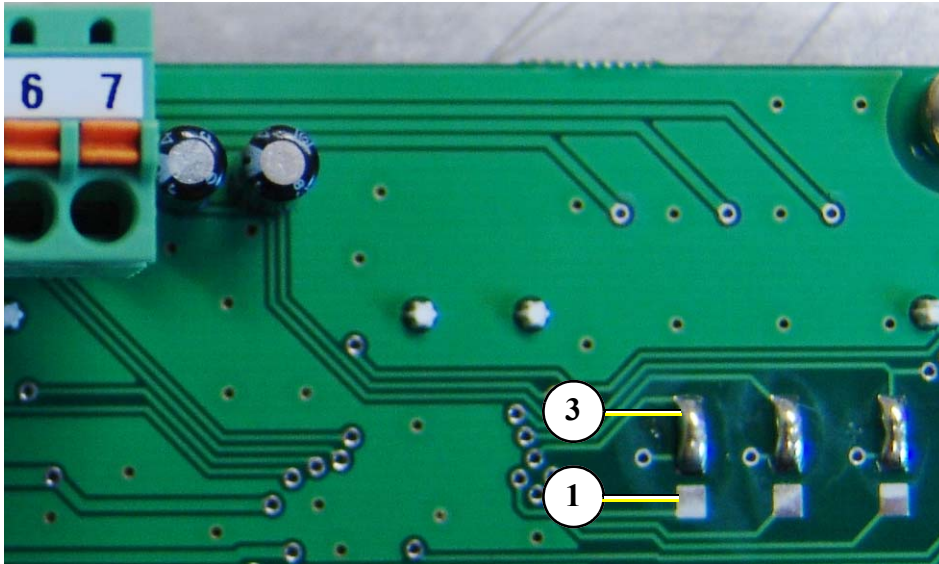

At the 3 pin jumpers J101-J103 the pin 3 is at the termination block side.

Jumper	Status	Desc.
J101	1-2	Temp. switch engine head is NC
	2-3	Temp. switch engine head is NO
J102	1-2	Temp switch exhaust elbow is NC
	2-3	Temp switch exhaust elbow is NO
J103	1-2	Oil pressure switch is NC
	2-3	Oil pressure switch is NO

### 9.5.2 Jumper for configuration of the „Override“ time

	J104	J105	J106	Test-Mode	Override time [s]
<b>1</b>	<b>open</b>	<b>open</b>	<b>open</b>	<b>no</b>	<b>40</b>
2	closed	open	open	no	20
3	open	closed	open	no	10
4	closed	closed	open	no	5
<b>5</b>	<b>open</b>	<b>open</b>	<b>closed</b>	<b>no</b>	<b>0,16</b>
6	closed	open	closed	no	0,08
7	open	closed	closed	no	0,04
8	closed	closed	closed	no	0,02
<b>9</b>	<b>open</b>	<b>open</b>	<b>--</b>	<b>yes</b>	<b>2,5</b>
10	closed	open	--	yes	1,25
11	open	closed	--	yes	0,63
12	closed	closed	--	yes	0,31

1 is standard for „override“ activated

2 is standard for „Override“ deactivated“

9 is standard for „Test mode“

The Test mode is active as long as the button „on/off“ is pressed by turning on the panel.

## 9.6 Maximum ratings

Operation outside of the maximum ratings can causes damage at the panel and the generator

In not indicated otherwise the ambient temperature is assumed. All voltage data are against GND (X1.2).

Operation voltage  $U_b$  is the voltage at terminator X1.1

Parameter	Desc.	min.	max.	
Operation Voltage	without time limit. full function	10,5	15	V
	without time limit, full function (except H-Meter, LED light lower)	6		V
	maximal 60 min, $T_a = 65\text{ °C}$ , full function		17	V
	maximal 60 s, $T_a = 65\text{ °C}$ , full function		18	V
	maximal 100 ms, $T_a = 65\text{ °C}$ , full function		22	V
	maximal 100 ms, full function, except H-Meter, some LED out of ordered	4,5		V
ambient temperature for operation		0	+85	°C
capacity of the outputs	without time limit		0,25	A
	without time limit (1 output only)		0,4	A
External voltage on the outputs	Outputs with freewheeling diode for short out negative external voltage	-0,3	$U_b$	V
External Voltage on the inputs	without time limit. Voltage which are out of the rating will be short out by the Z- diode.	-0,3	$U_b$	V
Internal F1	Micro fuse 5 x 20 mm glass fuse slow to blow		0,5	A





